


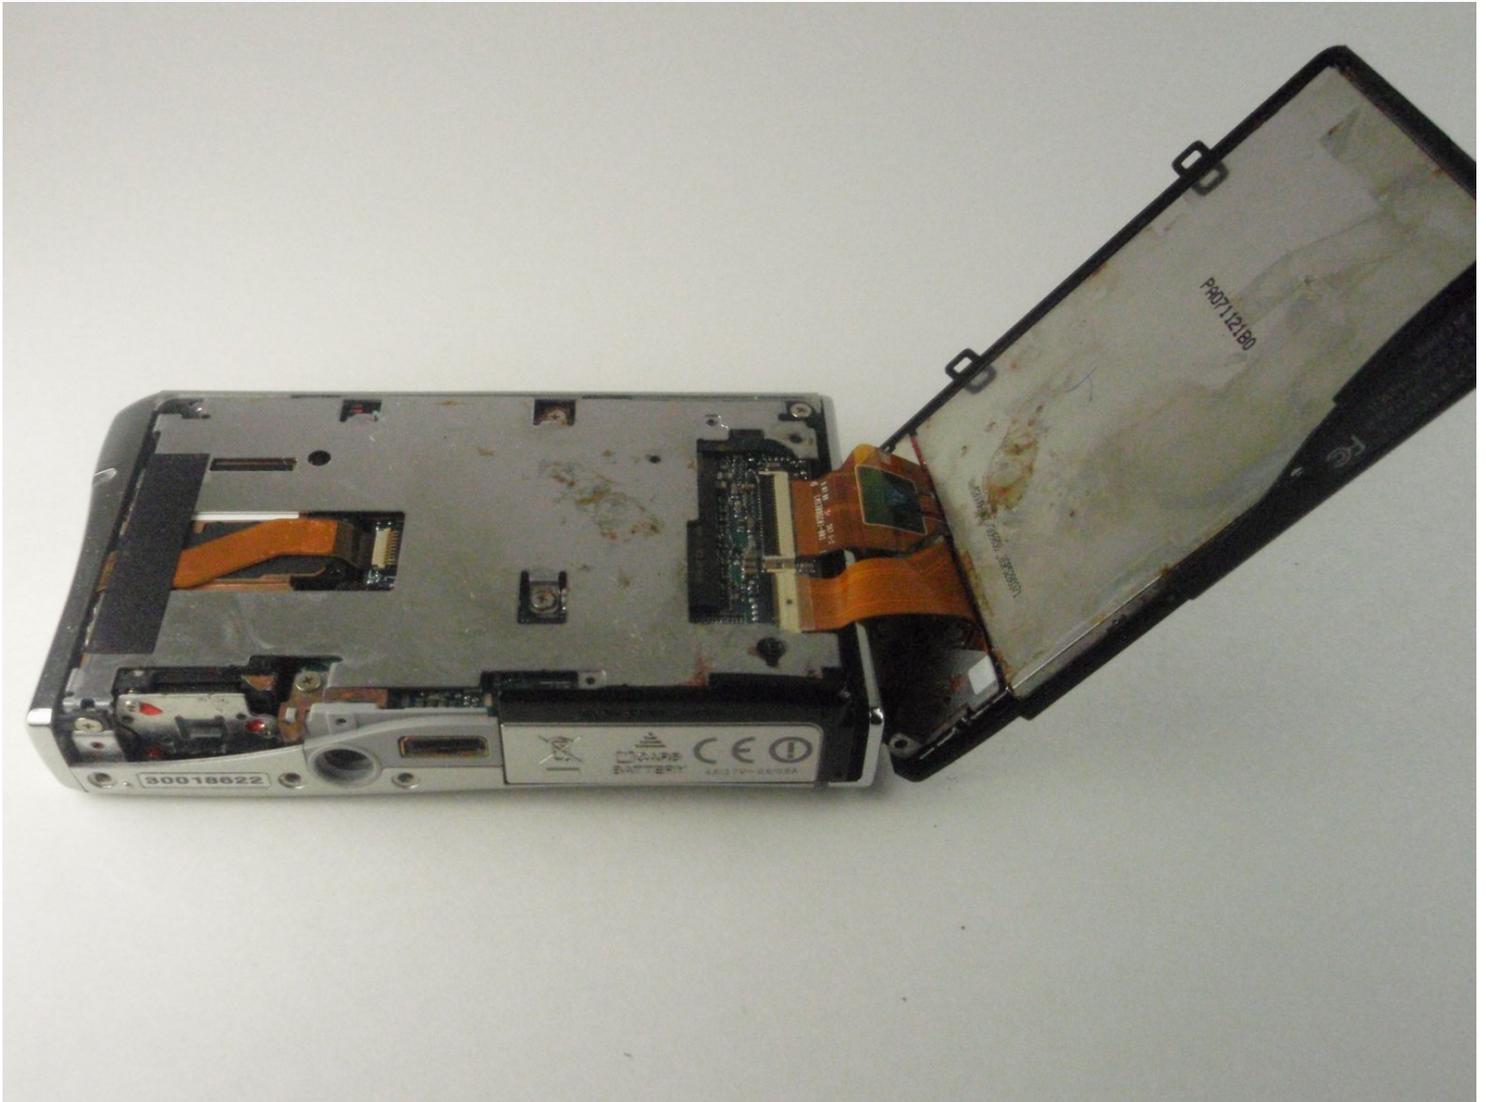

# Nikon Coolpix S51c Back Cover Replacement

(1) You will need a #00 phillip's head...

Written By: Ryan



# INTRODUCTION

1. You will need a #00 phillip's head screwdriver and a black spudger (or equivalent tool)

## TOOLS:

Phillips #00 Screwdriver (1)

## Step 1 — Back Cover



- Remove all five screws from the bottom of the camera using a Phillips #00 screwdriver.

## Step 2




- Open the battery door by sliding it in the direction of the arrow to reveal a hidden screw on the opposite side of the orange lever.
- Remove this screw using a Phillips #00 screwdriver.

## Step 3




- Rotate the camera to find the side panel with the lanyard attachment.
- Detach the side panel by the lifting bottom corner slightly with the spudger.

## Step 4

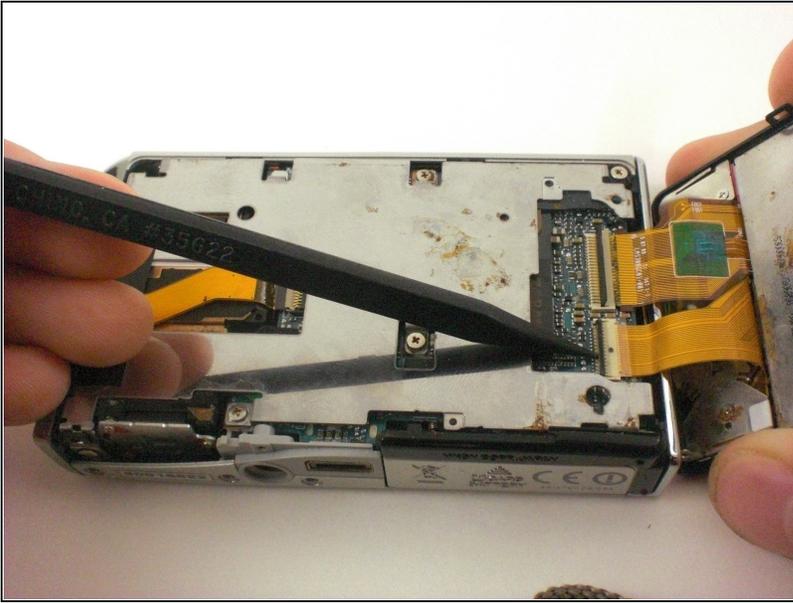

- Lift the back cover, being careful not to rip the orange cables between the camera and the back cover.

## Step 5

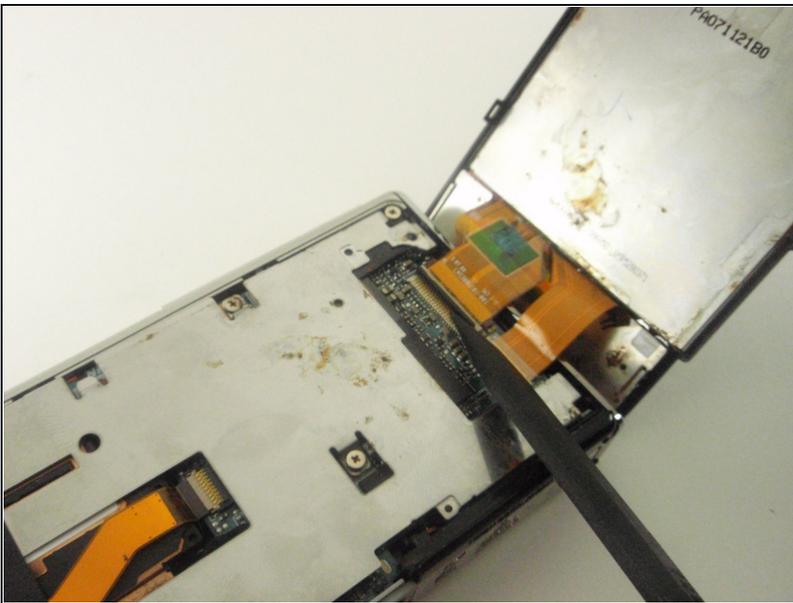

- With the back cover lifted, lift the black flap that connects the ribbon to the motherboard with the spudger and carefully remove the back cover.

---

To reassemble your device, follow these instructions in reverse order.