



Lenovo Thinkpad X220 Individual Keys Replacement

Written By: Mariska Gramlow



TOOLS:

[Metal Spudger](#) (1)

PARTS:

[Lenovo Keyboard - 04X0101](#) (1)

[04Y0978 - Lenovo Laptop Keyboard - Genuine](#) (1)

 
[01AX344 - Lenovo Laptop Keyboard - Genuine](#) (1)

[01AX322 - Lenovo Laptop Keyboard - Genuine](#) (1)

[04Y0856 - Lenovo Laptop Keyboard - Genuine](#) (1)


[01AX340 - Lenovo Laptop Keyboard - Genuine](#) (1)

Step 1 — Individual Keys

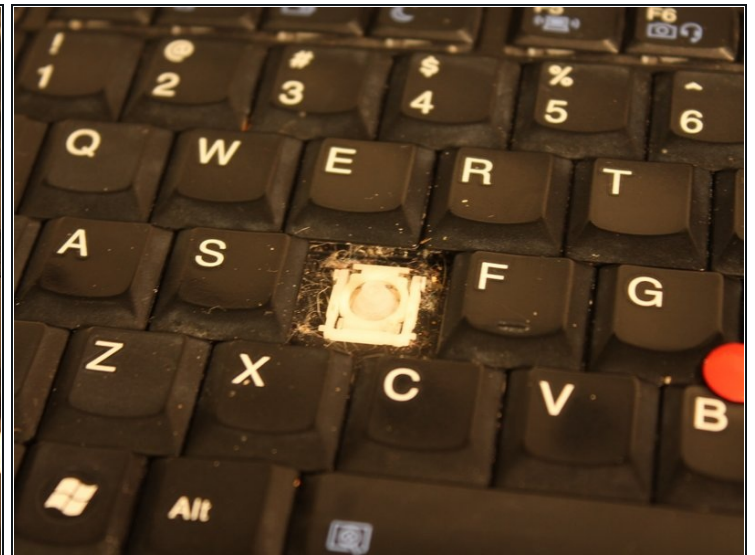

- Open laptop to expose the keyboard and screen.
- Find specific key that needs replacing.
- Grab the Metal Spudger.
- Using slight force, lift one side of the key to pop it off from its base to replace.
- The key should have been easily removable.

 Step 2

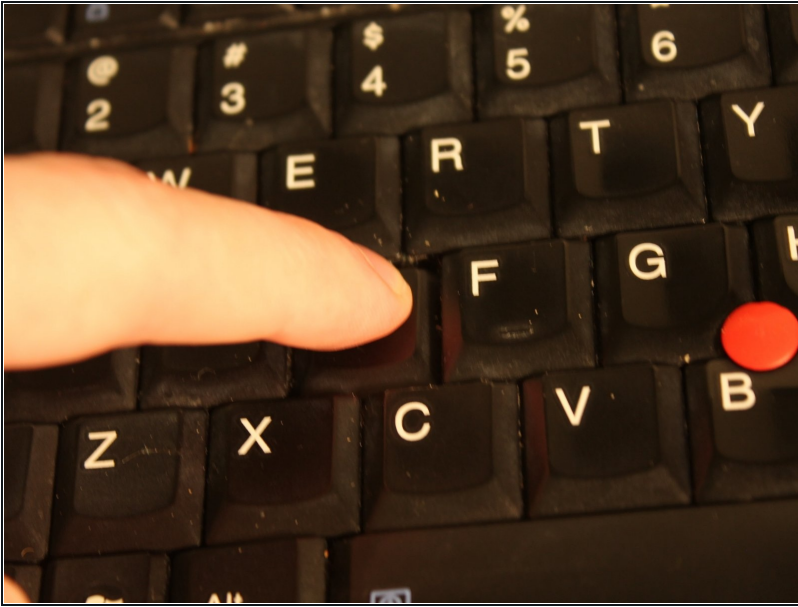

- With the new key replacement, align key with the keyboard and firmly push into place.
- The key should fit perfectly where the old one was removed.

Step 3



- Keyboard key is in place and ready to use.

To reassemble your device, follow these instructions in reverse order.