



# Canon PowerShot SD700 Outside Case Replacement

This guide will help you remove and replace the...

Written By: Emilio Rossi



## INTRODUCTION

This guide will help you remove and replace the outside case of the Canon PowerShot SD700. Follow the step-by-step instructions to remove the outside case of your Canon PowerShot SD700. You will need Phillips #00 screwdriver to complete the steps throughout the guide.

### TOOLS:

Phillips #00 Screwdriver (1)

## Step 1 — Outside Case



- Turn off the camera by pressing the power button above the LCD screen.

## Step 2



- Remove the two, small screws on the bottom of the camera using a Phillip's #00 screwdriver.

## Step 3



- Use a Phillips #00 screwdriver to remove the two, small screws on the right side of the camera.

## Step 4




- Use a Phillips #00 screwdriver to remove the screw on the left of the camera under the A/V out Digital label.

## Step 5



- Use a Phillips #00 screwdriver, remove the screw on the bottom of the camera near the battery and memory card slots.
- ⓘ This screw will be longer than the rest of the screws.

## Step 6

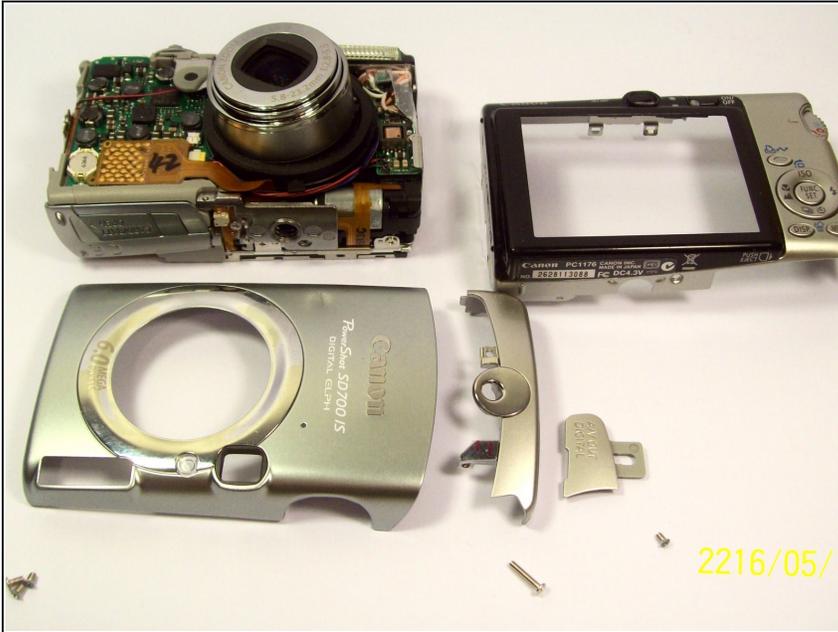

- Remove the front, back, and side casings from the camera and set to the side.

To reassemble your device, follow steps 1-6 instructions in reverse order.