



# Removing Canon PowerShot A550 Front and Back Covers

How to remove and replace the front and back covers of the Canon PowerShot A550.

Written By: Shaelyn Thomas



---

## INTRODUCTION

This guide will give a step by step procedure of how to remove and replace the front and back covers of the Canon PowerShot A550.



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [Tweezers](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Front and Back Covers



- Unscrew a total of 6 4.45 mm phillips head screws using a #00 phillips head screwdriver.
- There are 2 screws on the left side (when looking at the front of the camera).
- There are 3 screws on the bottom
- There is 1 screw on the right side


## Step 2

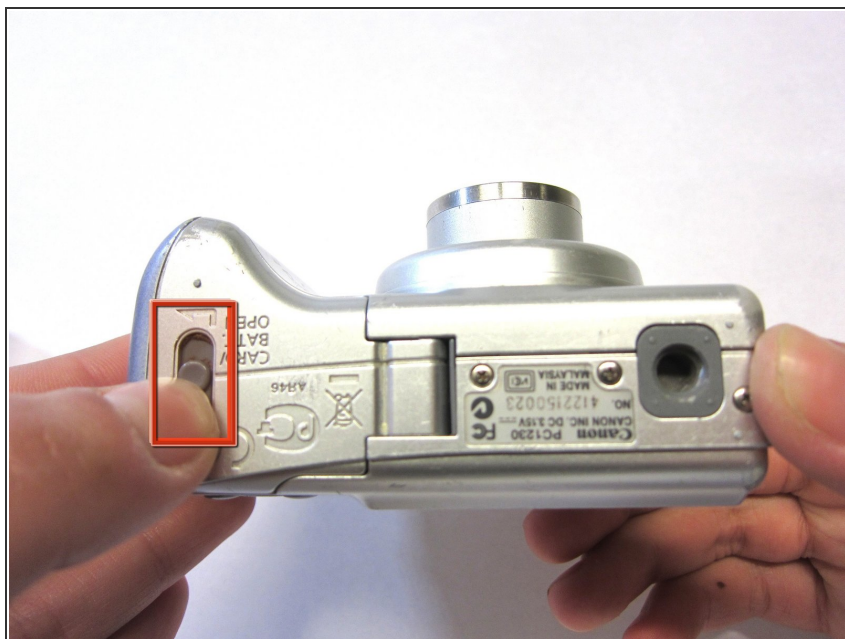

- Turn to the bottom of the camera.
- Open the memory card cover by sliding the "CARD/BATT." button up, and then pulling the cover to the left.





### Step 3

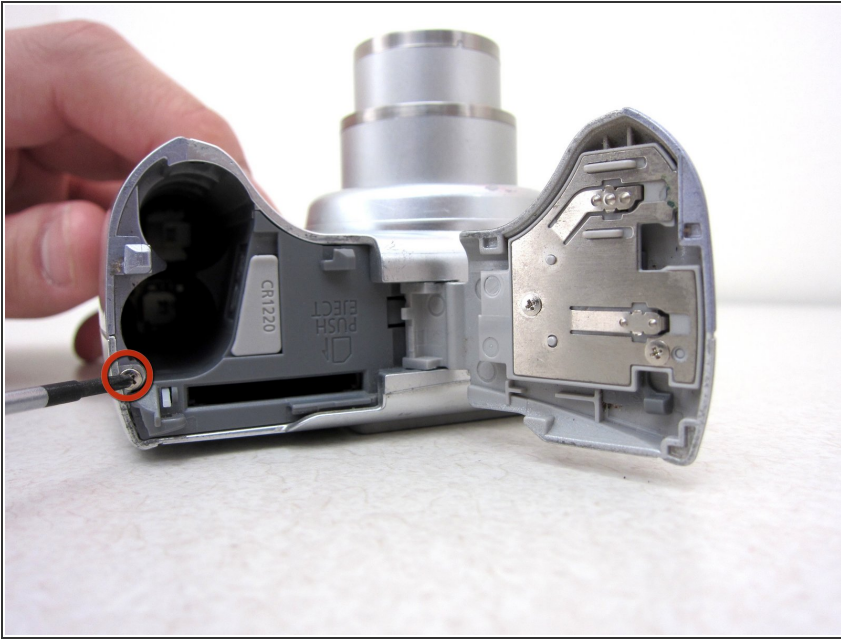

- This is what the SD card/battery compartment looks like when opened.
- Remove one 4.45mm phillips head screw from the SD card/battery compartment using a #00 phillips head screwdriver.

### Step 4

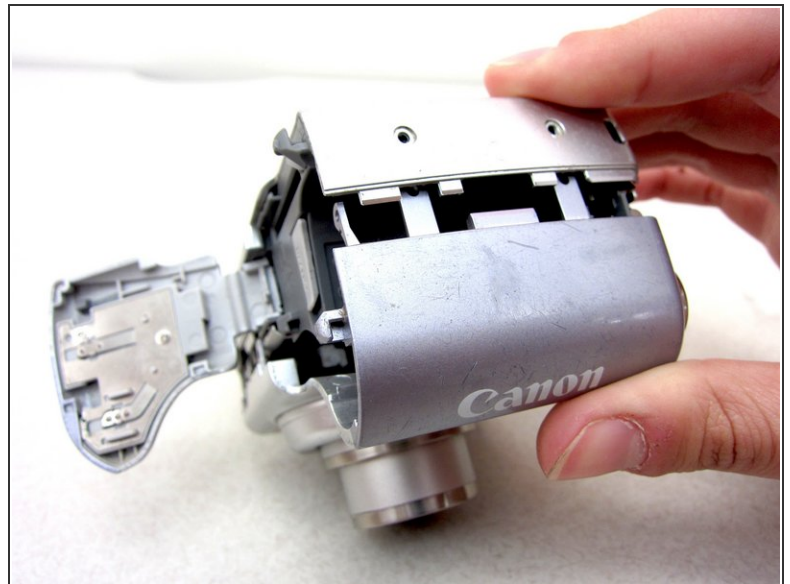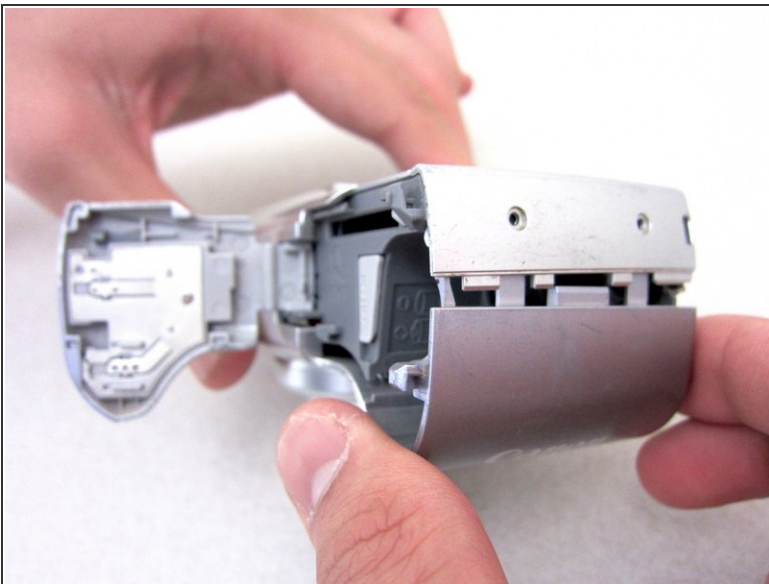




- Gently remove the front cover away from the camera body.
- ☞ Tip: Start by loosening the teeth on the left side of the camera next to the battery compartment.

## Step 5



- The camera should look like this once the front cover is removed.

## Step 6

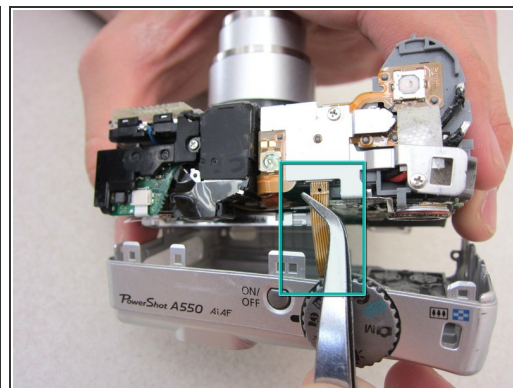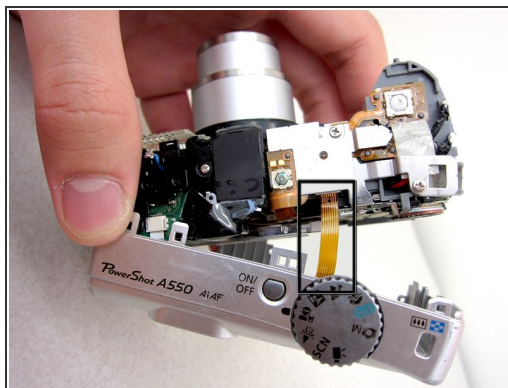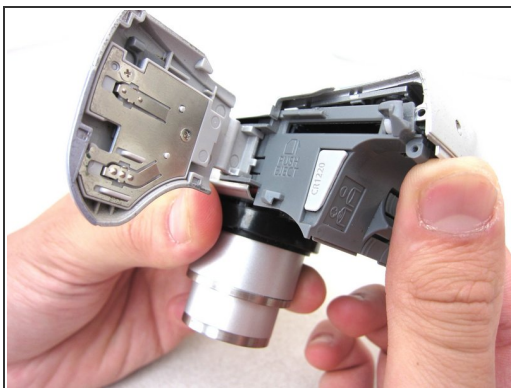


- Start from the battery compartment and remove the back cover.

⚠ Caution: Do not tug on the back cover after it is removed. This could tear the ribbon attaching the back cover to the camera body.

- Remove the connecting ribbon from the body of the camera using a pair of tweezers.

## Step 7

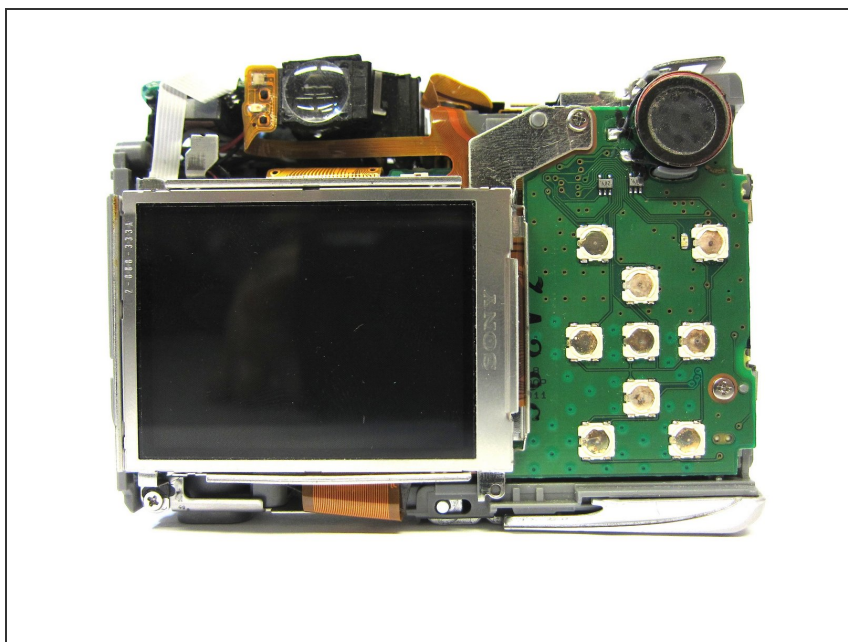

- Once the ribbon connecting the back cover is removed, the back of the camera body should look like this.

To reassemble your device, follow these instructions in reverse order.