



Omaker M4 Back Case Replacement

This guide will show how to remove the back cover from the Omaker M4. This guide also shows how to access the components inside the device.

Written By: Andrew Entwistle



INTRODUCTION

Removing the back case from the speaker is relatively easy. Once you unscrew the four back screws, there is a wire that is attached to the back case. Before pulling the back case completely off, disconnect the wire from the back case by carefully pulling it out with tweezers. This will allow the back case to be completely removed from the device.

TOOLS:

- [Magnetic Pickup Tool](#) (1)
 - [Tweezers](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Back Case



- Flip the device over so the front of the speaker is facing down. Make sure to place the speaker on a flat surface

Step 2



- Use a T6 Torx screwdriver to remove the four 9mm screws from the back of the device.

Step 3




- Use a magnet to remove the screws after unscrewing them and place them aside.

Step 4



- Carefully remove the back cover without breaking the battery wire.

Step 5

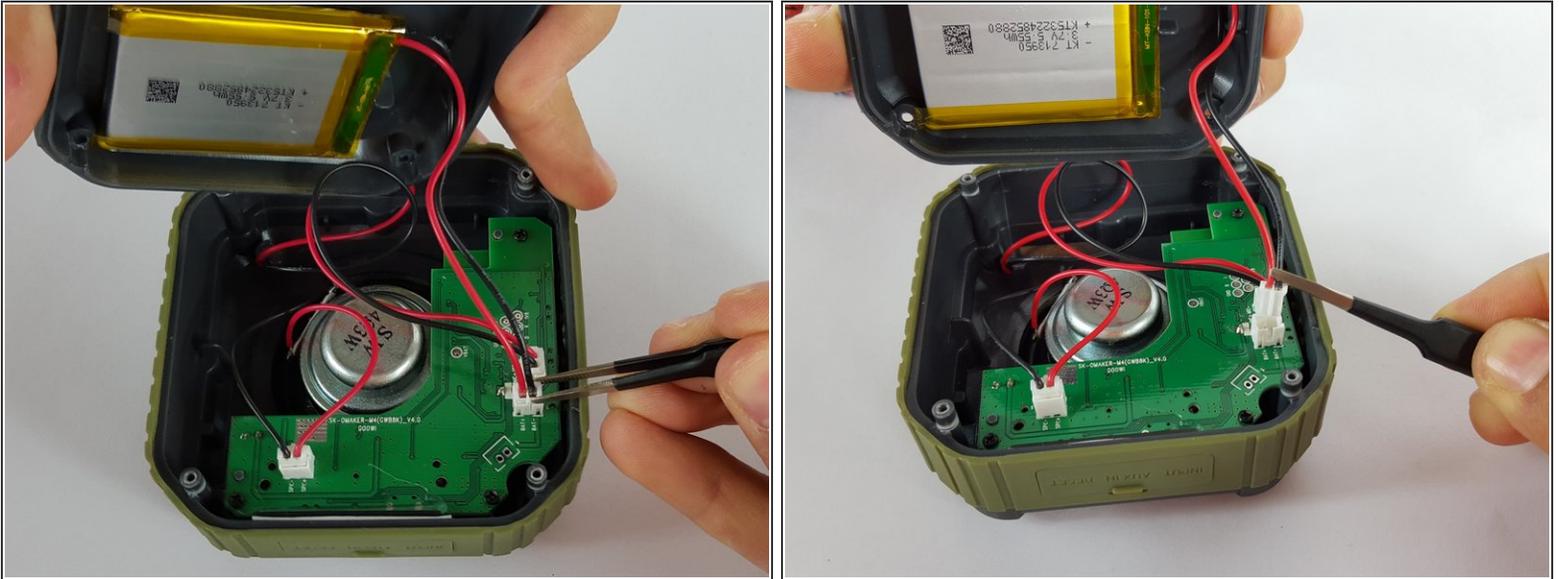

- Remove the end of the battery connection from the motherboard by holding the end of the wire and carefully pulling it out of the socket using tweezers.

i The battery is still attached to the back cover.

To reassemble your device, follow these instructions in reverse order.