


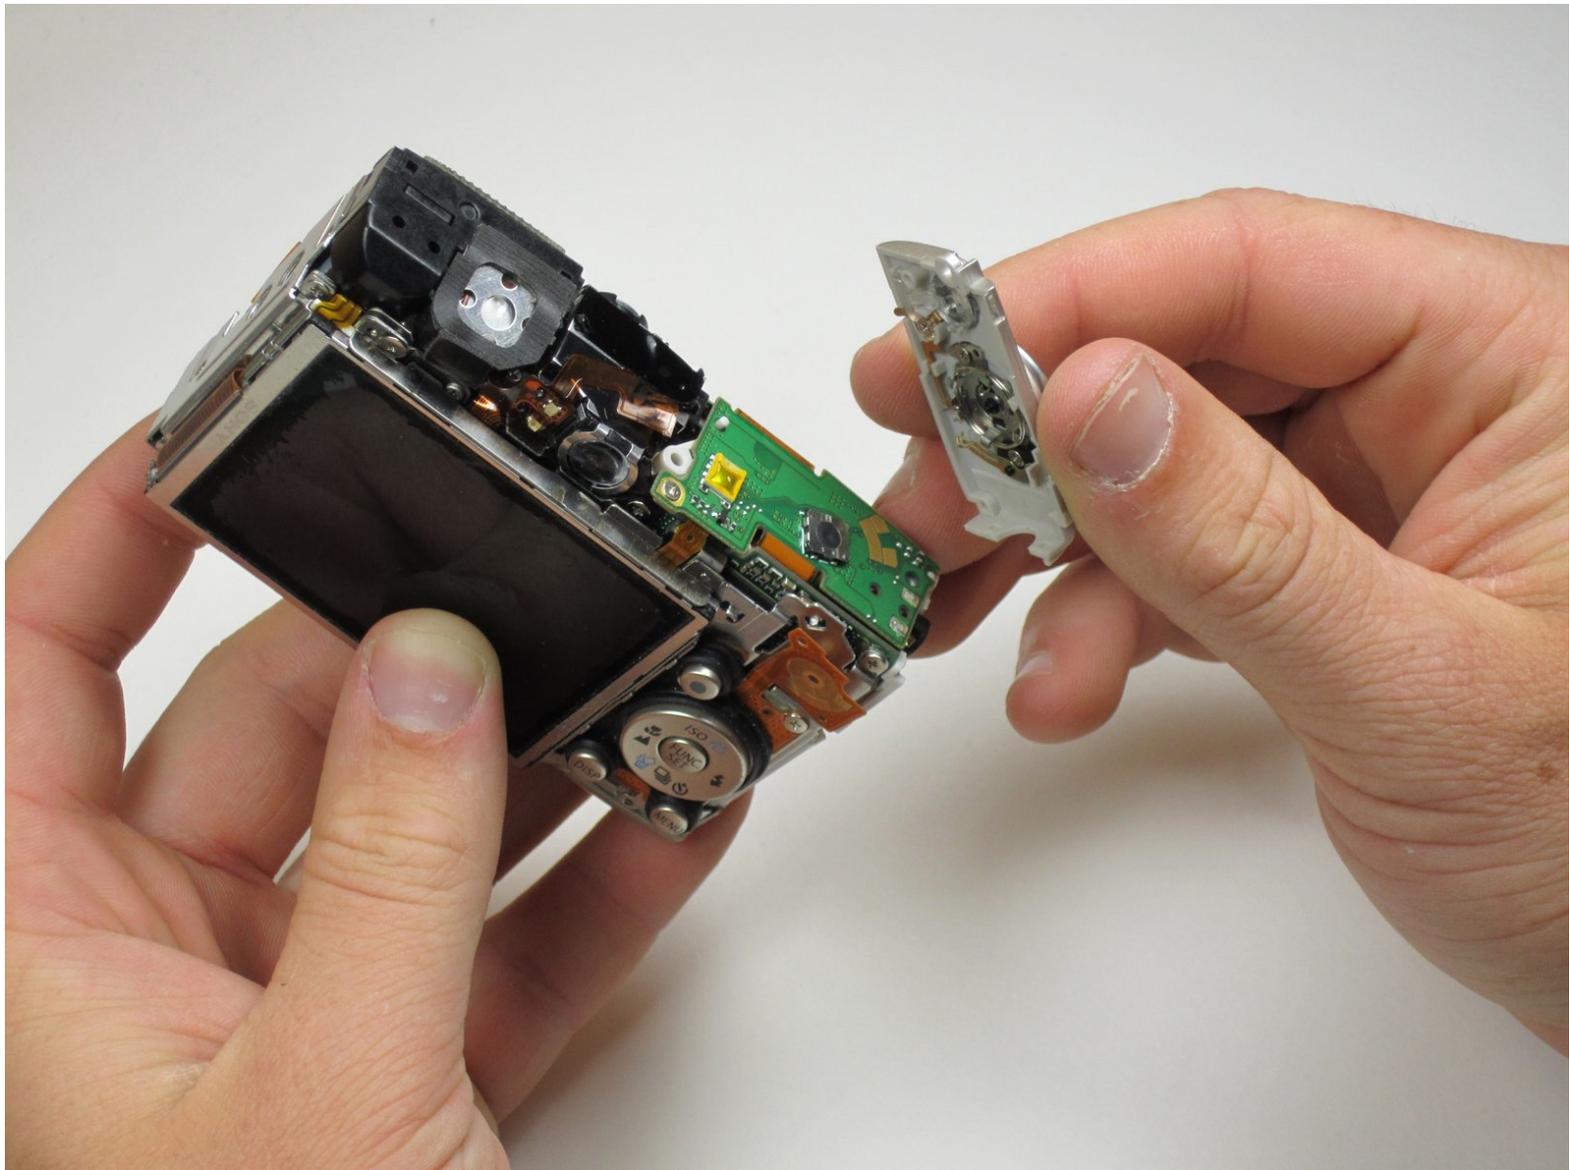

Canon Powershot SD550 Shutter Button Replacement

This guide will show you how to disassemble the Canon SD550 and install a new shutter button.

Written By: Ken Michael



INTRODUCTION

The shutter button is one of the most commonly used buttons on a camera. Therefore, it is also the most likely to break.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Outer Case



- Remove the battery and SD card from the camera.

Step 2



- Remove the three 3.8 mm screws from the underside of the camera.
- ⓘ Each of the screws is slightly different, so it is important that you note the original location of each screw.

Step 3




- Remove the 3.2 mm screw from the right side of the camera.
- Remove the 2.2 mm screw from the right side of the camera.
- ⓘ One of these screws is hidden under the USB port cover.
- Lift the side panel off.
- Remove the 1.8 mm screw from underneath the side panel.

Step 4



- Remove the two 2.2 mm screws from the left side of the camera.
- Lift the plate from the camera.

Step 5

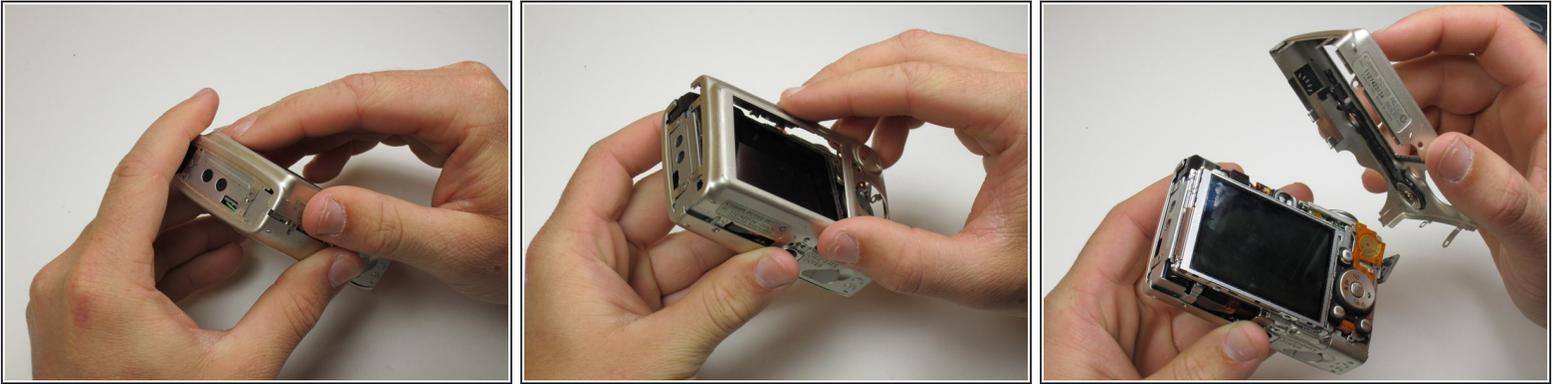



- Gently lift the rear of the case to remove it from the camera.

Step 6



- Remove the front of the camera body.
- ⓘ Be sure to keep track of the rubber ring.

Step 7 — Shutter Button

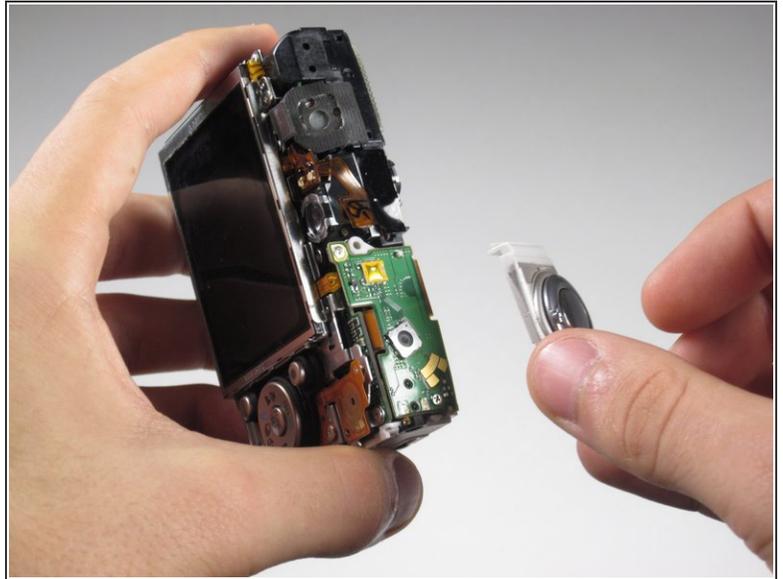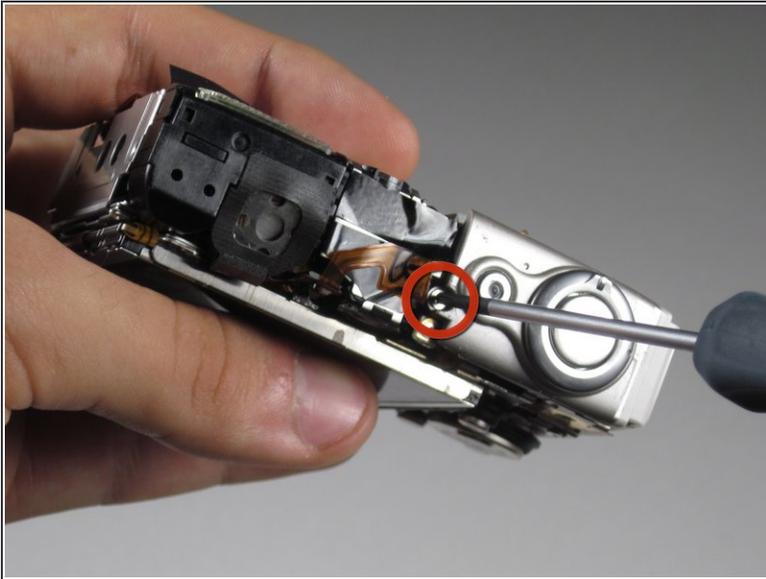

- Next, unscrew the .115 inch screw fastening the shutter button to the camera.
- Now lift the button away from the camera, exposing the button board.
- You have successfully removed the shutter button.

To reassemble your device, follow these instructions in reverse order.