

Samsung Epix LCD Display Replacement

This guide shows you how to access the LCD...

Written By: Mark Wyse



INTRODUCTION

This guide shows you how to access the LCD display inside your phone.

TOOLS:

Phillips #00 Screwdriver (1) iFixit Opening Tool (1) Spudger (1)

Step 1 — Battery




- Press button on back of phone below camera.
- While button is depressed, remove the back panel of the phone by it sliding off (not shown in picture).



 Grasp the bottom corners of the battery with two fingers and gently lift.

Step 3 — LCD Display

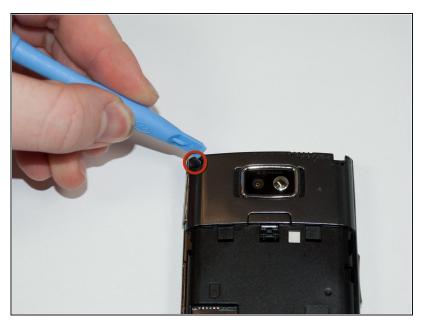

 Remove the rubber screw cover in the top left corner by prying upwards with an opening tool.




- Use a Phillips #00 screwdriver to remove the six screws on the back of the phone.
- i The upper right screw is 4.5 mm and the others are 6.5 mm.

Step 5





- Slide the opening tool along the seam on the side of the phone and turn it slightly to unhook the eight clips.
- *i* There are three clips on each side and two at the bottom of the phone.

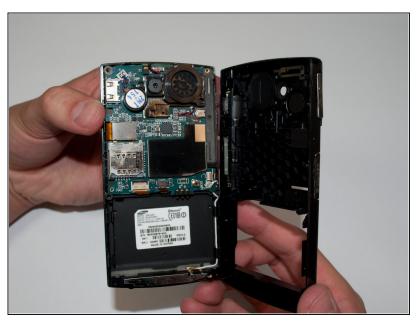

- Once all eight of the clips have been unhooked, lift the back panel off of the phone.
- ⚠ Be careful not to remove the front panel. It will still be connected to the phone chassis by a ribbon cable on the motherboard.

Step 7



- Using an opening tool, undo the <u>ZIF connector</u> halfway up the right side.
- ⚠ Carefully remove ribbon cable.




 Remove the front faceplate by lifting it off of the phone chassis.

Step 9



• Using the opening tool, unlatch the LCD ribbon cable.

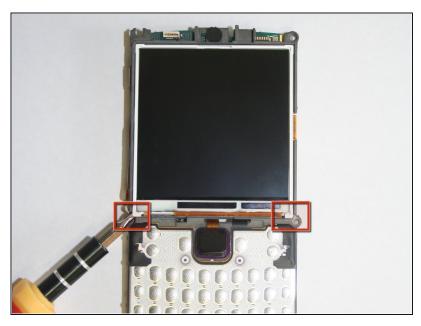

- Using an opening tool or spudger, pry under the lower left and right corners of the LCD screen.
- i The LCD is held in place to the chassis with adhesive strips.
- ⚠ **Do not pry excessively hard**. You may damage the circuitry on the back of the LCD.

Step 11



• Lift the LCD display out from phone chassis.

To reassemble your device, follow these instructions in reverse order.