



Nikon Coolpix L340 Buttons Replacement

How to replace the buttons on the back of the camera, next to the LCD screen.

Written By: Robert Estrella



INTRODUCTION

This guide is meant to help the user replace the buttons on the back of the camera after they remove the back panel. This could be to fix a jammed button or simply replace the part as you wish. The only required tool for this process would be a 5mm Phillips Head number #000 screwdriver.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Buttons



- Remove the 5 mm Phillips #000 screw located on the upper left side of the camera
- Remove the 5 mm Phillips #000 screw located on the lower left side of the camera

Step 2



- Remove the 5 mm Phillips #000 screw from the upper right side of the camera.
- Remove the 5 mm Phillips #000 screw from the lower right side of the camera.

Step 3




- Remove the 5 mm Phillips #000 screw from the bottom left of the camera.
- Remove the 5 mm Phillips #000 screw from the left-center of the bottom of the camera.
- Remove the 5 mm Phillips #000 screw from the center of the bottom of the camera.

Step 4



- Remove back cover of the camera.

Step 5

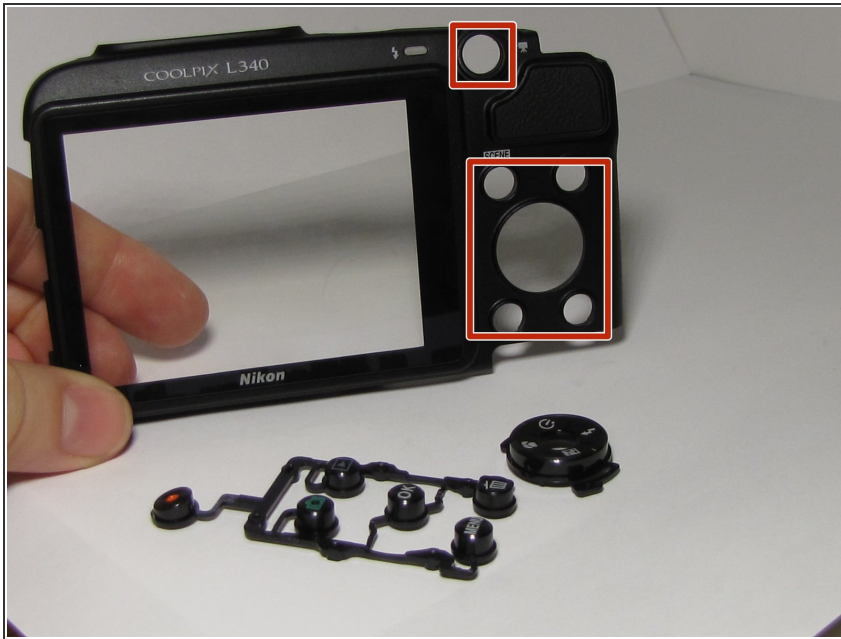

- Push buttons out of the back of the cover.

To reassemble your device, follow these instructions in reverse order.