



# Amazon Fire HDX 8.9" 4th Gen. Screen Replacement

This is a guide on how to replace the screen and digitizer for the Amazon Fire HDX 8.9" 4th Generation.

Written By: Sidney Stefani



# INTRODUCTION

If your screen has been damaged and it's time to replace it this guide will show you how simple and easy it can be to have you device up and running again. Good luck!



## TOOLS:

- [Spudger](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



## PARTS:

- [Kindle Fire HDX 8.9" \(4th Gen Saturn\) Screen](#) (1)

## Step 1 — Screen



- Ensure that the device is turned off.
- Holding the device firmly, wedge a plastic opening tool between the speaker cover and the device. Then pry up to separate it from the device.
- Then begin to firmly pry up the plastic cover with the plastic opening tool.
- ⓘ The backing is connected with adhesive so force may be necessary.
- ⚠ Be careful to not damage the plastic in any way.
- Once you can fit your finger under the plastic cover, begin to slide your finger down the cover while simultaneously prying up.

## Step 2




- Once you reach the end of the plastic cover you should be able to completely remove it from the device.

## Step 3



- Use a T5 screwdriver to remove the four 3.5 mm T5 screws at the top of the device, where the black plastic trim was located.

## Step 4

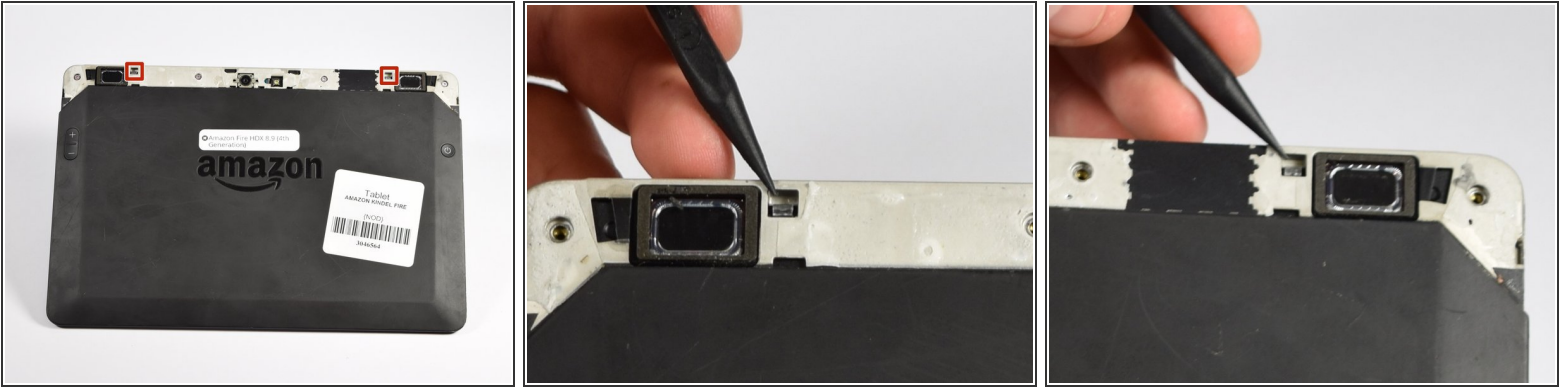

- Release the two clear plastic clips at the top of the device near the speaker using the spudger.
  - Simply push down the clip with the tip of the spudger.

⚠ Push lightly to ensure that the clips aren't damaged.

## Step 5





- Use a plastic opening tool to wedge between the screen and the device, while simultaneously holding the clip open from step 4.

⚠ Pry the screen very gently to avoid cracking the glass


- Start to remove the screen from where the black plastic trim was removed and work the tool around the sides of the device. You will hear small pops from the clips on the sides being released.
- The Amazon Fire can now be opened with the two flex cables at the base still connected






## Step 6

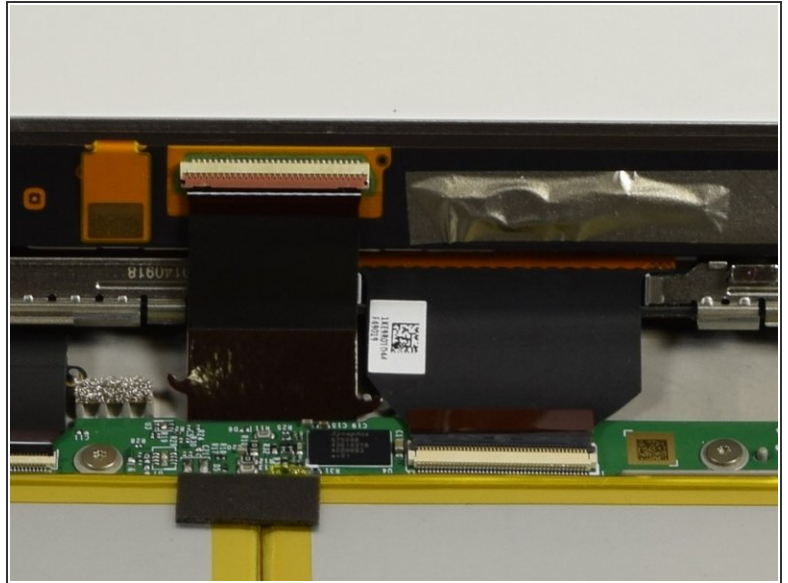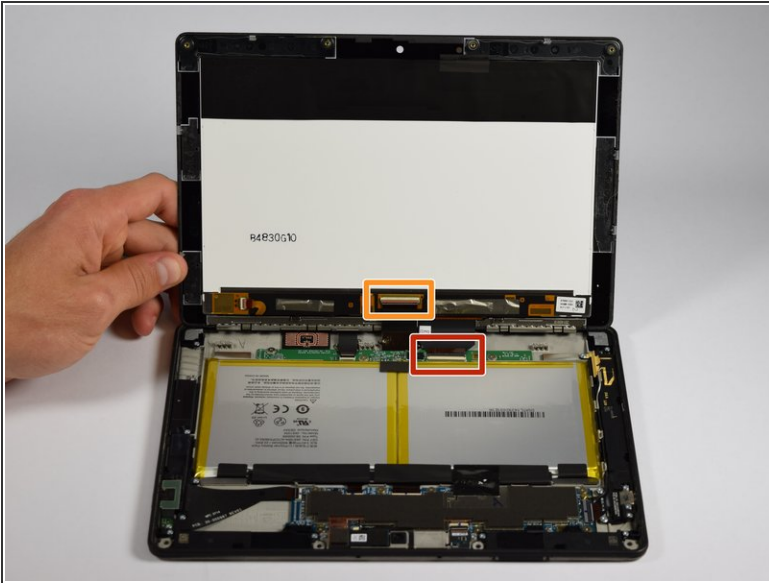

- Now we have to remove the two flex cables attached to both the screen assembly and body of the device.


 The cable addressed in step 8 is highlighted in orange.

## Step 7

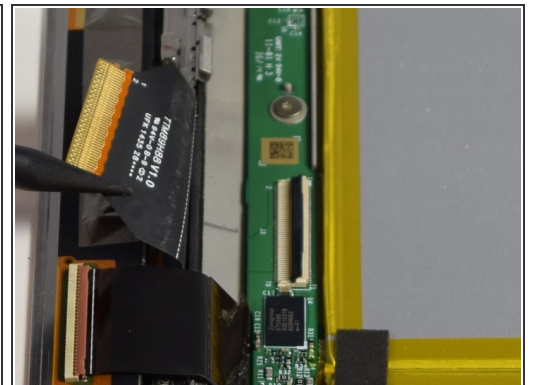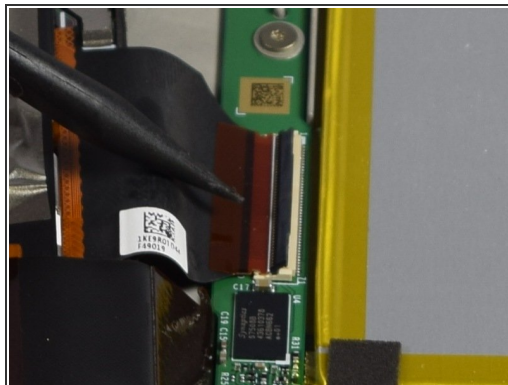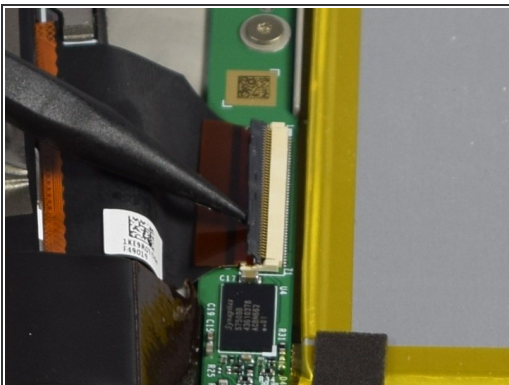


- First turn the device 90 degrees counterclockwise.
- Wedge a spudger or plastic opening tool under the black flap of the larger connector and lift up.
- Pull the belt out of the connector and lift it up.

## Step 8

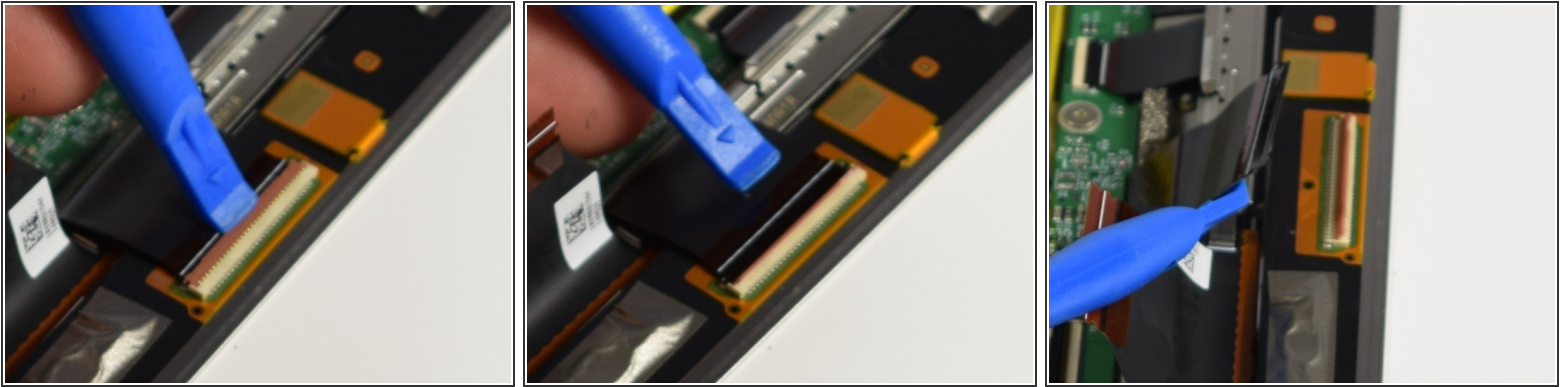

- Turn the device 180 degrees.
- Repeat step 7 for the smaller flex cable connection.

## Step 9

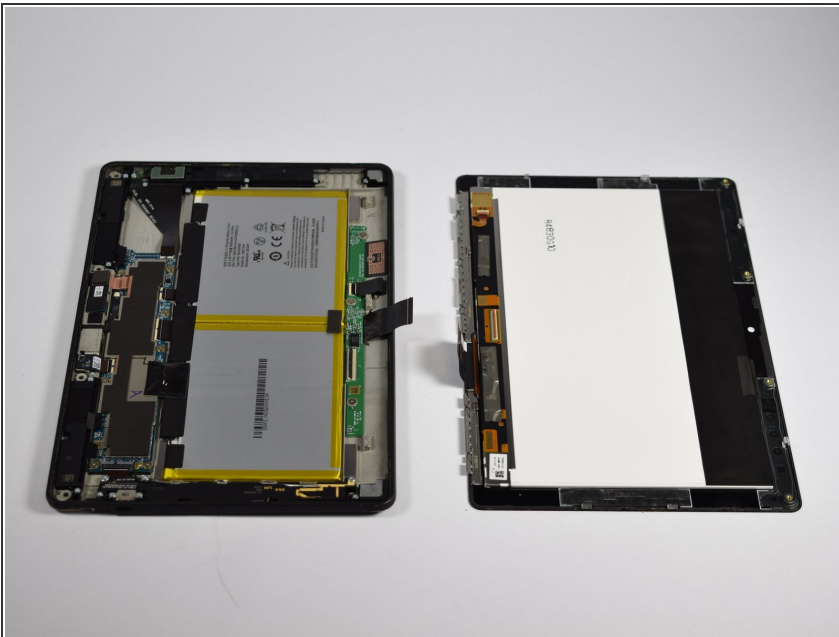

- Your screen assembly has now been removed and can be replaced.

To reassemble your device, follow these instructions in reverse order.