



Samsung Galaxy Prevail Touch Screen Replacement

Following this guide will allow you to replace the LCD screen which will resolve an unresponsive issue or cracked part.

Written By: Ricardo Zuloaga



INTRODUCTION

By following this guide you should be able to fix issues with an unresponsive or cracked screen.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Touch Screen




- Using your hands, carefully remove the back panel by popping the open slit, near the headphone jack, outwards.

Step 2



- Using your fingernail or nylon spudger, remove the battery by lifting upward in the recess of the bottom right corner.

Step 3

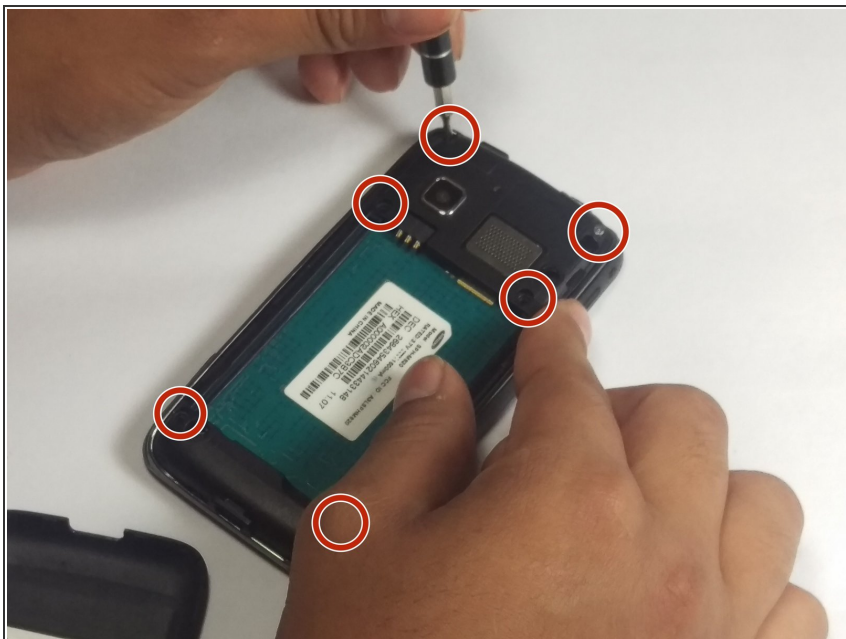

- Remove the (6) 4mm screws using a Phillips #00 screwdriver.

Step 4



- Using the black spudger, carefully unhinge and pry the secondary rear panel , which houses the camera lens and speaker.

⚠ The metal trim of the headphone jack may come loose during this process.

Step 5



- Using the spudger, gently pry upward on the motherboard by the right side.

⚠ Motherboard is connected to shield plate with ribbon cable.


Step 6



- Using a spudger, carefully un hinge the gray shield plate by lifting upwards on the right side.

⚠ The shield plate will not be fully removed, it is attached to the front panel with a ribbon cable.

Step 7

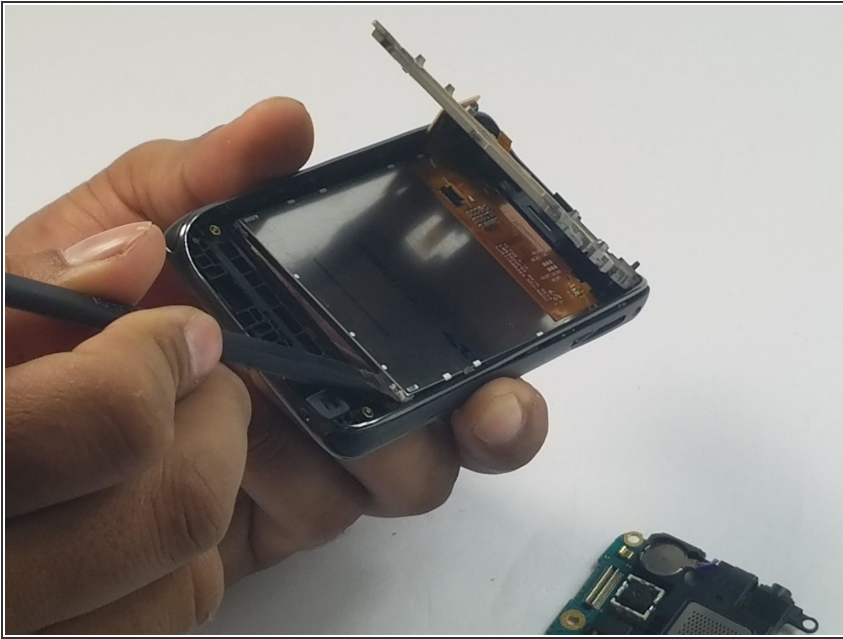

- Using the spudger lift up the LCD screen and replace with the new screen.

To reassemble your device, follow these instructions in reverse order.