


# Disassembling Numark TT1600 Circuit board

This guide will show how to remove the circuit boards.

Written By: Sukhjinder

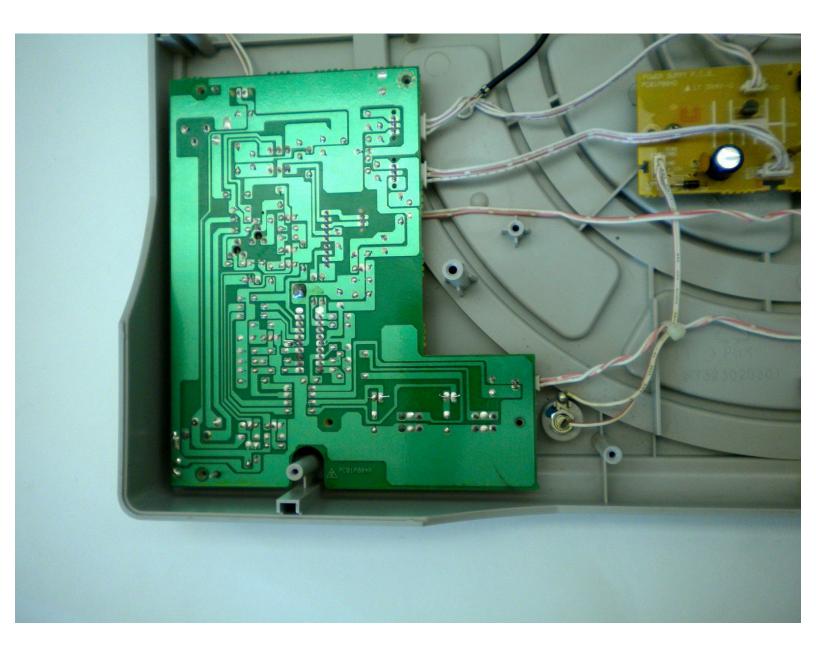



Phillips #00 Screwdriver (1)

### Step 1 — Circuit board





Flip over the turntable and remove the nine screws on the outer edges.

### Step 2



 Remove the back cover by pulling it apart.

### Step 3




 Locate the largest circuit board inside the device.

# Step 4




 Locate the wires that are plugged into the side of the circuit board.

# Step 5

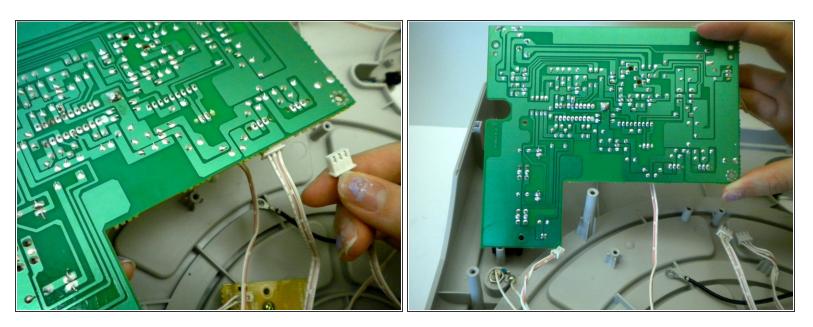

Gently pull out the wires plugged into the circuit board.

#### Step 6

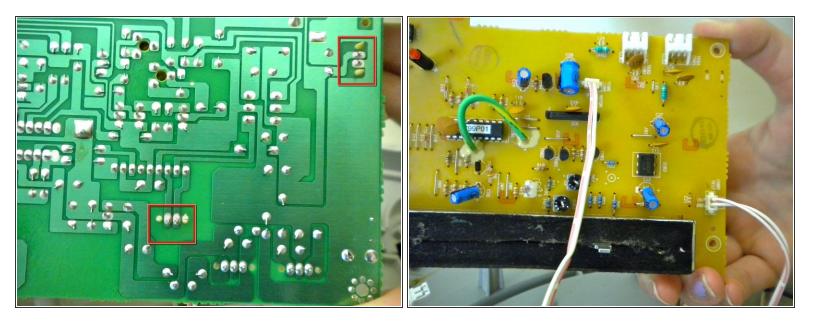

- Once the wires are unplugged you will notice two more wires plugged into the bottom of the circuit board.
- Note that these wires are soldered onto the circuit, indicated by the red markers.
- To completely remove the circuit board these wires must be removed.

To reassemble your device, follow these instructions in reverse order.