



Dell Inspiron 9300 RAM Replacement

This is a guide for replacing the Random Access Memory (RAM) for the Dell Inspiron 9300

Written By: Randy McMillan



INTRODUCTION


Upgrade or replace the ram in your Dell Inspiron 9300



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Heavy-Duty Spudger](#) (1)
 - [Anti-Static Wrist Strap](#) (1)
-

Step 1 — RAM

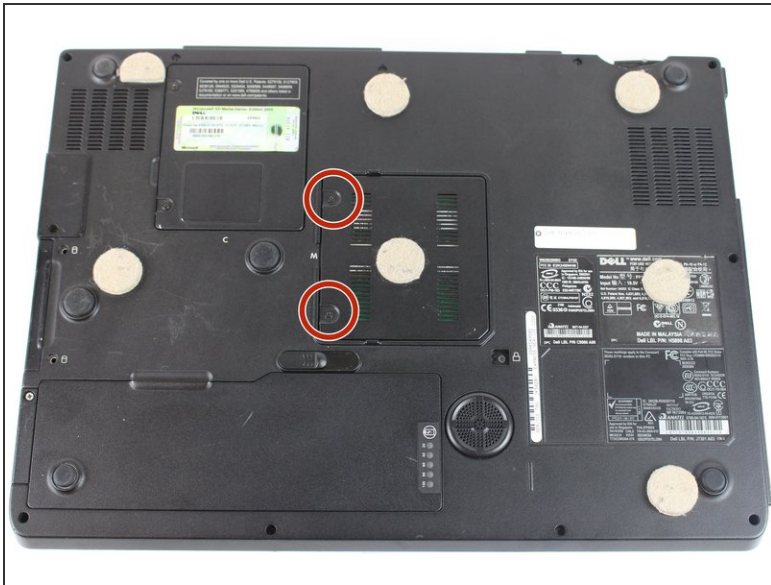

- Flip the computer over and place it on a clean level surface.
 - Loosen the screws using a #0 Phillips screw driver.
- ⚠ It is strongly recommended that the [Anti-Static Wrist Strap](#) is used to avoid damage to internal components.
- ⓘ The screws are secured by retainer clips in the plastic panel and are not fully removable.

Step 2

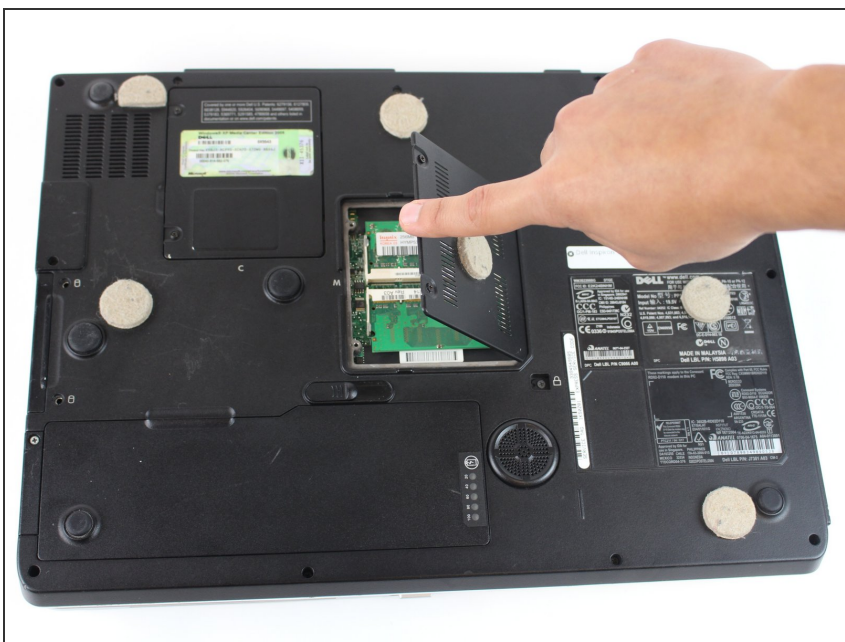

- Remove the plastic panel.

Step 3



- Carefully pry away the retaining clips on either side of the ram modules using a [spudger](#) tool, until the card pops away from the motherboard.

☑ Repeat for the second ram module if necessary.

Step 4



- Carefully pull the ram modules out of it's slot, away from the motherboard.

To reassemble your device, follow these instructions in reverse order.