



Keurig K70 Limit Switch Replacement

Use this guide to replace the Limit Switch in your Keurig K70.

Written By: Kyle Maxwell



INTRODUCTION

Use this guide to replace the Limit Switch that tells the Keurig that the K-Cup section is closed.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Limit Switch



- Open the K-Cup Holder by lifting the handle.

Step 2



- While looking upwards from underneath the Keurig, remove the two 8mm Phillips #2 screws from underneath the black plastic "shroud".

Step 3




- Remove the black plastic "shroud" by pushing inwards and then pulling upwards to disengage the plastic hooks that are not visible.

Step 4



- Remove the two 10mm Phillips #1 screws from the switch.

Step 5

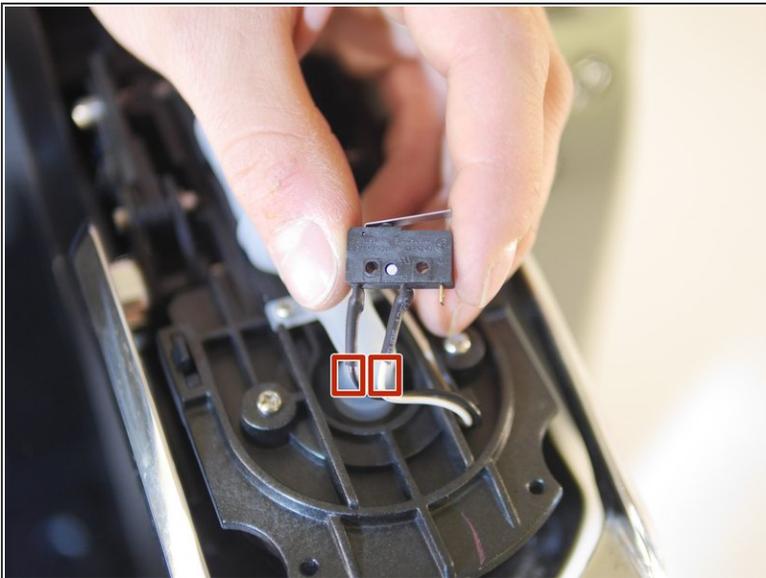

- Remove the switch by cutting the two connecting wires. Reconnect a replacement switch [using this guide to join wires with solder](#), or [using this guide to solder connections](#), or by using any other technique to connect wires.

To reassemble your device, follow these instructions in reverse order.