



Toshiba Satellite E45-B4100 RAM Replacement

Instructional guide on how to manually replace the RAM for the Toshiba Satellite E45-B4100. Be sure to have a RAM replacement on hand. Replacing RAM is useful for when wanting to upgrade the storage space on a computer.


Written By: Brendan Sweeney



 **TOOLS:**

- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Battery Replacement

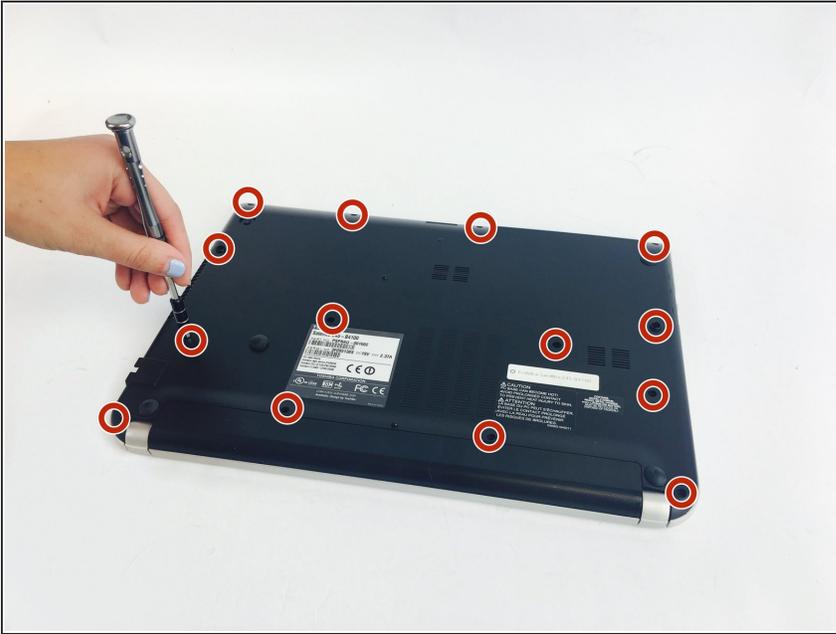

- Remove the fourteen 3.75mm screws with a Phillips #0 Screwdriver as shown.

Step 2



- Gently pull out the battery.

Step 3 — RAM



- Using a spudger, poke the white tabs in by the battery until you hear a click.


Step 4



- Separate the laptop by sliding a spudger in between the black and silver covers.

⚠ Be sure to use ESD-safe tools, we recommend iFixit Toolkit.

Step 5

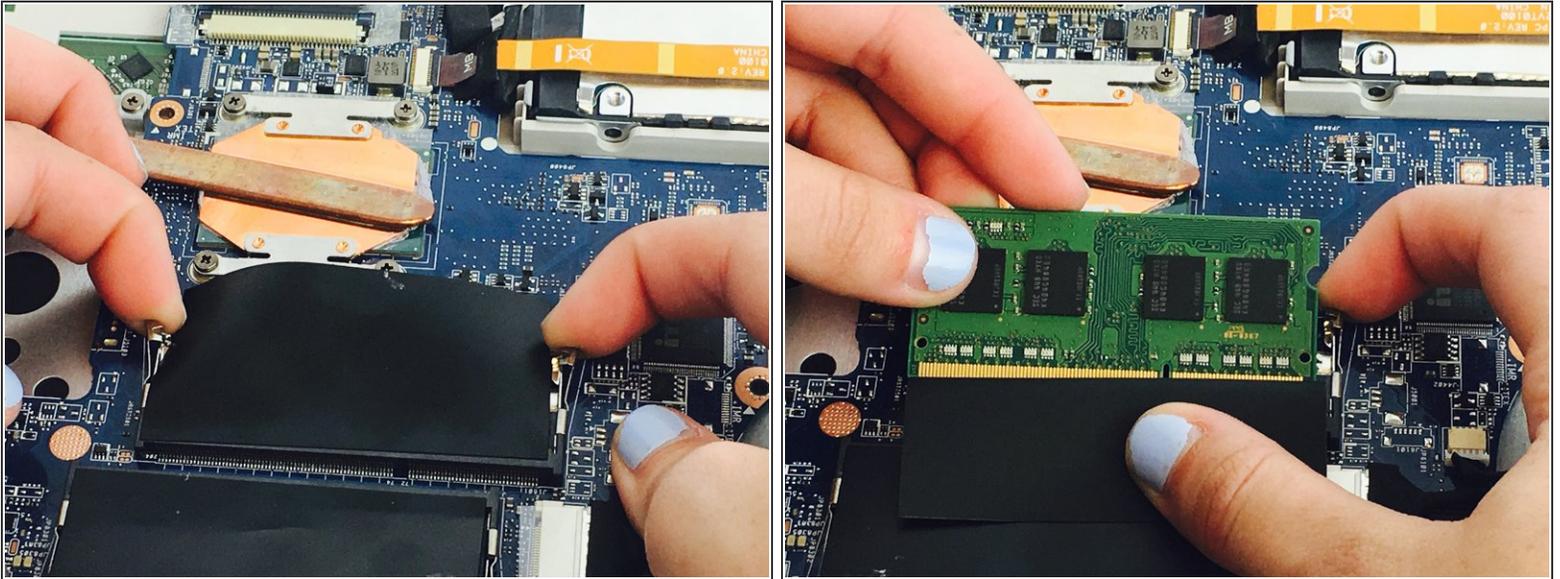

- Pull the two metal brackets out away from RAM unit while simultaneously sliding the RAM unit out.

To reassemble your device, follow these instructions in reverse order.