



# Canon PowerShot SD1000 Shutter Button Replacement

This details the removal of the shutter button after the removal of the case surrounding the LCD.

Written By: Phillip Phung





## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Back Panel



- Remove the two 2.9 mm screws from the side panel closest to the camera lens.

## Step 2



- Remove the two 2.9 mm screws from the camera bottom panel.




### Step 3




- Remove the two 2.9 mm screws from the side panel farthest from the lens.

### Step 4

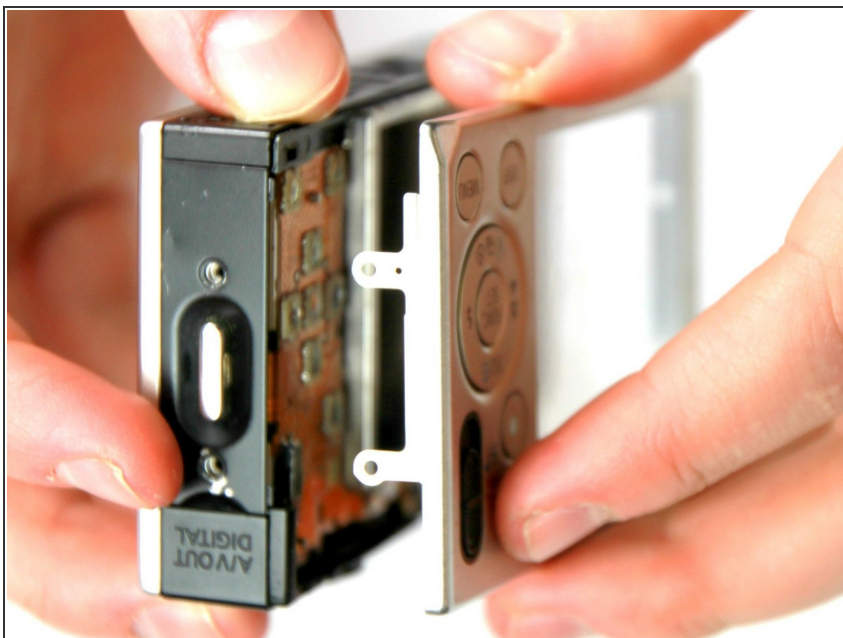


- Pull the back panel away from the camera body, starting at the end with the function buttons.

## Step 5

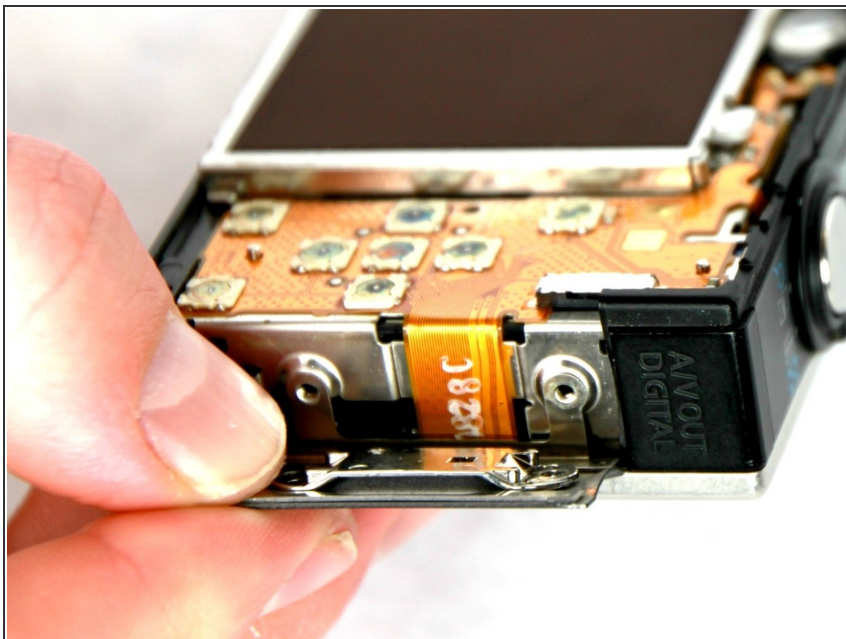

- Remove the small cover panel and the attached wrist strap mount.

## Step 6 — Front Case

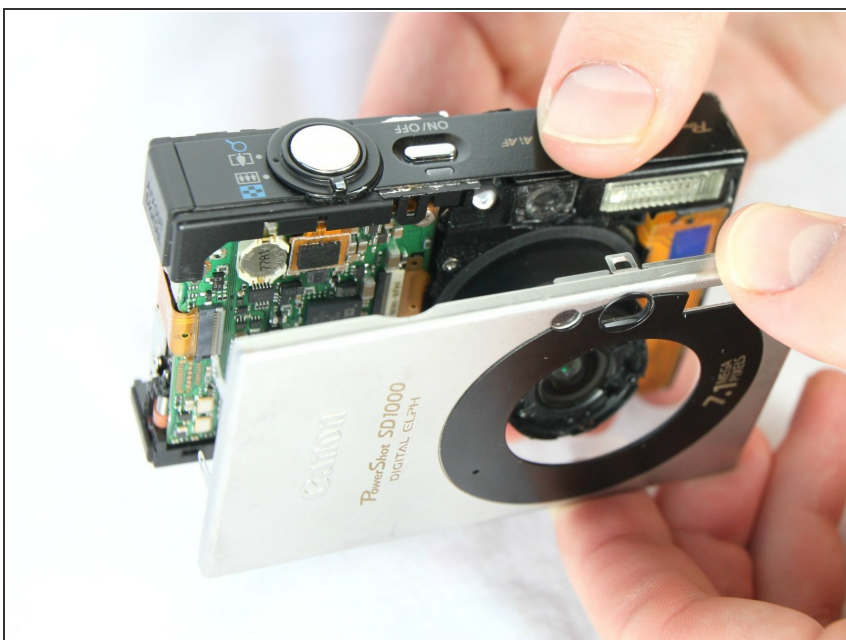


- Remove the front cover by gently pulling it away from the camera body.

## Step 7



- Place the front cover, back cover, and wrist strap mount in a safe place until you are ready for reassembly.

## Step 8 — Shutter Button

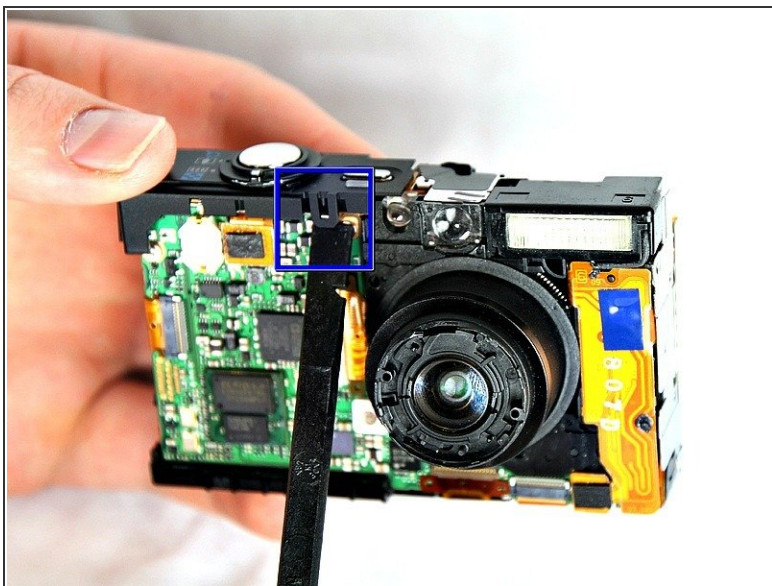

- Using the spudger, take off the shutter button by prying the small tab on the front side of the camera.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2021-06-30 07:32:06 PM (MST).

