


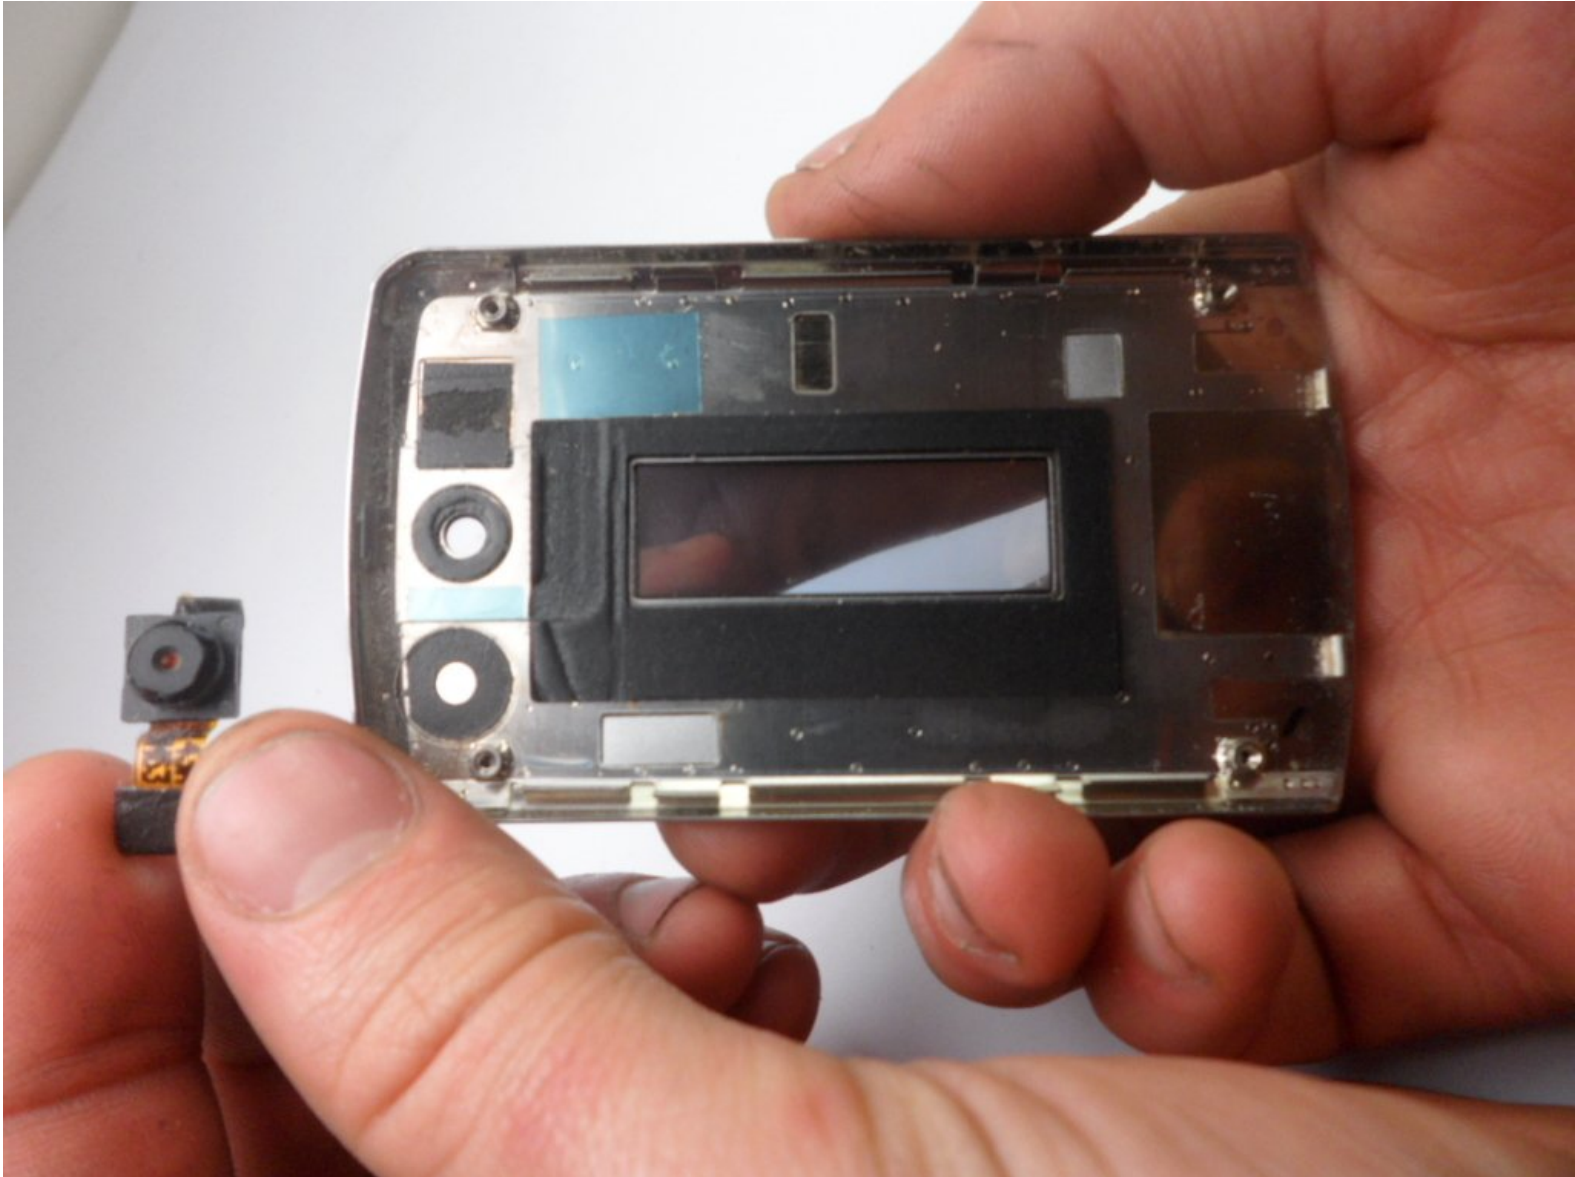

LG VX8700 Camera Replacement

Written By: Andrew






TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Battery

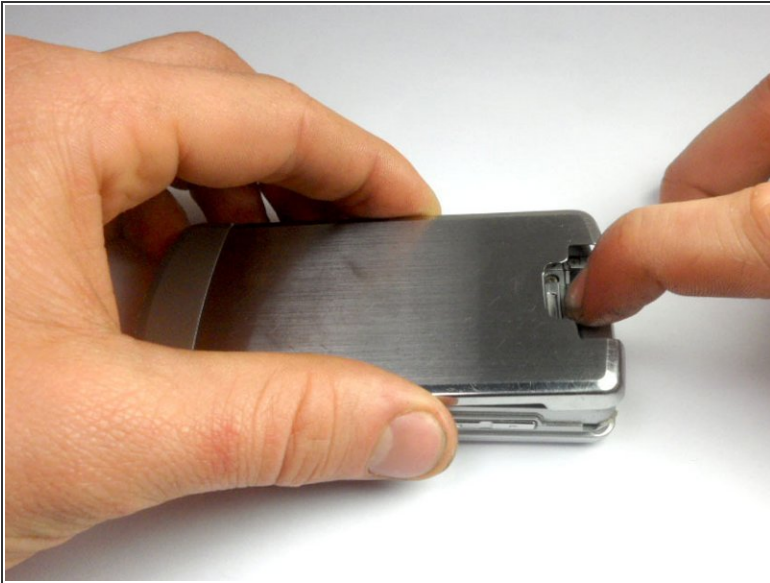

⚠ Make sure the phone is completely off.

- Remove the back cover by sliding the tab away from the phone using one finger.

Step 2




- Lift one side of the battery using a plastic opening tool or your fingers.
- Carefully remove the battery and set it aside.
- ☑ When installing the new battery, make sure to align the metal pins with those of the phone.

Step 3 — Front Bezel



- Turn your phone around and open the flip phone.
- Locate the two grey rubber plugs on the LCD portion of the phone. These plugs cover up two screws.
- Remove the two grey screw-covers at the bottom of the screen

Step 4

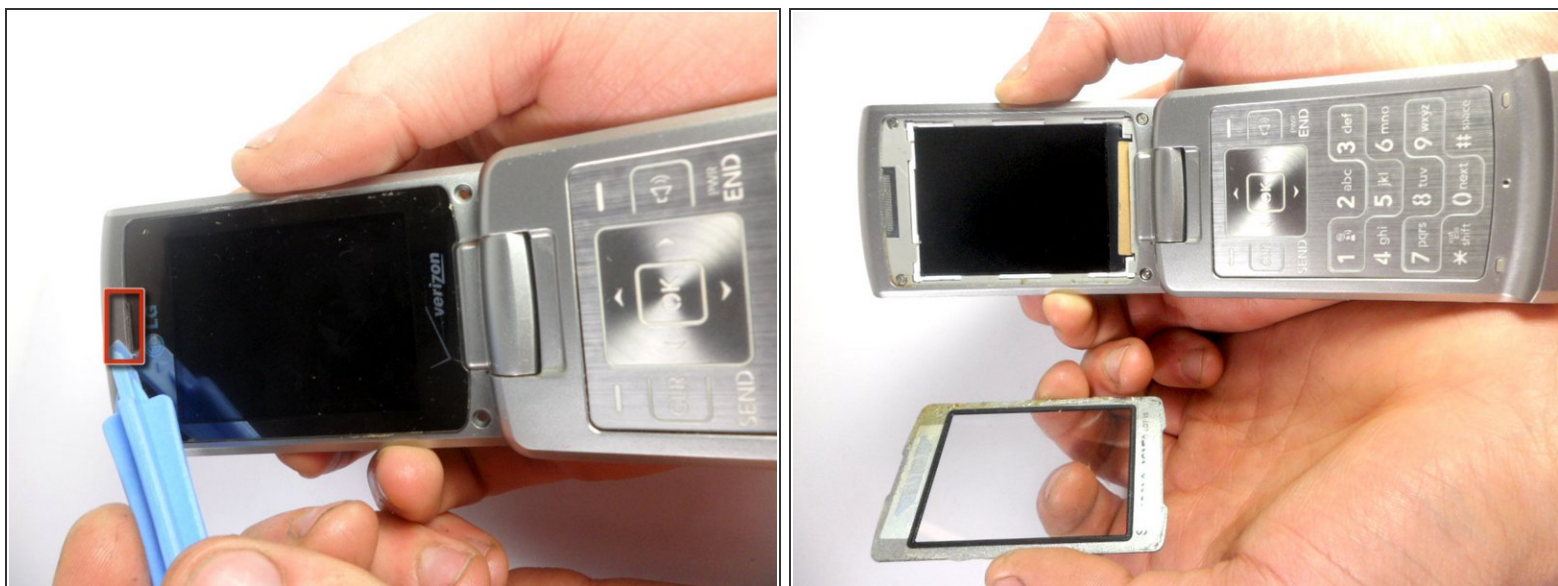


- Remove the screen by using the tab to eject the screen.
 - There is a gap between the case and the screen near the ear piece
 - Insert the plastic opening tool in the gap and pry the screen up.
- i** The plastic screen cover is glued onto the phone, do not be alarmed if it may be difficult to pry it off.

Step 5




- Unscrew the four corner 3.21mm screws to separate the the top cover of the phone

Step 6

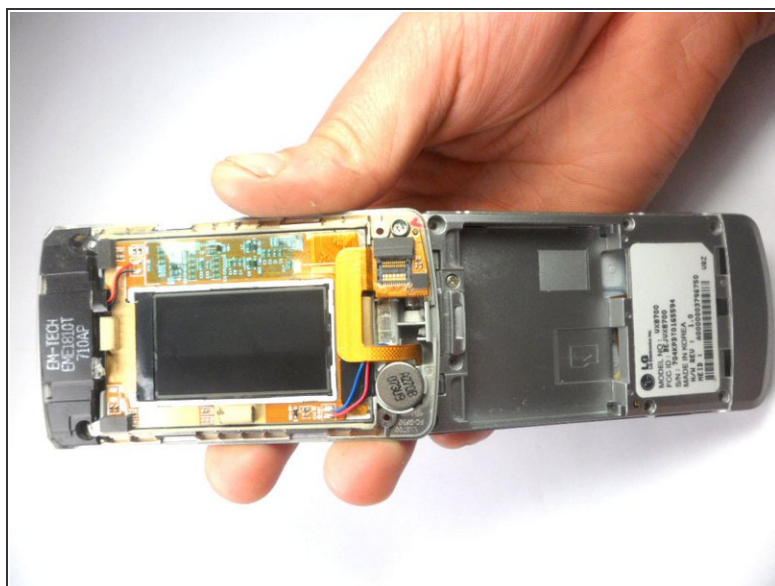


- Turn your phone around
- Remove the top cover of the phone by inserting the plastic opening tool into the groove.
- Carefully open the cover.

Step 7 — Camera

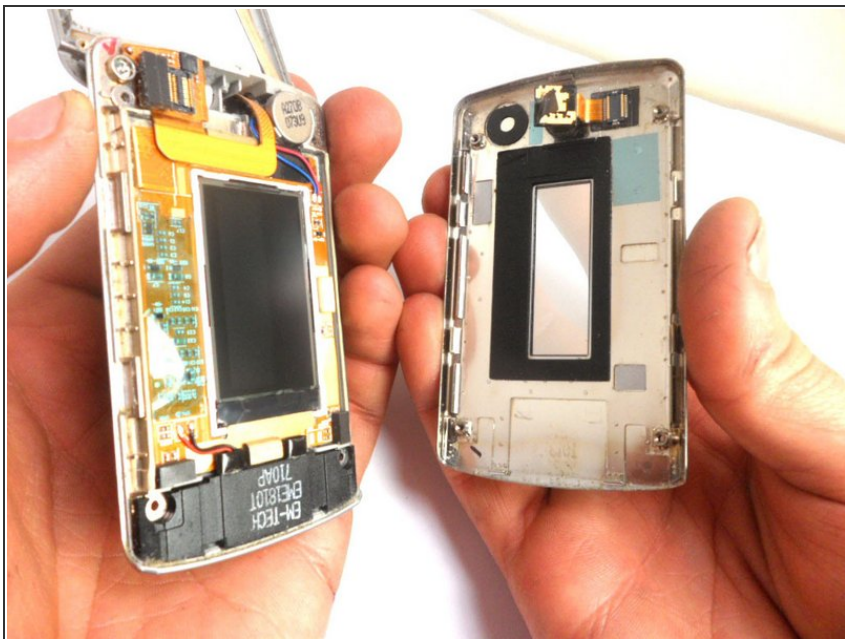

- Now we have the LCD outer case off. The LCD display can be seen on the left, the camera on the right.
- Place the phone assembly down, it is not needed anymore.

Step 8

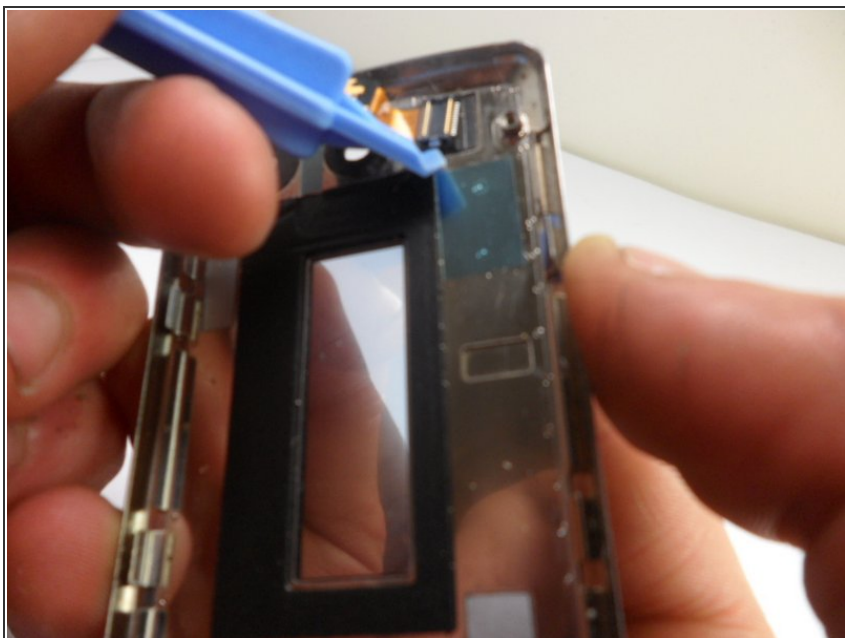

- To remove the camera the ribbon connector should be removed.
- This ribbon connector is glued to the case, using the plastic opening tool pry the connector off.

Step 9



- The camera should come loose after the connector is pried off.
- Take the new camera and apply a small square of double sided tape to the new ribbon connector.

To reassemble your device, follow these instructions in reverse order.