



# Asus G73JH-RBBX05 RAM Replacement

This guide will help you locate and remove the RAM on the Asus G73JH-RBBX05.

Written By: Trevor Sprosty



---

## INTRODUCTION

Use this guide to remove and replace the RAM on the Asus G73JH-RBBX05.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — RAM



- Locate the two, 4mm screws on the back of the laptop and remove them using a PH0 screwdriver.

## Step 2



- Use the plastic spudger to remove the panel.

## Step 3



- Push down the metal clips and remove the RAM.

To reassemble your device, follow these instructions in reverse order.