



# Dyson DC28 Animal Wheel Replacement

This guide will go through the process of removing the plastic wheels of the Dyson DC28 Animal for replacement or cleaning.

Written By: Zachary Urciuoli



---

## INTRODUCTION

This guide will detail how to remove the plastic wheels to take out any obstructions blocking movement or replace the wheels if cracked or damaged.

 
---



### TOOLS:

- [Metal Spudger](#) (1)
-

## Step 1 — Wheel

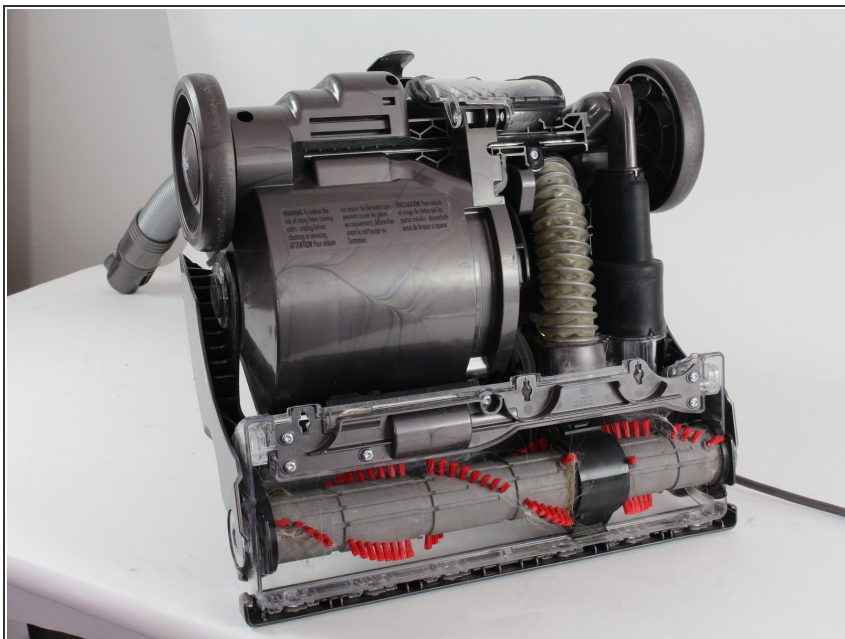



- Flip the vacuum face down with the wheels facing up.

## Step 2



  - Start on the right side wheel of the vacuum cleaner
- Remove the plastic wheel cap by sliding the tip of the metal spudger under the edge of the cap.
- Gently pry off the plastic cap

## Step 3

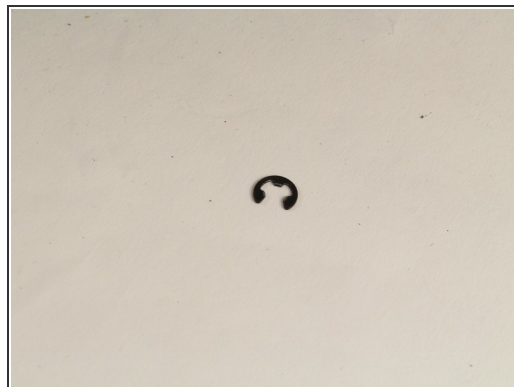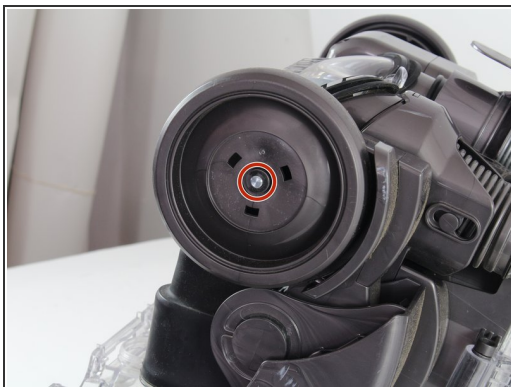

- Identify the e-clip located under the metal axle.
- ⓘ The e-clip is very small and may be hard to identify. It is a small metal ring between the metal axle and the plastic wheel.
- Use the metal spudger to pry off the e-clip.
- ⚠ The e-clip is hard to remove and may require extra force.




## Step 4



 - Slide off the plastic wheel off of the metal axle
- ⓘ Be careful when removing plastic wheel. There is a loose metal washer and black axle piston behind the wheel that can easily fall off.
- Slide off the metal washer and black axle piston from the metal axle

## Step 5

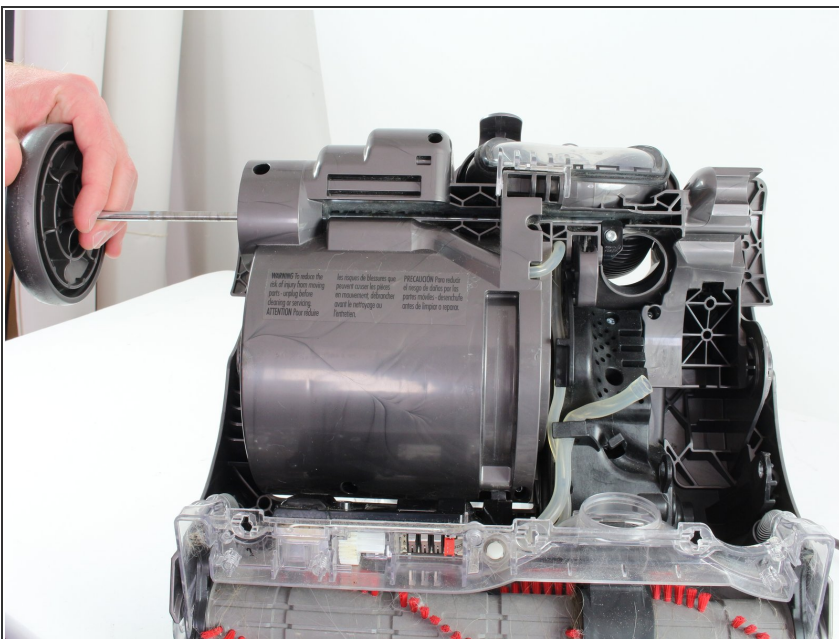

- Remove the metal axle by pulling on the left wheel. This does not take a lot of force and should easily slide out.
- Repeat steps 2, 3, and 4 to remove the left side wheel from the metal axle.

To reassemble your device, follow these instructions in reverse order.