



How to fix a MX Master Permanently active Gestures

Fixing the gesture control on a logitech MX Master

Written By: callumblackall





TOOLS:

- [T4 Torx Screwdriver](#) (1)
 - [Philips Head Screwdriver: Size J1](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [Pro Tech Toolkit](#) (1)
-

Step 1 — Tear down guide -



- <https://toemat.com/logitech-mx-master-fi...>

Step 2



- push the flexible button up and loosen and retighten the screws around the pcb

To reassemble your device, follow these instructions in reverse order.