



Dyson v6 Absolute Main Body Replacement

The main body of the Dyson v6 Absolute can be removed to replace the cyclone or motor of the device.

Written By: Tabitha Espina Velasco



INTRODUCTION

If the motor or cyclone of the Dyson v6 Absolute is not functioning properly, the main body of the device can be removed.

TOOLS:

- [Tweezers](#) (1)
-

Step 1 — Bin




- Unplug the device.

Step 2



- Push down the red lever located on the outside of the bin, next to the device handle, to open the door to the debris bin.
- Avoid pressing the trigger on the handle opposite the red lever, which activates the motor.

Step 3

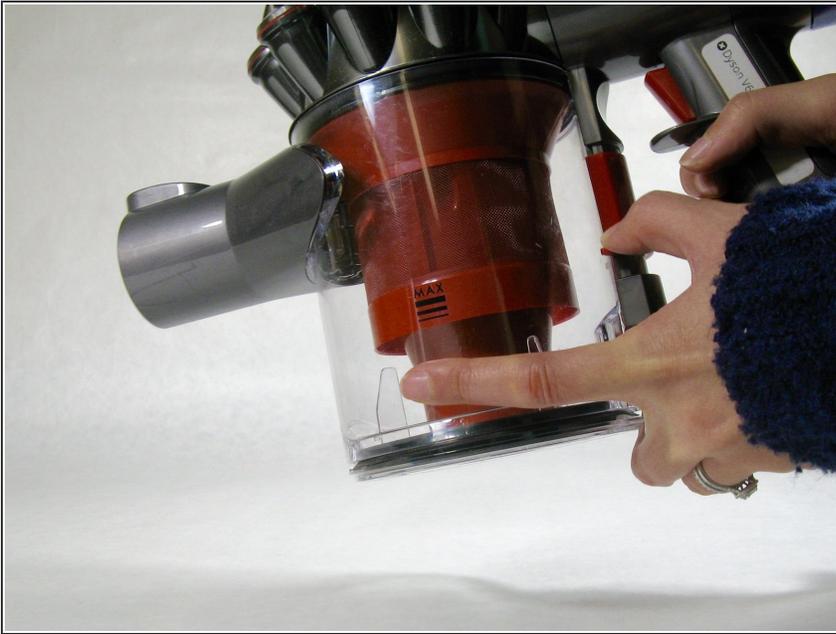

- Push the red lever down a second time to release the debris bin.
- Avoid pressing the trigger on the handle opposite the red lever, which activates the motor.

Step 4




- Pull bin away from the cyclone.

Step 5 — Main Body




- Separate the bin from the main body of the device.

Step 6

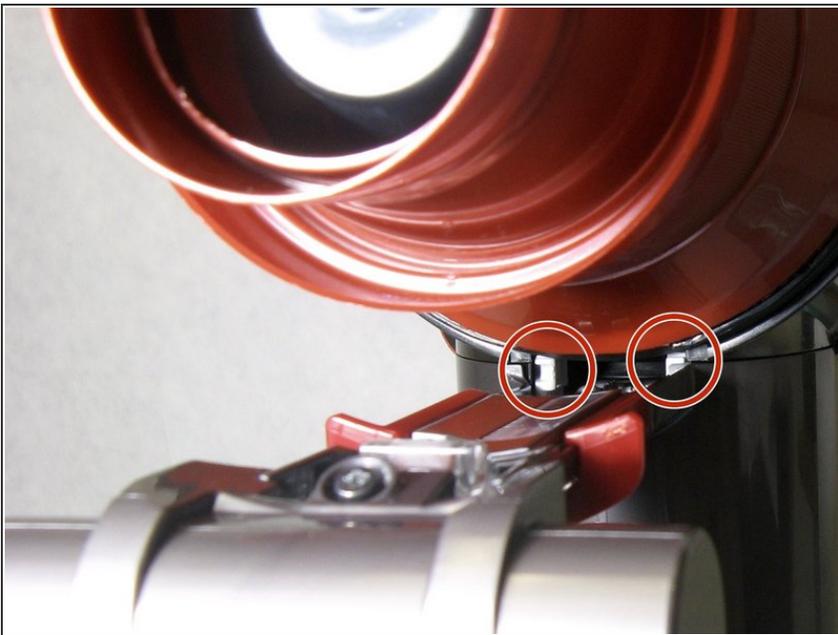

- Locate two visible white clips between the main body and the cyclone.

Step 7

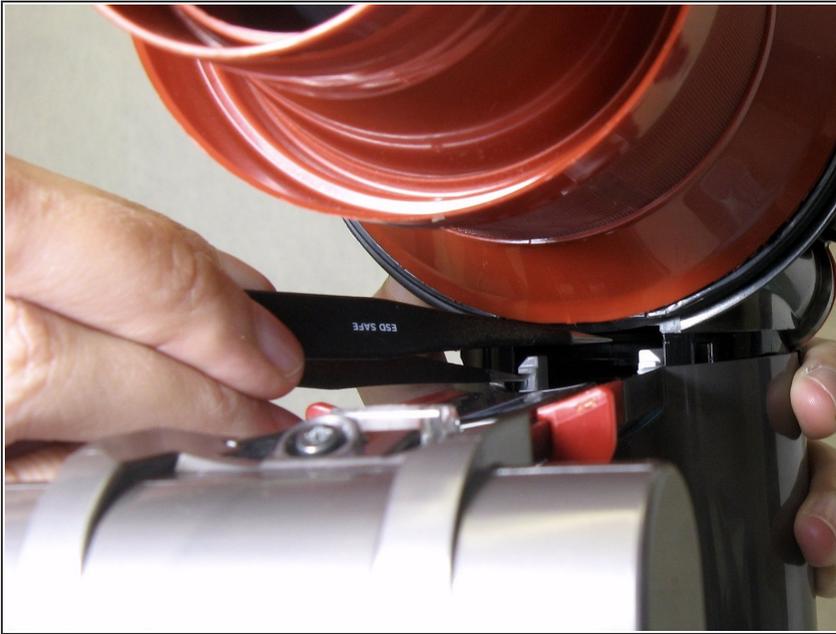

- Use tweezers to pinch the white clips together.
- Widely hold the tweezers apart to get them to reach between the two white clips.
- Because the space is tight between the cyclone and the main body, pinching the white clips may require additional effort.

Step 8



- Tilt and pull the main body away from the cyclone.
- There may be a loud snap when the main body separates from the cyclone.

To reassemble your device, follow these instructions in reverse order.