



# ASUS Eee PC 1018P RAM Replacement

This guide outlines the removal of the RAM for...

Written By: Patrick Hallahan



# INTRODUCTION

This guide outlines the removal of the RAM for repair or replacement.



## TOOLS:

[iFixit Opening Tool](#) (1)



## PARTS:

[PC3-10600 2 GB RAM Chip](#) (1)

## Step 1 — Battery



- Lay the laptop flat on a hard surface with the bottom facing up and the battery pack on the side closest to you.



## Step 2



- Use both index fingers to push both spring tabs inwards towards the center of the laptop.

## Step 3



- With the spring tabs pressed inward, use your fingernails to lift of the edge of the battery, pivoting it up and towards you.
- Pull the battery pack up and away from you to completely free it from its recess in the case.

## Step 4 — RAM



- With the battery removed, locate the RAM cover.


## Step 5



- Use your thumb to pry up the exposed edge of the RAM cover. Once this edge is lifted, the cover will come free.
- With the RAM cover removed, carefully peel back the silver foil that protects the RAM.



## Step 6

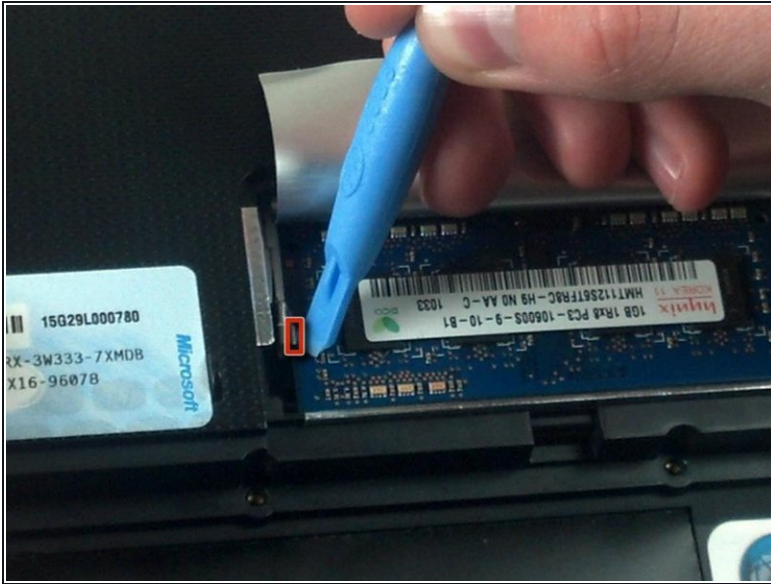

- Use the plastic opening tool to push aside the two silver tabs that hold down the RAM module.
  - In order to detach the tabs, use the plastic opening tool to pull the tab slightly toward the battery pack, then push outward away from the RAM module.
- ① The RAM module will pop upward at a slight angle when both tabs are detached.

## Step 7



- Carefully grasping the edges of the RAM module, slowly pull it free from the pin connectors underneath the edge of the foil.

⚠ Pull the RAM out at the same angle that it pops up naturally to. Ripping the RAM free at other angles can damage the fragile pins.

## Step 8



- Remove RAM module entirely for repair or replacement.

---

To reassemble your device, follow these instructions in reverse order.