



Sony DVP-FX730 Monitor Replacement

If the monitor or screen is broken, the monitor...

Written By: Andrew Ward




INTRODUCTION

If the monitor or screen is broken, the monitor needs to be detached from the Sony DVP-FX730. To detach the monitor successfully, a screwdriver should be used to remove screws, use your hands to pull remove a small back cover, and use tweezers to remove wires attached to bases.

TOOLS:

- [Tweezers](#) (1)
 - [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Cover

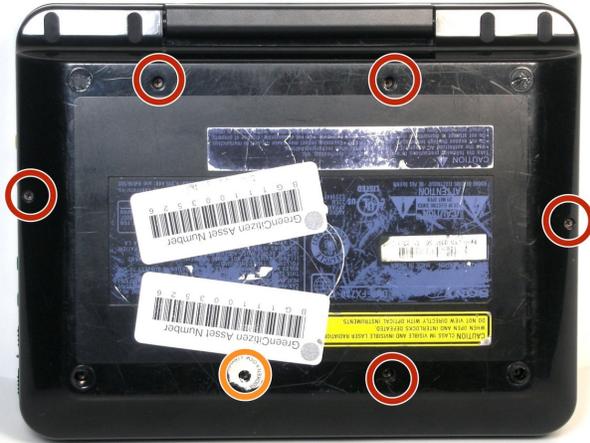

- Remove the five exposed 7.9 mm screws using a Phillips screwdriver.
- Punch through the warranty sticker with the spudger.
- Remove the screw underneath with the Phillips screwdriver.

Step 2



- Remove the rubber feet using the spudger.
- Remove the screws that were covered by the rubber feet.


Step 3



- Hold on to the corners of the cover and gently lift the cover.

⚠ The tray is still connected to the base with wires.

Step 4

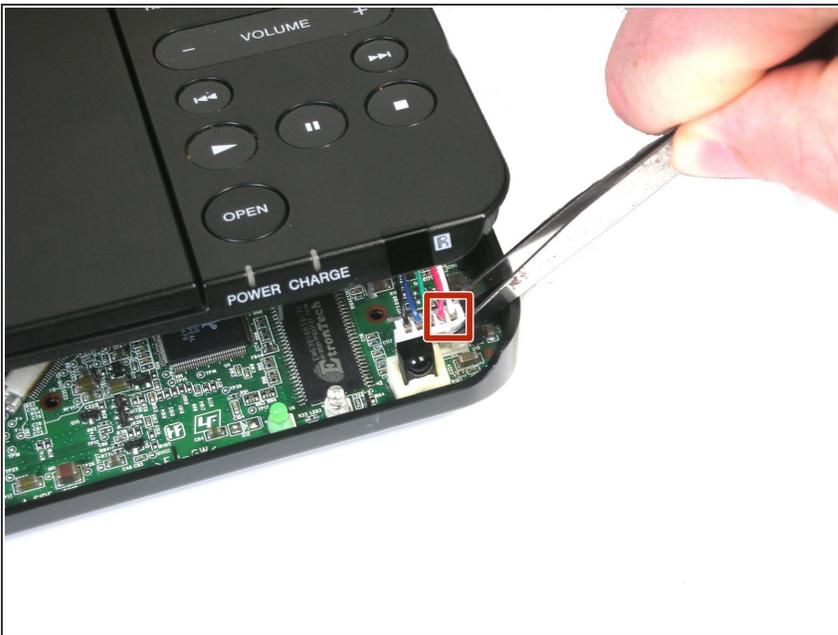

- Gently remove the wires with tweezers by pulling up on the base they are attached to.

Step 5 — Monitor



- Use your hand to remove the small back cover by gently pulling upward.

Step 6





- Using a screwdriver, remove the two 12 mm pan head screws.

Step 7




- The screen should now detach from the primary device.
- ⚠ The wires, indicated with a blue box, will still connect the screen.

Step 8

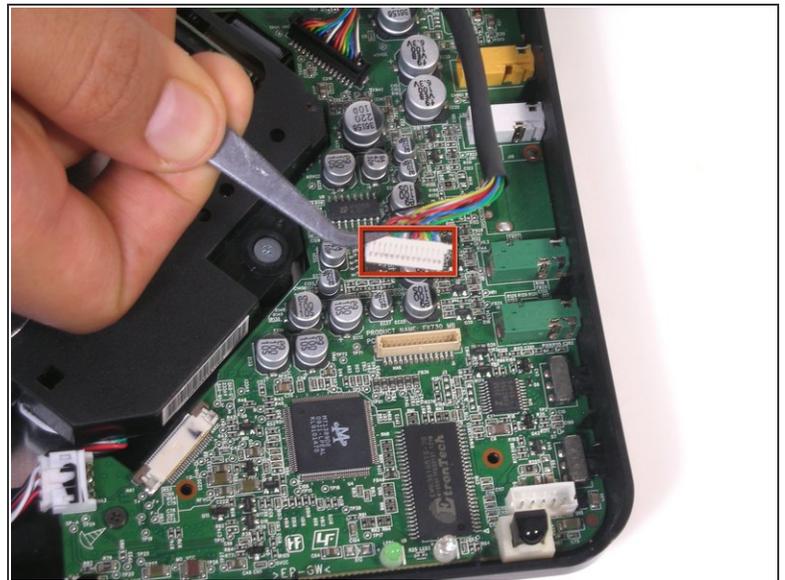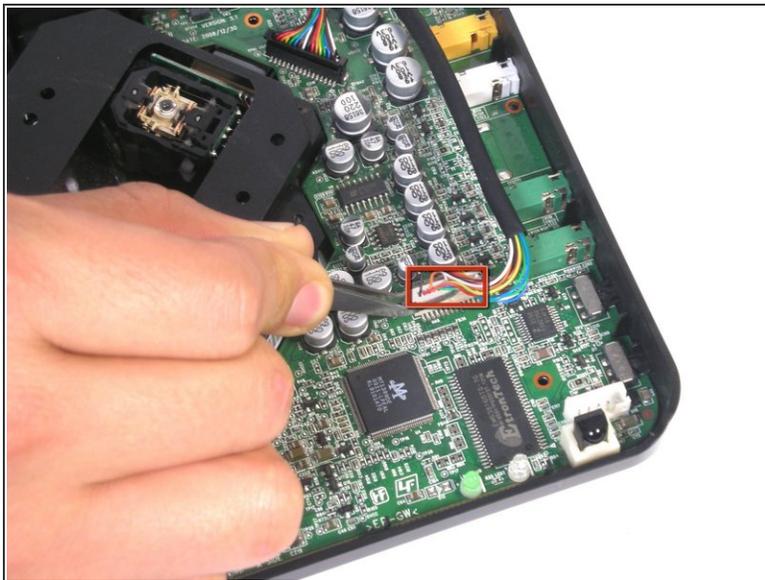

- Remove the wires attached to the white base using tweezers to pull them up.

Step 9

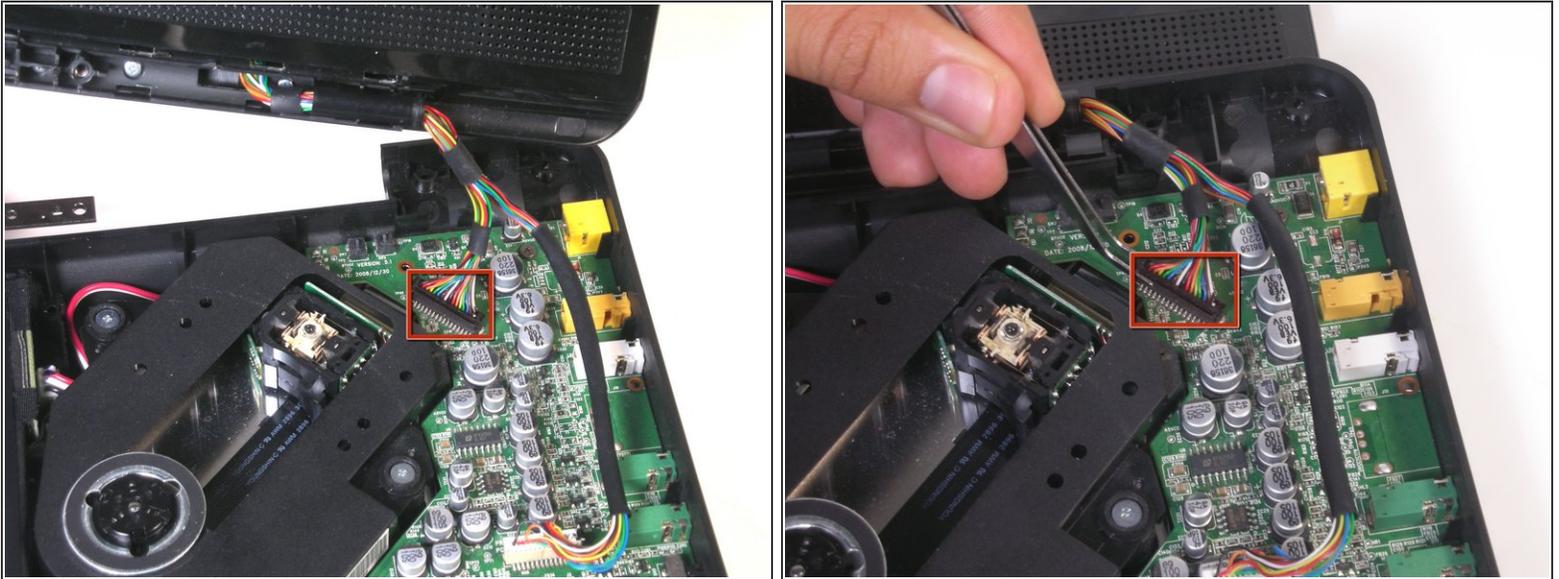

- Referring back to Step 8, do the same with the wires attached to the black base.

Step 10



- The screen should now be completely separated from the main device.

To reassemble your device, follow these instructions in reverse order.