 


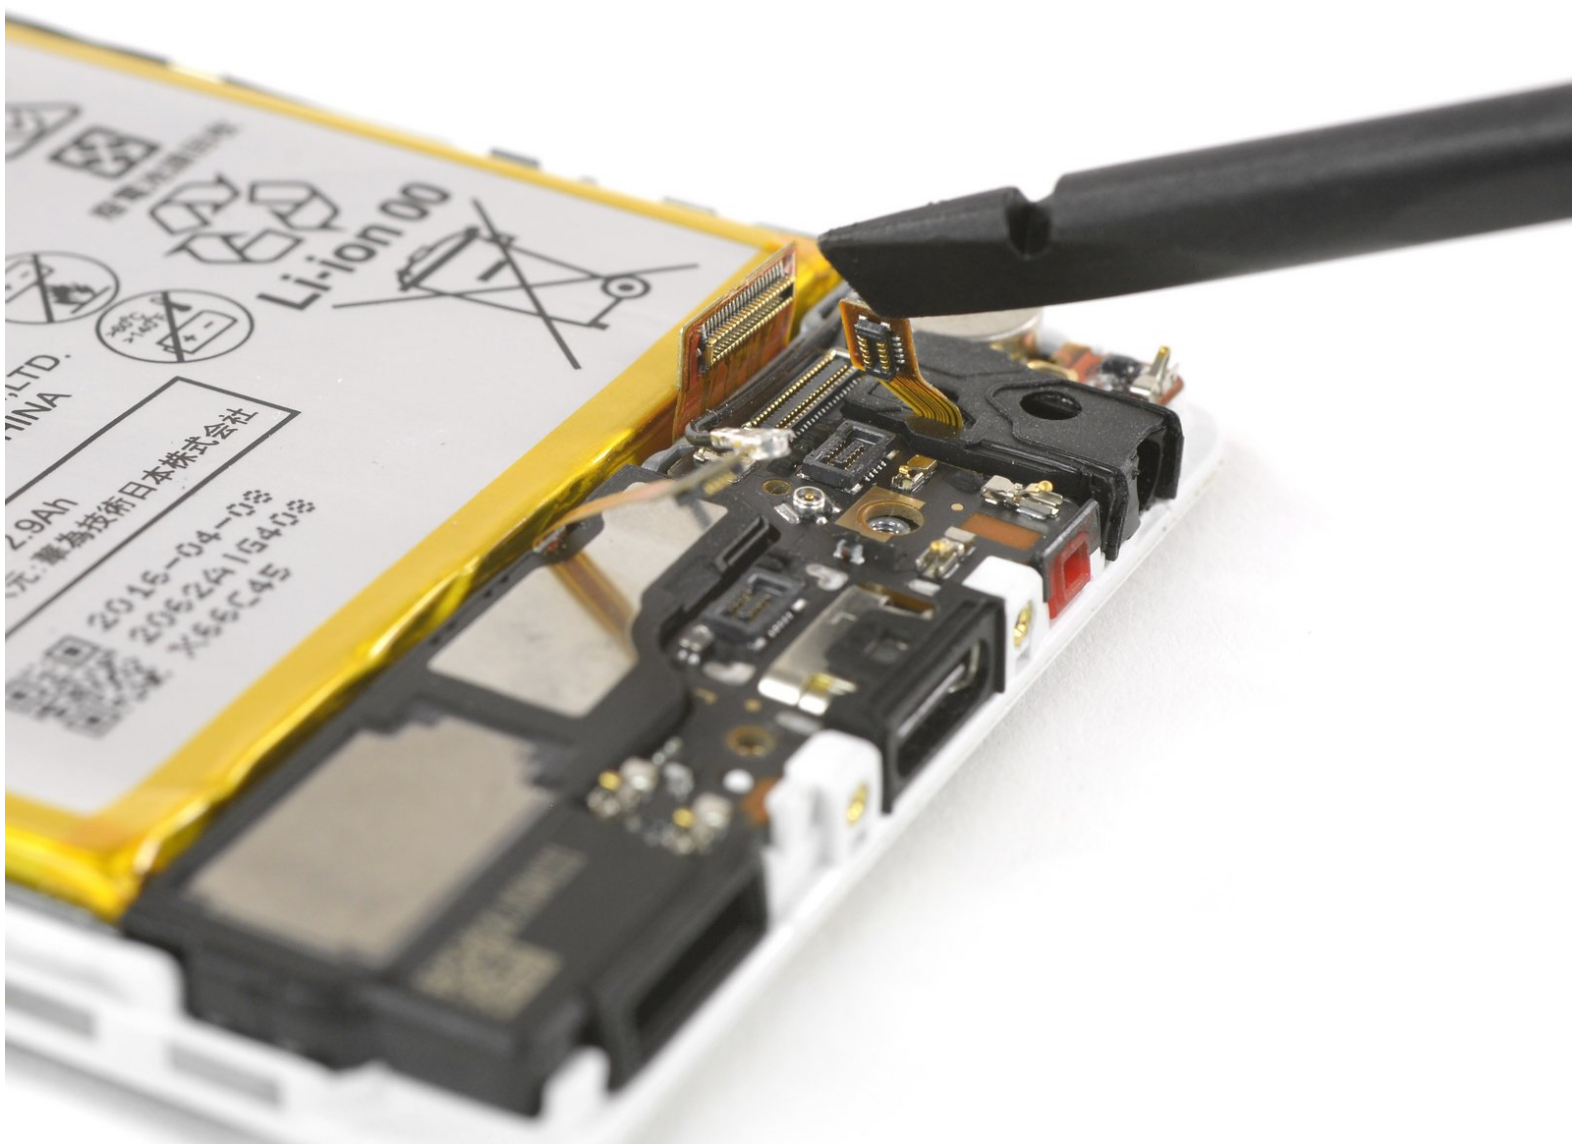

Huawei P9 lower section

pre-req for lower section (charging board, loudspeaker)

Written By: Dominik Schnabelrauch



INTRODUCTION

 
pre-req for lower section (charging board, loudspeaker)



TOOLS:


- [SIM Card Eject Tool](#) (1)
 - [Spudger](#) (1)
 - [Tweezers - Pro/ESD/Angled](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [iSlack](#) (1)
 - [P2 Pentalobe Screwdriver iPhone](#) (1)
-

Step 1 — lower section

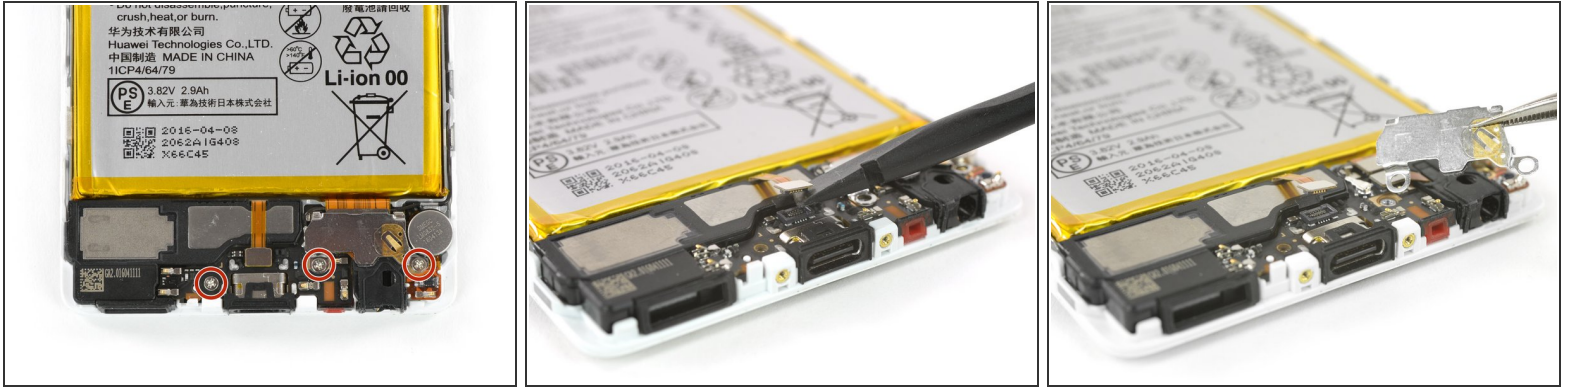

- Undo the three Phillips #00 screws.
 - Disconnect the loudspeaker flex connector.
 - Carefully remove the metal bracket.
- ⚠ Mind the adhesive underneath that might stick to the headphone connector.

 Step 2

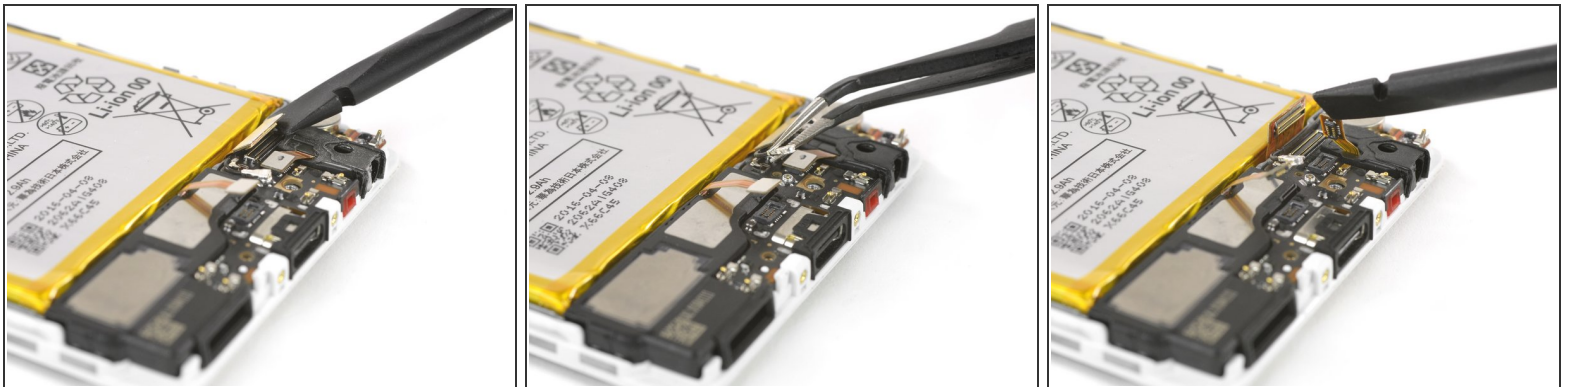

- Disconnect the motherboard flex cable and the antenna cable.
- Unplug the headphone jack connector.

To reassemble your device, follow these instructions in reverse order.