


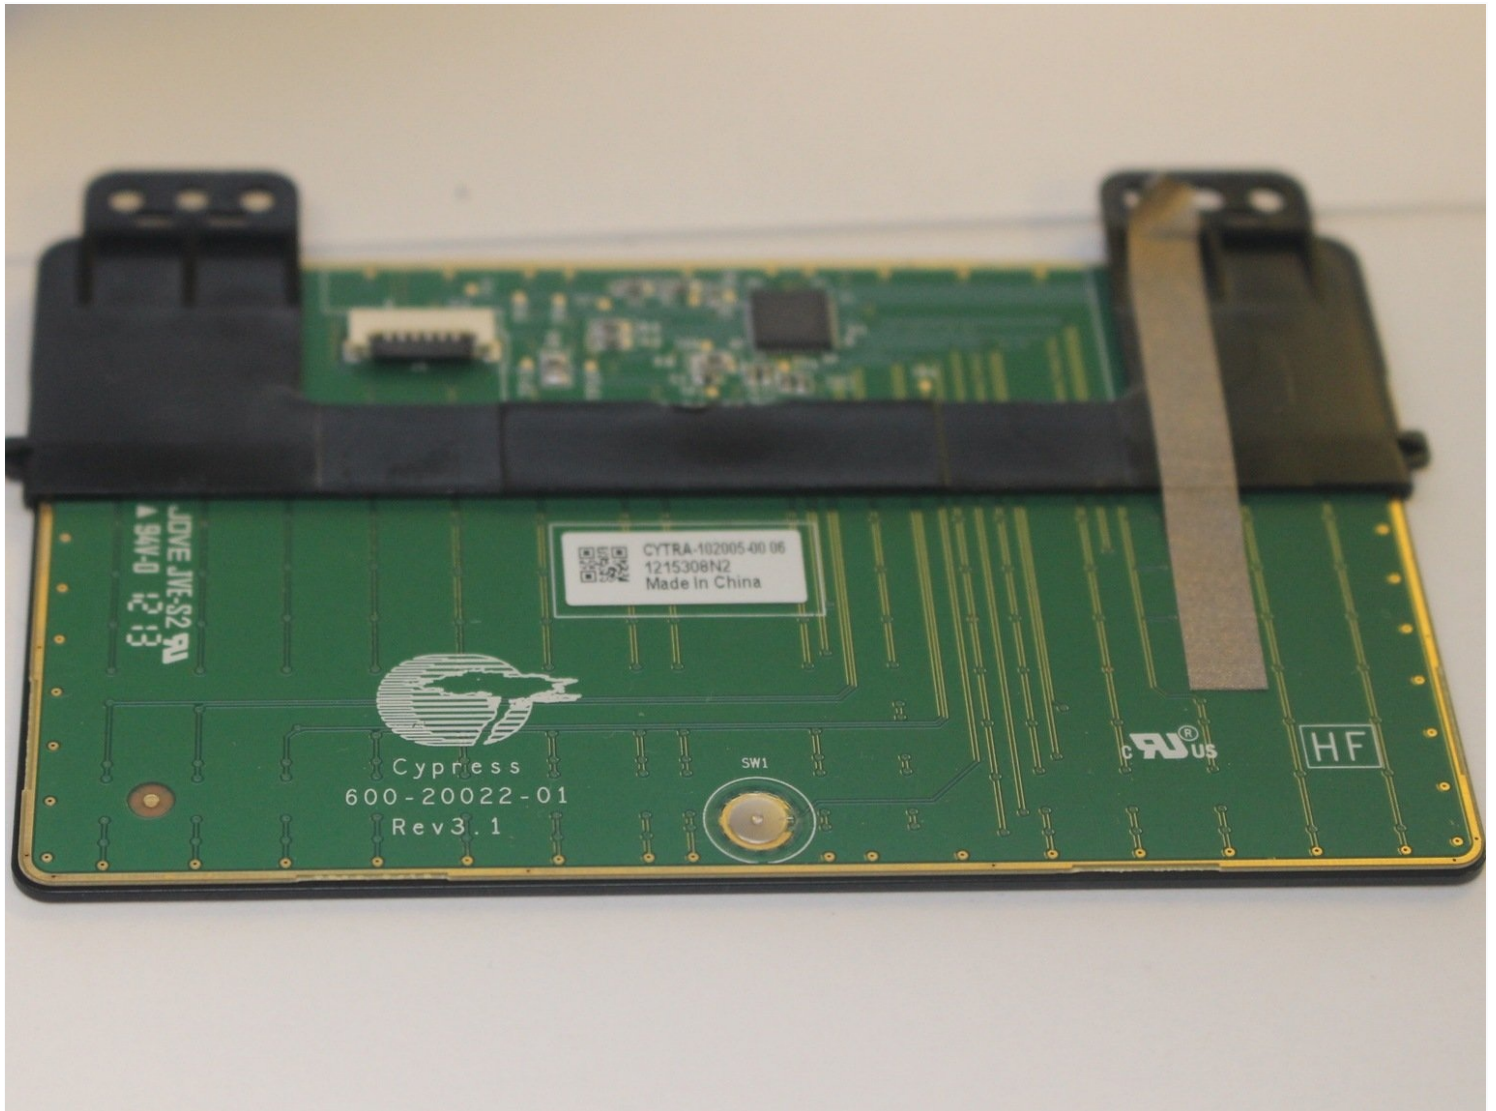

Dell XPS 13 L321X Mouse pad Replacement

Trackpad not responsive or not working at all?...

Written By: Ahmad EL Herbawi



INTRODUCTION

Trackpad not responsive or not working at all? Replace it (only screwdrivers required).


TOOLS:

T4 Torx Screwdriver (1)

Phillips #00 Screwdriver (1)



iFixit Opening Tool (1)

Step 1 — Track Pad

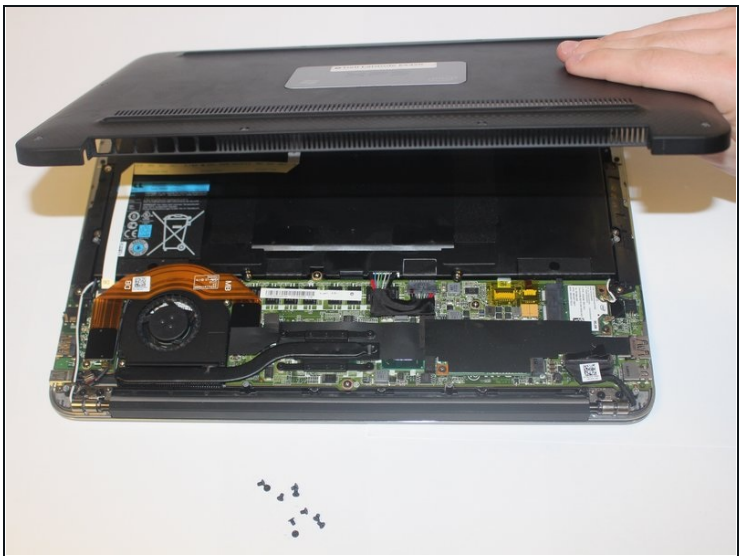


- Remove ten 3mm screws from the back cover with a **T5** screwdriver.

Step 2

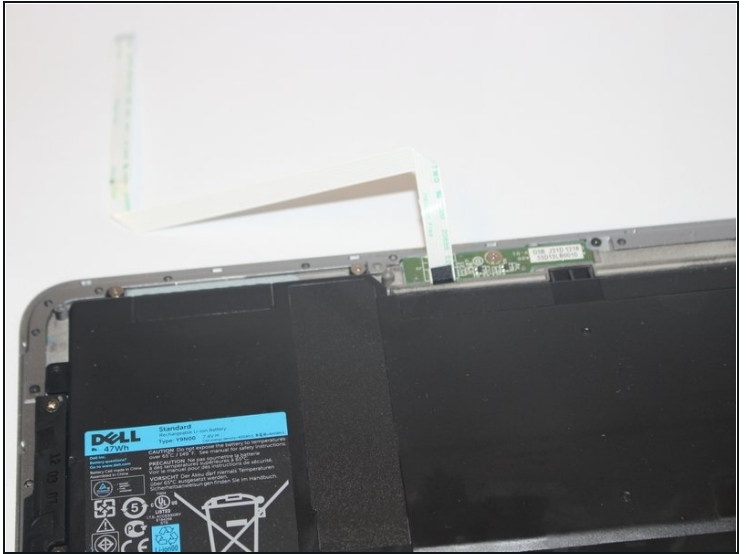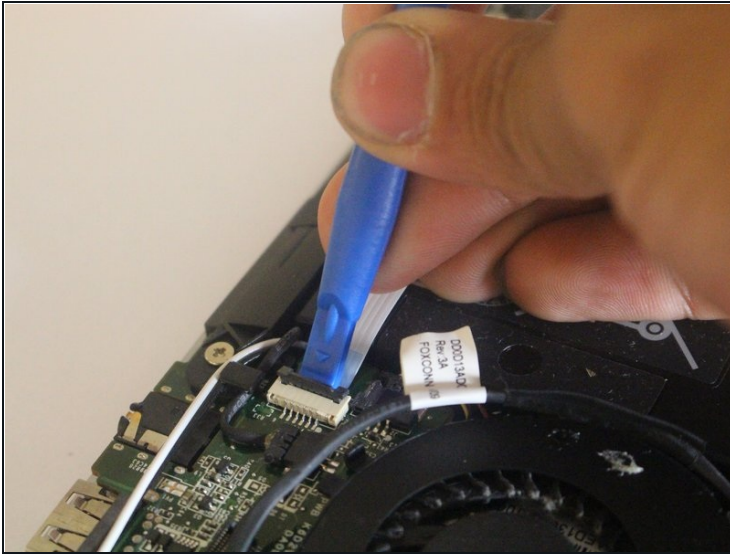


- Disconnect the ribbon cable with a plastic iFixit opening tool, by lifting up the black clip and by pulling the white ribbon off.
- Pull aside the ribbon cable.

Step 3

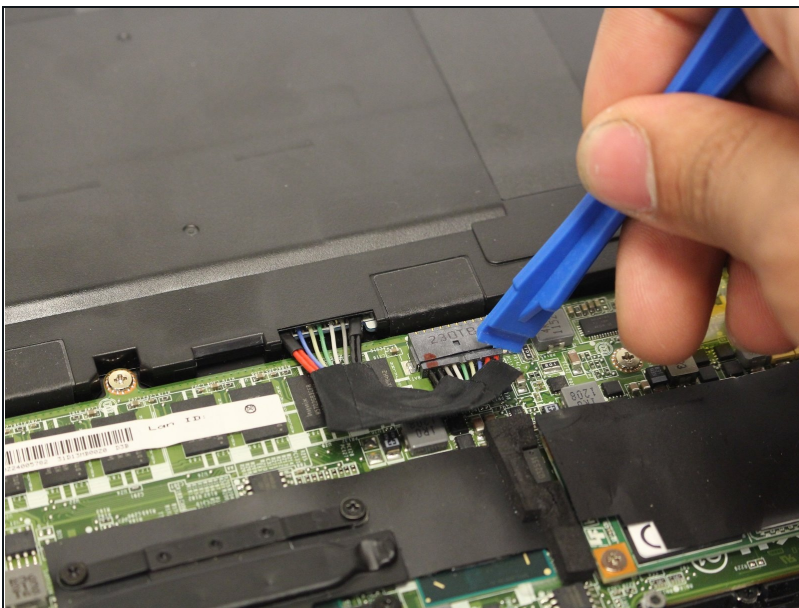


- With a plastic iFixit opening tool, insert it in between and remove the battery cable.

Step 4

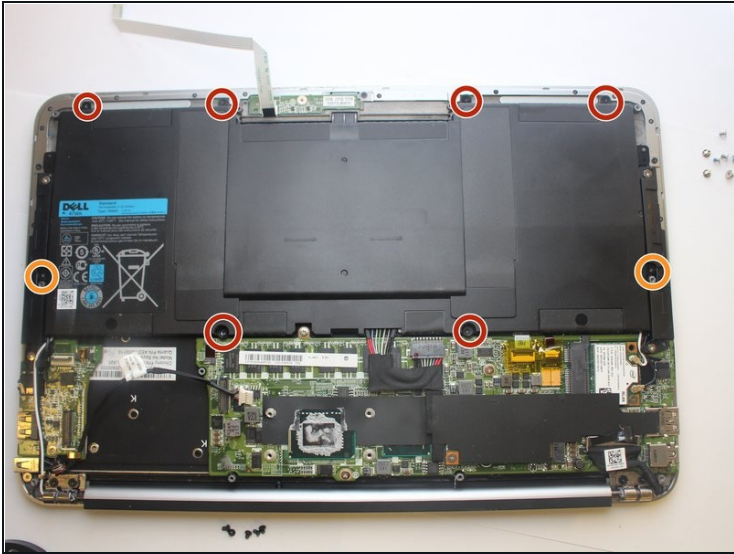




- Use a **PH00** size screwdriver to remove the 8 screws that secure the battery.
- Six 3mm screws.
- Two 5mm screws.
- Lift the battery out.

Step 5

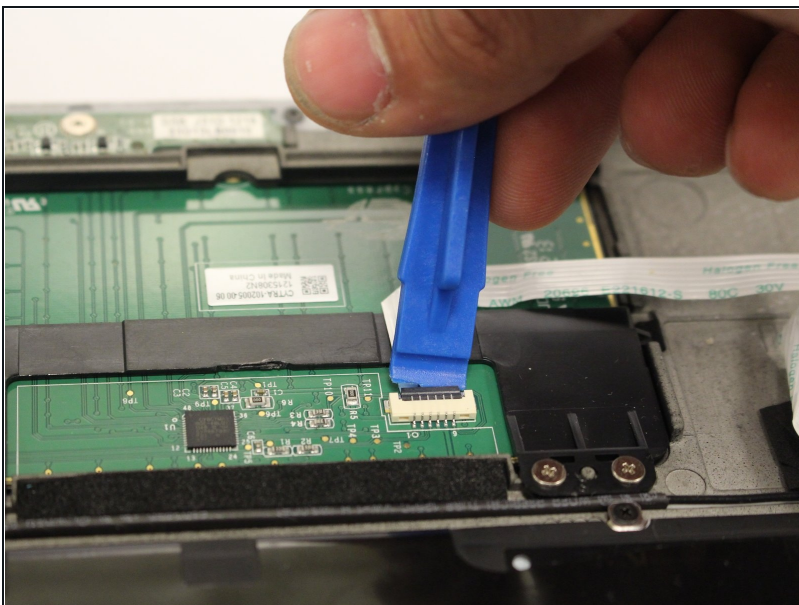

- Disconnect the ribbon cable with a plastic iFixit opening tool by lifting up the black clip and by pulling the white ribbon.
- Place aside.

Step 6

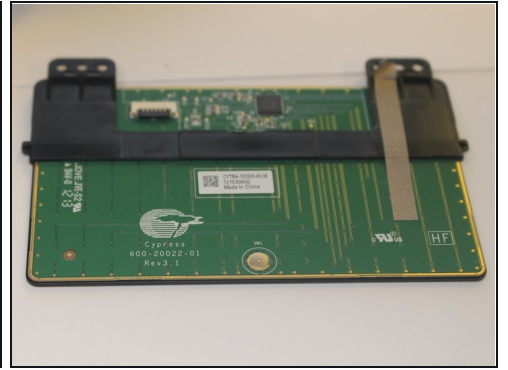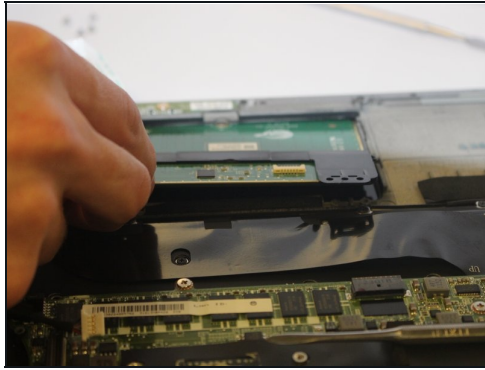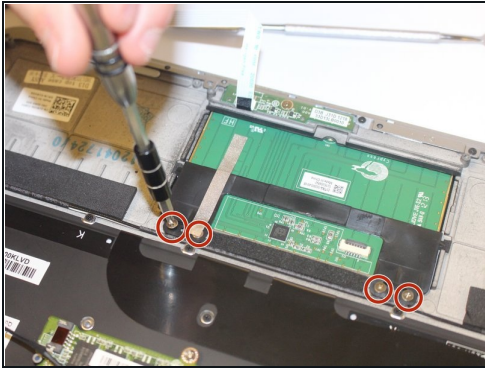

- Remove four 2mm screws with a **PH00** screwdriver.
 - Remove the mouse pad.
-