


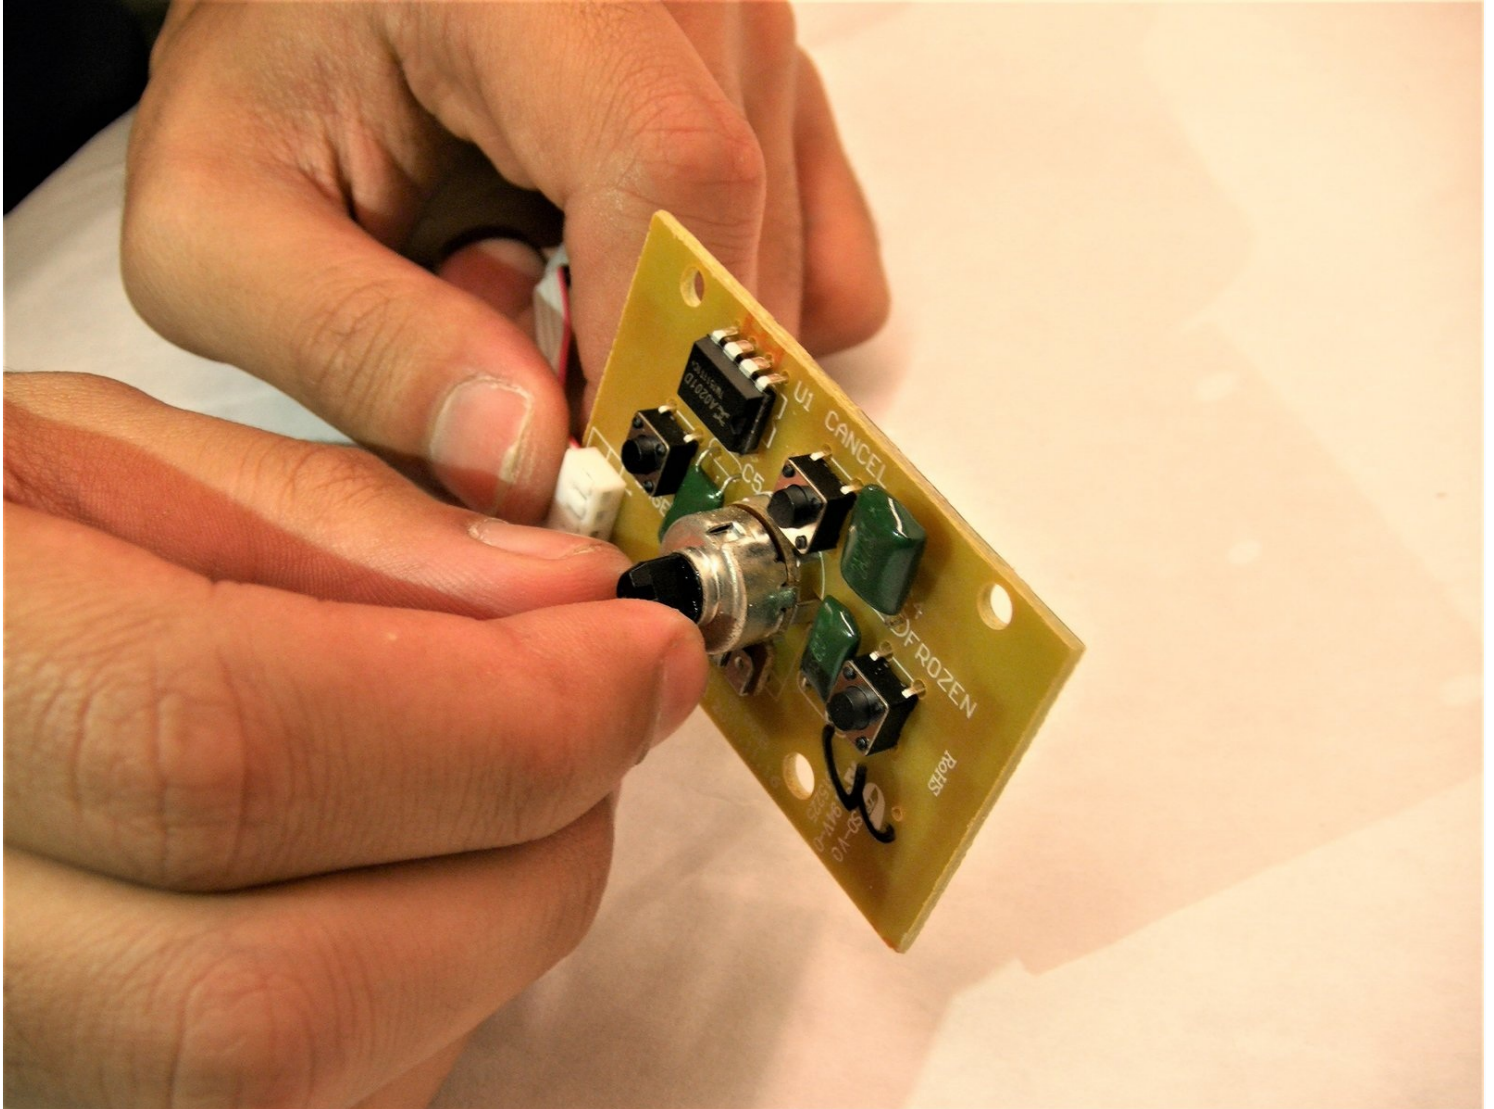

How to Adjust Black and Decker TR1278B Browning Dial

This guide will show how to adjust the browning...

Written By: Dominic Gamonez



INTRODUCTION

This guide will show how to adjust the browning dial in a Black and Decker TR1278B toaster.

TOOLS:

[Phillips #2 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

Step 1 — Top Cover



- ① Unplug the toaster before disassembly.
- Remove the carriage lever by pulling it away from the toaster.

Step 2



- ① Toaster will be turned upside down. Clear crumb tray or work over a paper towel.
- Turn the toaster upside down.
- Unscrew all four 4mm screws on the bottom using a Phillip's head #2 (PH2) screwdriver.
- Or a slightly different model has six screws that require an allen wrench (hex key). Ones that have a ball end will not work. I had to use one that had more of a Star of David, pointy pattern to it.

Step 3



- Detach the bottom from the front cover using the plastic opening tool.

Step 4




- Turn the toaster right side up.

⚠ Support the bottom. The ribbon cable that connects the toaster to the front cover can be damaged.

- Lift the front cover.



⚠ Lift carefully. Again the ribbon cable can be damaged.

Step 5

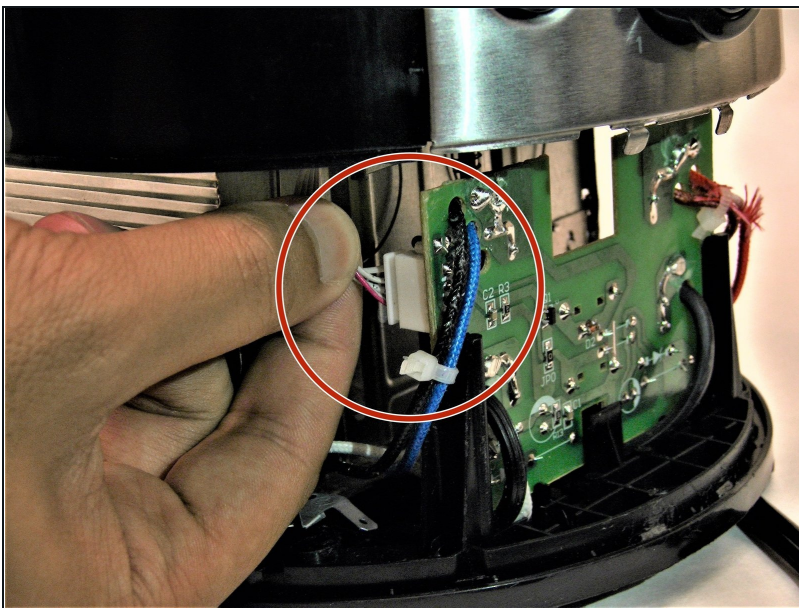



- Detach the bundled cable connector from the toaster by carefully pulling it away from the circuit board.

Step 6 — How to Adjust Black and Decker TR1278B Browning Dial

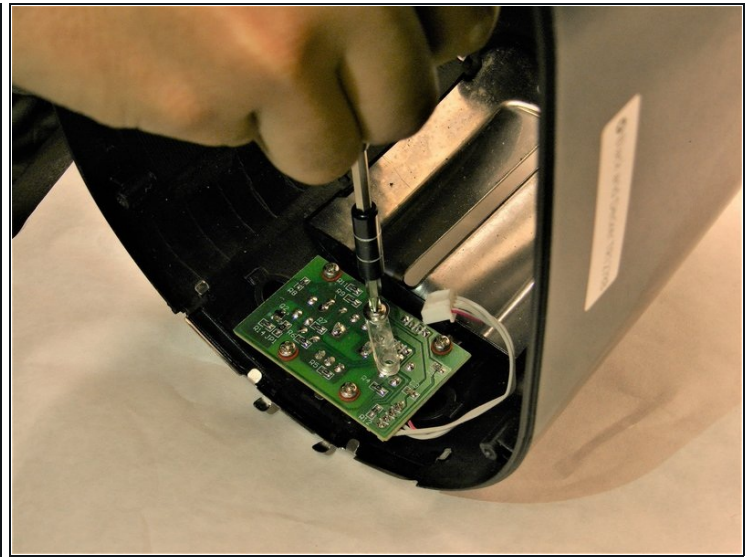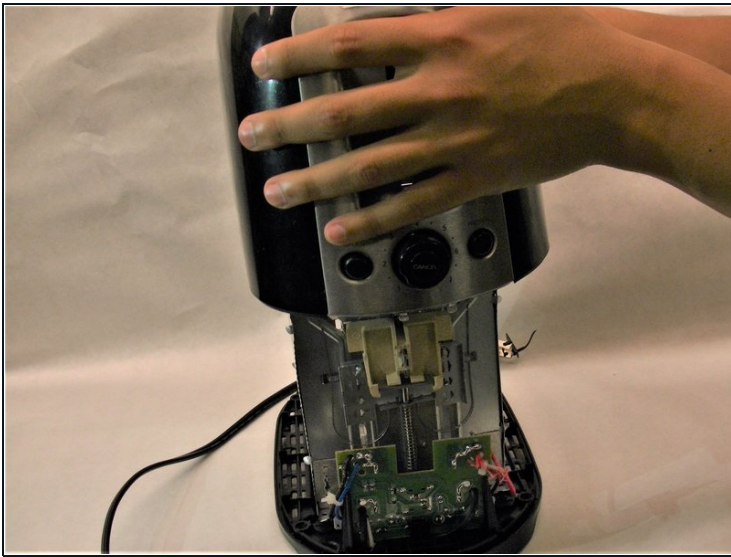

- Remove the front cover.


Step 7

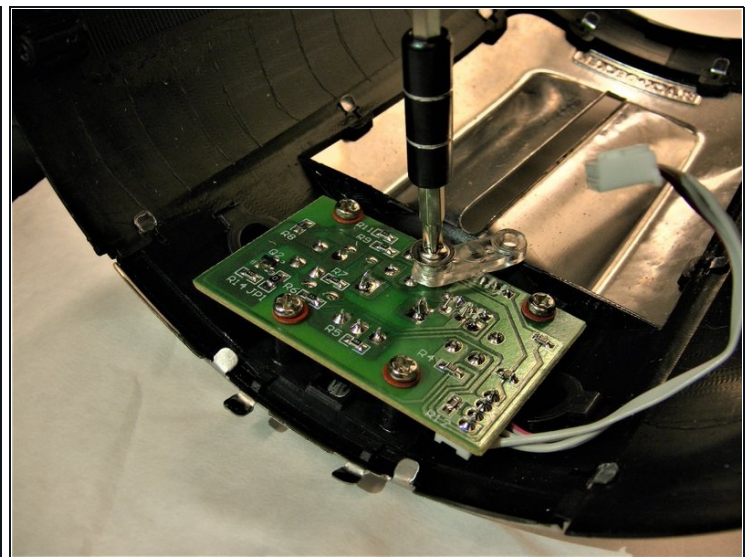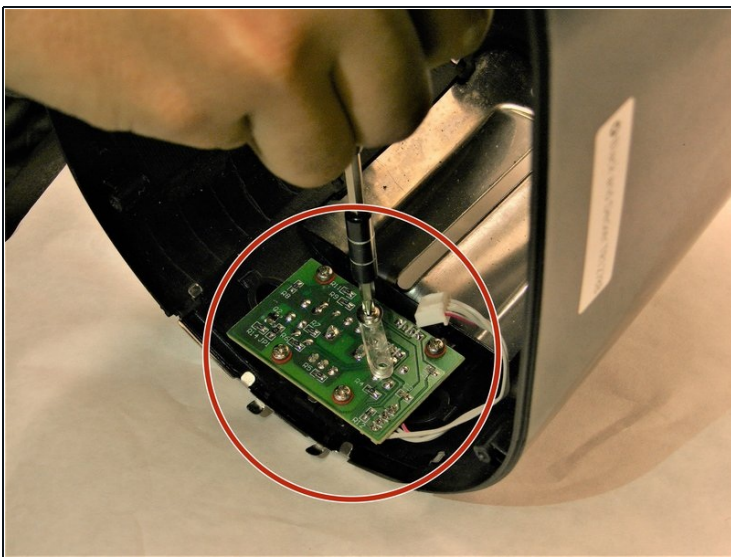

- Unscrew the circuit behind the browning dial on the front cover.

⚠ Do not lose the washers on the screws.


Step 8

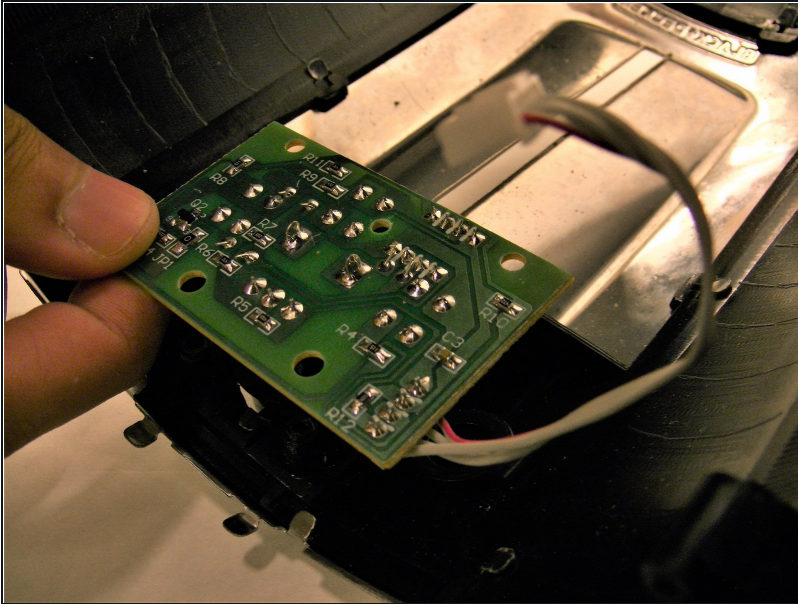

- Remove the circuit.

⚠ The dial and buttons on the front cover will be loose.

Step 9

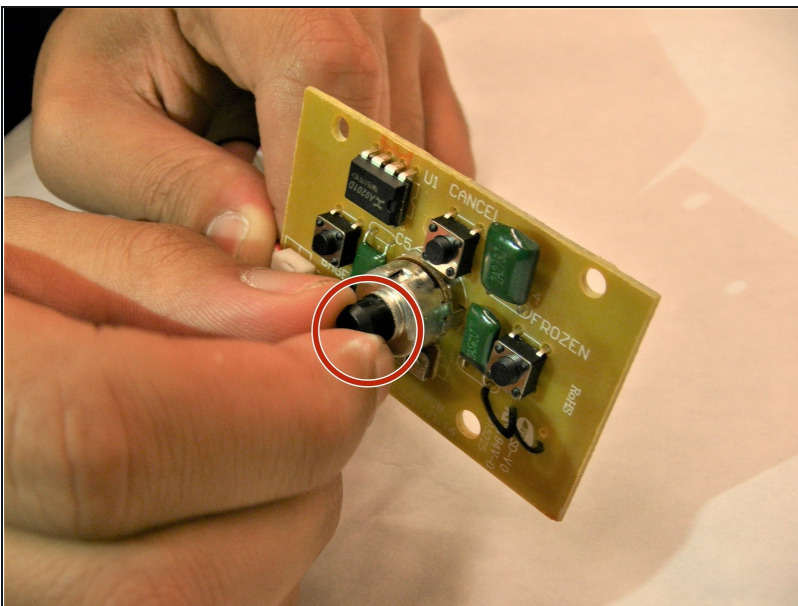

- Turn the knob on the circuit board left or right to adjust the browning dial.

To reassemble your device, follow these instructions in reverse order.