



HP Compaq nc8430 LCD Screen Replacement

This guide will provide information on how to replace a damaged or cracked LCD screen on the HP Compaq nc8430.

Written By: Corey Nickerson II




INTRODUCTION

This guide will provide information on how to replace the LCD screen if you ever experience black out screen issues.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Pry Bar](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery

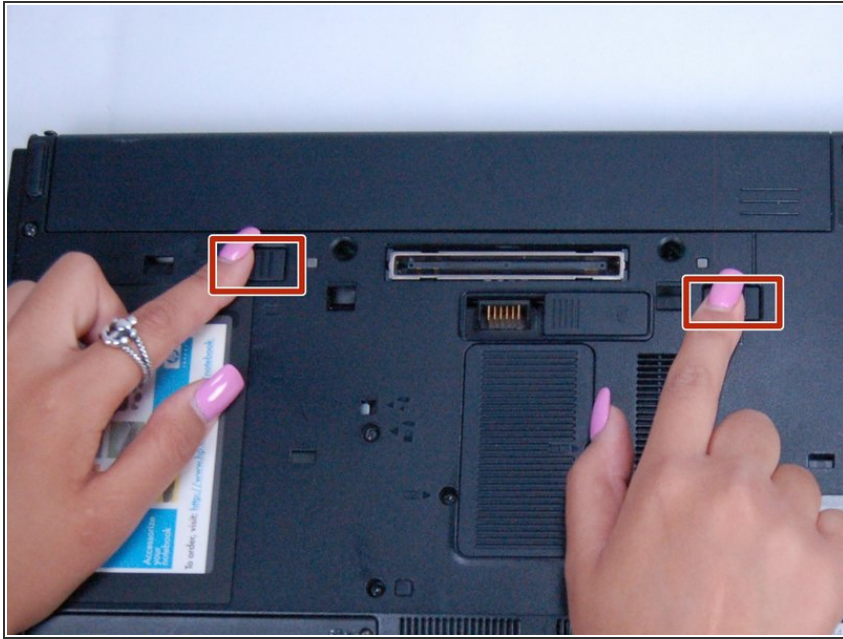

- ⚠ Completely shut down the device and unplug any adapters and cords connected to the device.
- Carefully flip the device over so that the bottom is facing up.
- Slide both of the latches to the left.

Step 2




- Slide up against the three lines the battery has.

Step 3




- Slide the battery up and away from the laptop.
- ⚠ Slowly remove the battery to prevent any connectors from getting damaged.

Step 4 — LCD Screen

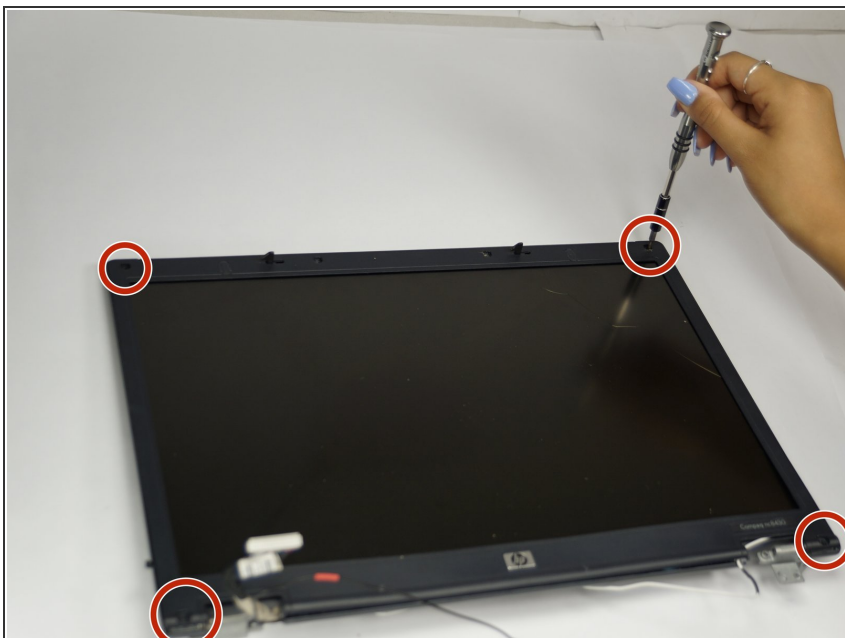


- Remove the four 1.2mm Phillip #1 screws circled.
- The laptop may have rubber covers over the screws,. Remove them using a pointed tool to pry them out.

Step 5

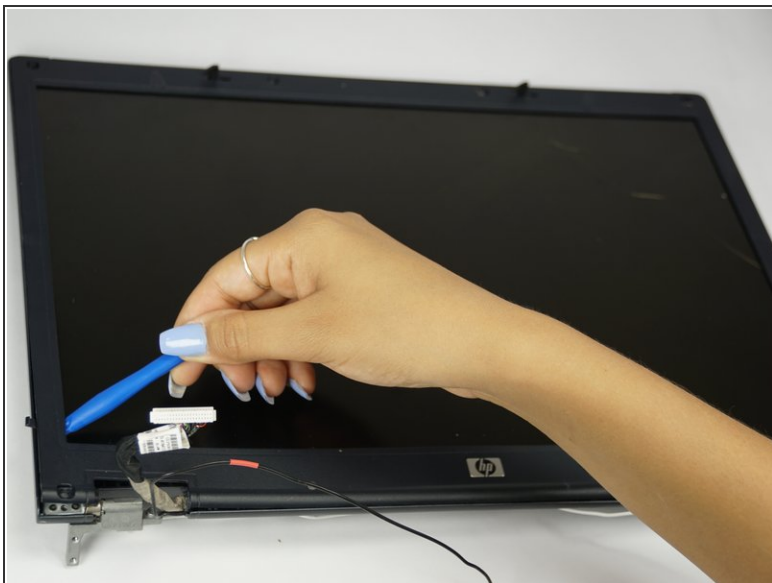


- Pry up the plastic screen cover with the pry tool.
- Once a corner of the plastic screen cover is lifted, slide the pry tool around the entire screen until the screen is completely lifted from the base.

Step 6

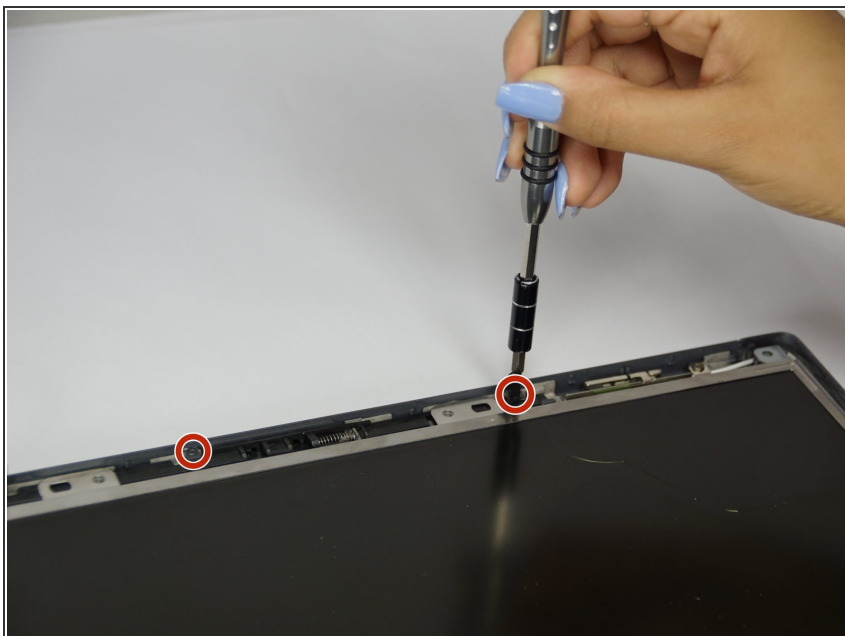

- Remove the 1.2 Phillips screws circled.

Step 7

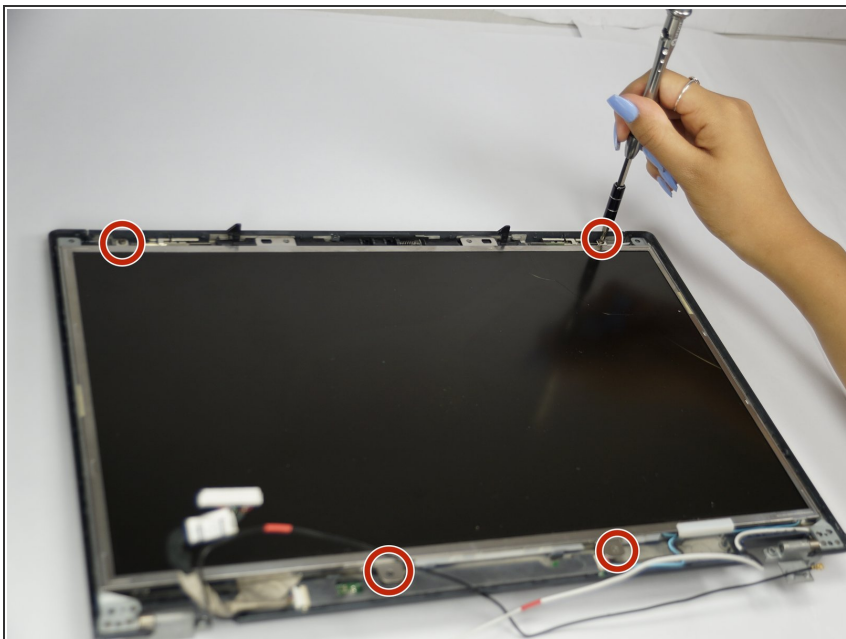


- Remove the four 1.2mm Phillip screws circled.

Step 8




- Gently lift the monitor, from the base of the laptop.
- The laptop will still be connected to the monitor wires located at the bottom of the screen.

Step 9

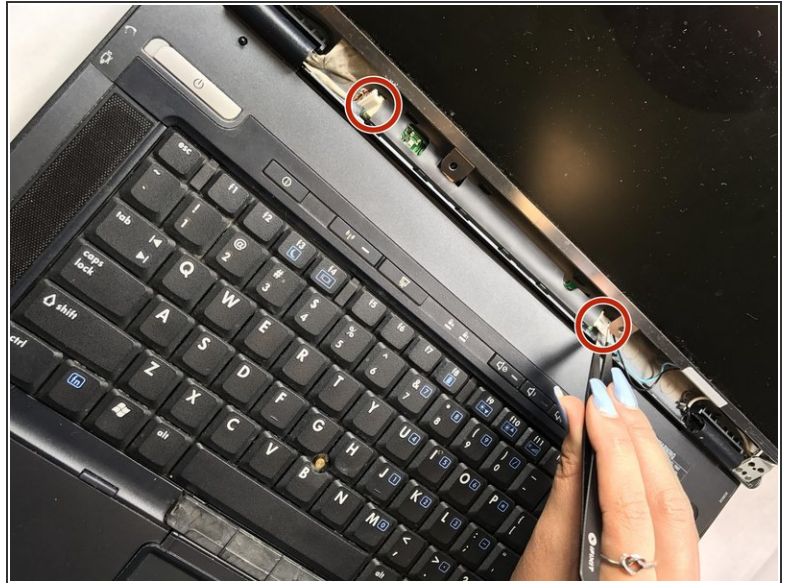

- Locate the video cable wires.
- Gently remove the video cables from the sensor board with tweezers.

Step 10

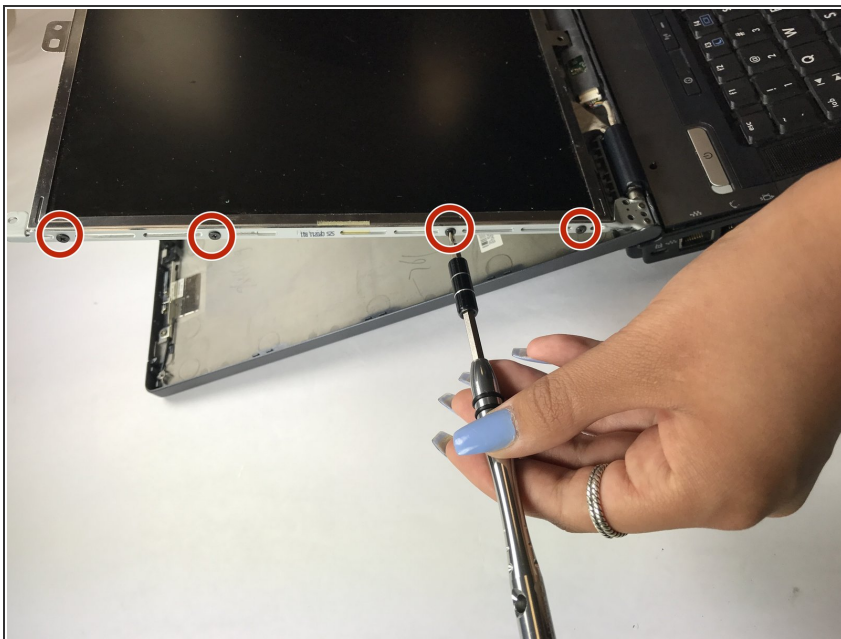

- All cables should be disconnected from the sensor board. Remove the eight 2mm Phillip screws attaching the bezel to the side of the monitor.
- Attach the bezel to the new replacement screen.

To reassemble your device, follow these instructions in reverse order.