




# Acer Chromebook C740 Solid State Drive Replacement

Replace the solid state drive (SSD) for the Acer Chromebook C740.

Written By: Flor De La Rosa

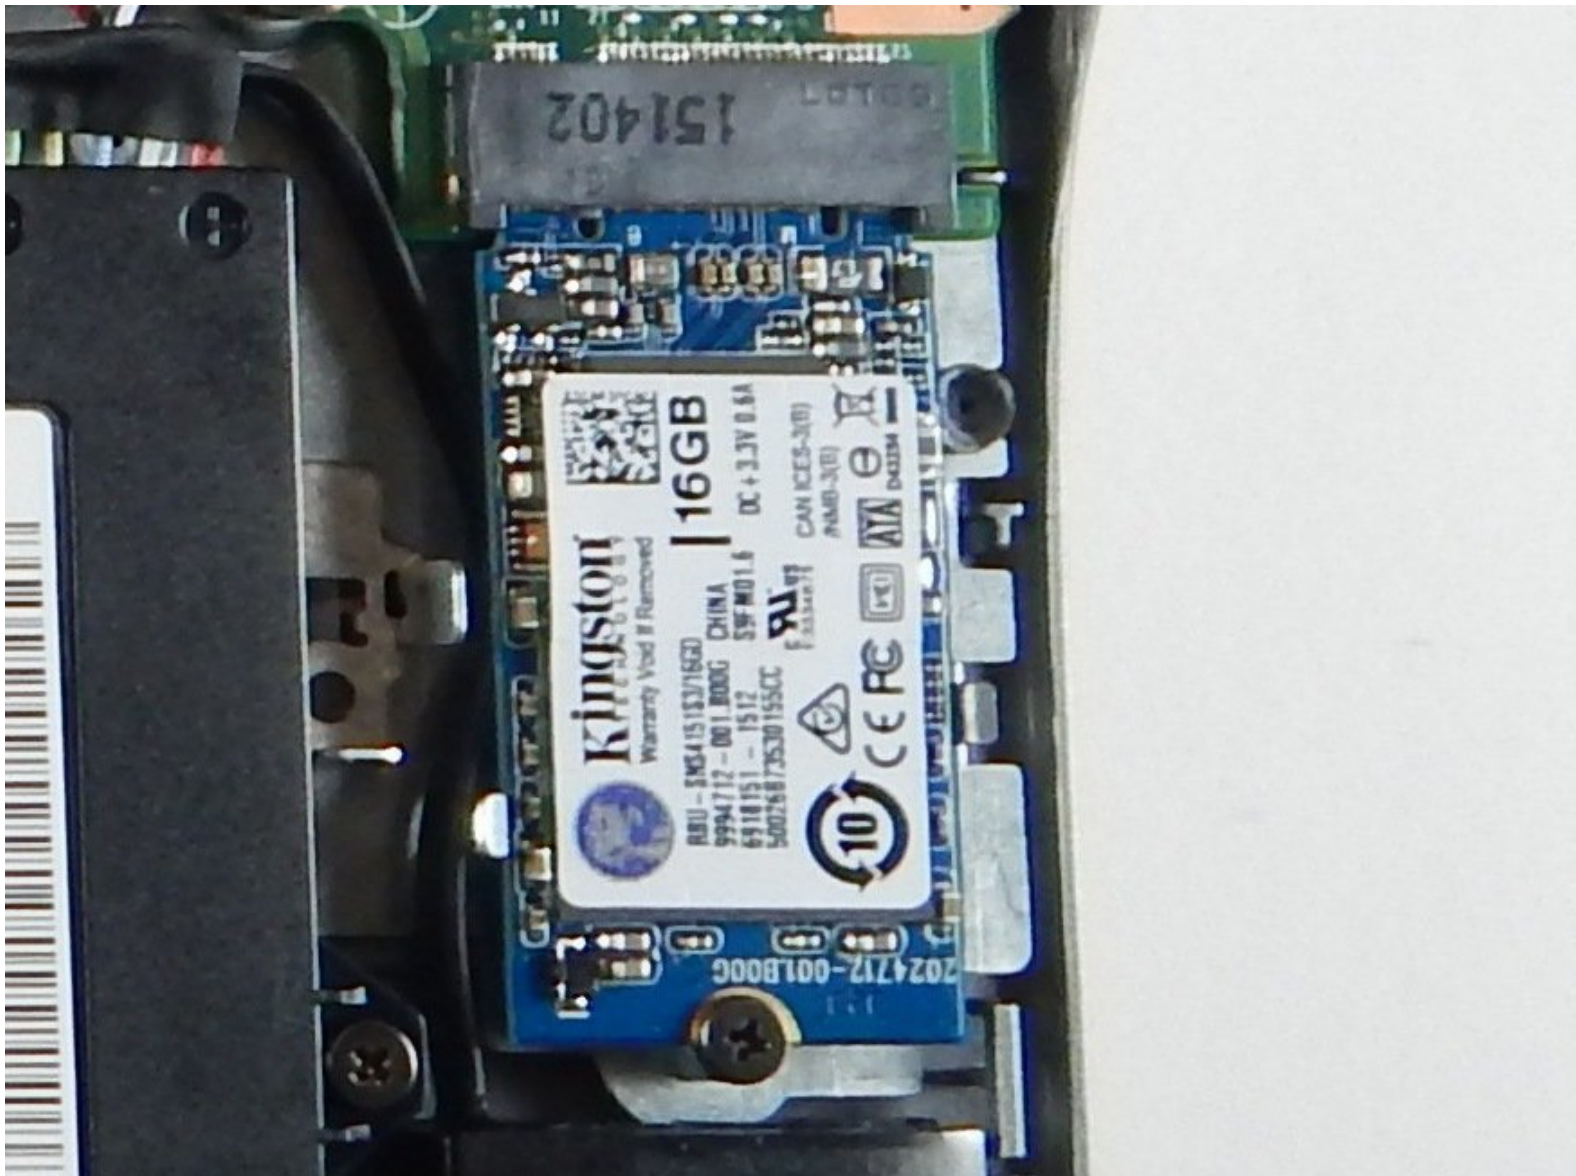

## INTRODUCTION

The solid state drive replacement for the Acer Chromebook C740 requires removing the back panel and removing one screw. The solid sate drive stores data from the laptop.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



### PARTS:


- [Acer Chromebook C740/C720/C720P SSD Drive](#) (1)

## Step 1 — Back Panel



- Power down the Chromebook and disconnect the power adapter.

## Step 2

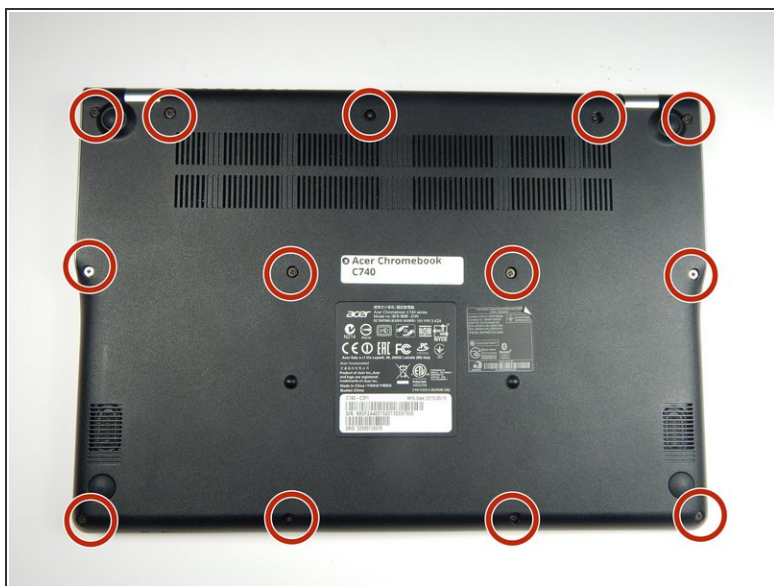

- Place the chromebook bottom side up on a flat surface.
- Remove the thirteen 7 mm screws with a Phillips #0 screwdriver.




## Step 3



- Insert the plastic opening tool into the slit near the hinges and pry upwards to lift the back panel.
- ❗ Applying pressure may be necessary. A click indicates the panel is ready to come off.

## Step 4 — Solid State Drive

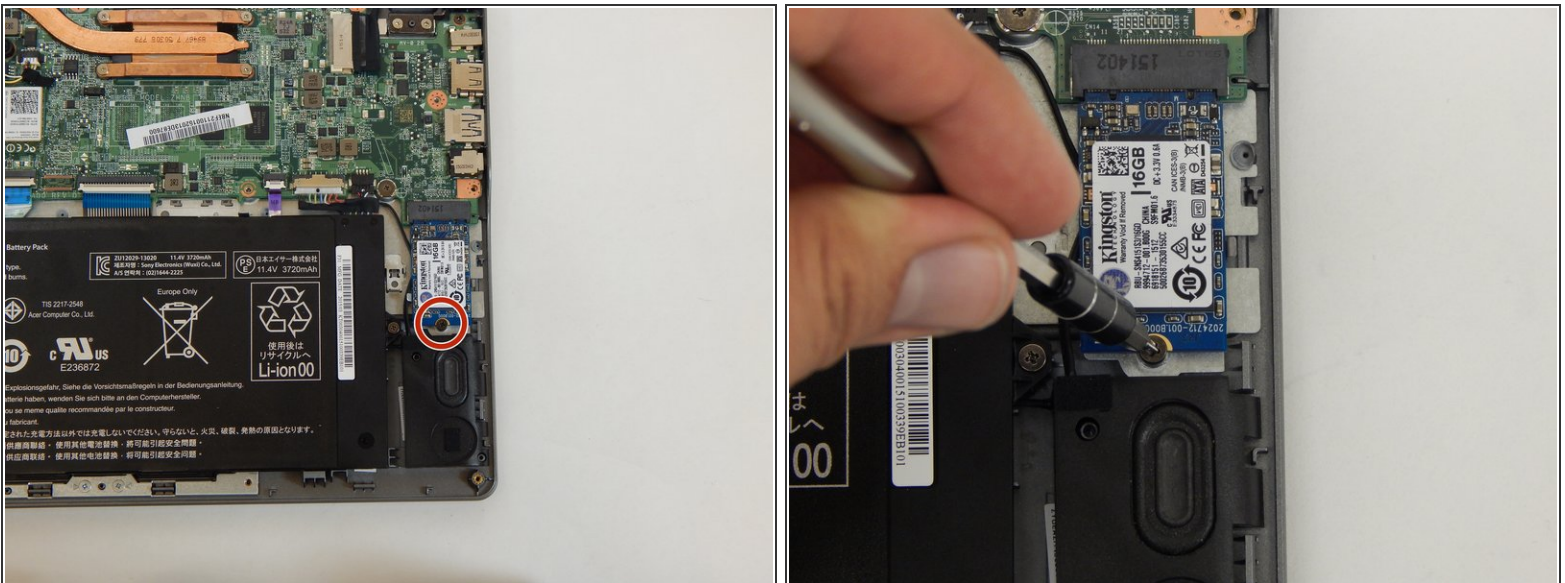

- Remove the 3.75 mm screw with a Phillips #0 screwdriver.

## Step 5



- Unplug the solid state drive.

To reassemble your device, follow these instructions in reverse order.