



Panasonic Lumix DMC-FX07 Back Cover Replacement

Bring back the back of your camera to its former and more beautiful self.

Written By: Karissa




INTRODUCTION

This guide will show you how to remove the back panel of your camera.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery

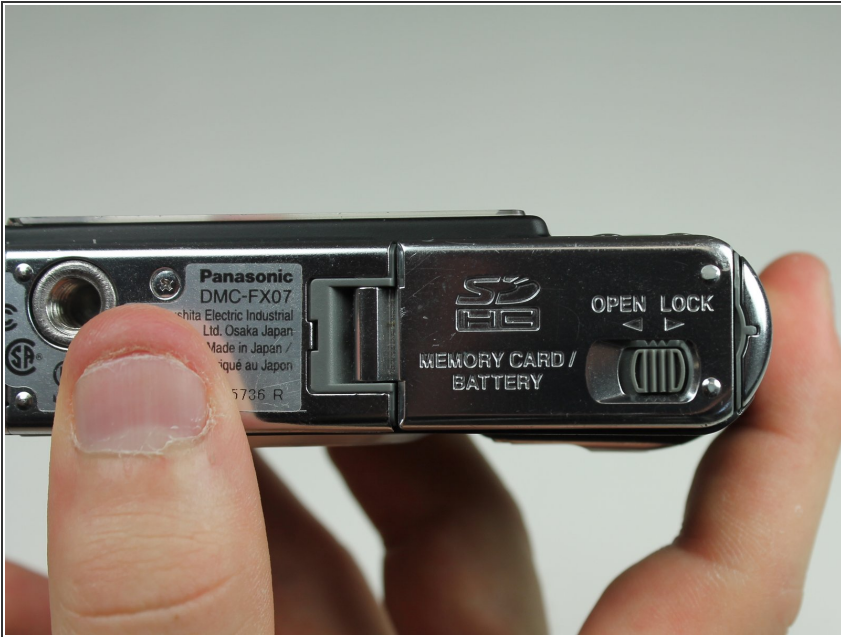

- Move the switch on the battery door to the Open position.
- ⓘ The door will automatically swing open after you let it go.

Step 2



- Push the small gray tab on the top right corner to the left. The battery will pop out slightly.
- Keep your finger clear of the battery when it pops out.

Step 3 — Memory Card



- Push the memory card in and let go.
- ❗ The memory card will pop out slightly.
- Pull out the memory card.

Step 4 — Back Cover



- Unscrew the small screws on the sides of the camera.
- ❗ The screws on the left side(#00P, 4.7mm) are longer than the screw on the right side(#00P, 3.3mm).



Step 5



- Unscrew the three small screws on the bottom(#00P, 3.3mm).




i The bottom will fall off.

Step 6

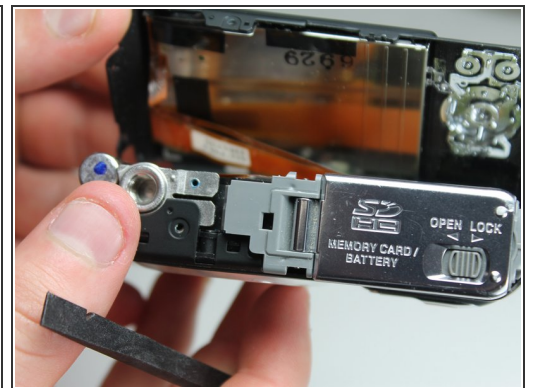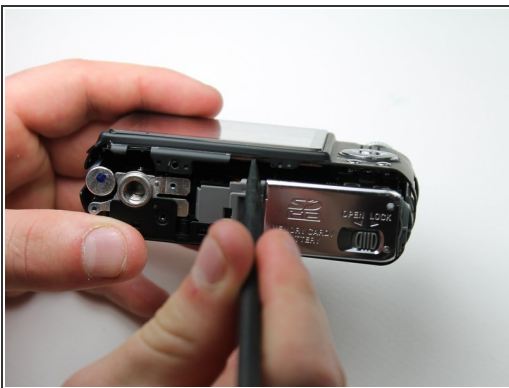

- Lift up the bottom back cover by prying the bottom edge with the spudger.
- Gently lift up the back cover with your hand from the bottom to the top.

Step 7

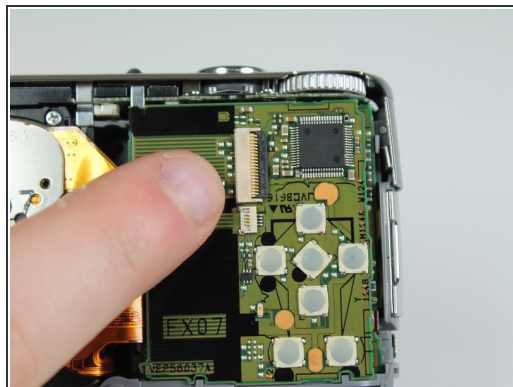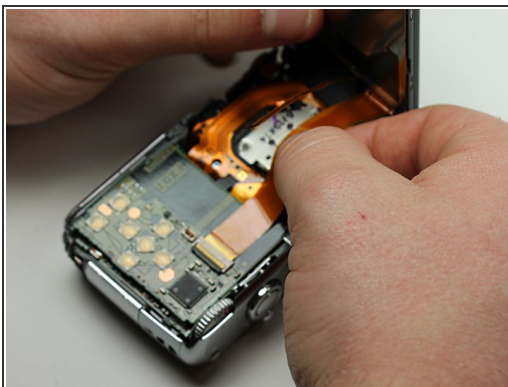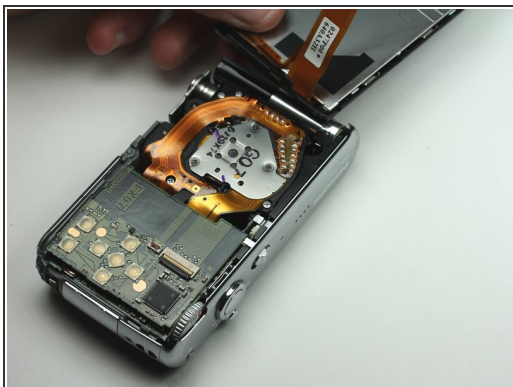

- Lift the tabs on the ZIF connectors.
- The ribbon cables should easily come out of the ZIF connectors.

To reassemble your device, follow these instructions in reverse order.