



# Fugoo Style XL Speaker Replacement

The Fugoo Style XL has small core speakers...

Written By: James Gifford



---

## INTRODUCTION

The Fugoo Style XL has small core speakers resting within the casing that are remarkably easy to remove.

---

### TOOLS:

- [Tweezers](#) (1)
  - [64 Bit Driver Kit](#) (1)
-

## Step 1 — Fabric Case



- Using your hand, unscrew the large screws underneath the speaker.

## Step 2



- Using your hand, gently lift the large plastic tab secured to the rubber holding.
- After lifting the tab, slide the speaker out of its case.

**⚠ Ensure the tab is lifted only slightly above the rubber holding. Bending the plastic tab too far could result in damage to the case.**

### Step 3 — Speaker



- There are 8 screws (4 on each side) holding covers that conceal the bass speakers. Remove these 3mm screws using a #2.0 Hex screwdriver.

### Step 4




- Using your hand, pull the covers away from the speaker.

## Step 5



- Using a #2.0 Hex screwdriver to unscrew the 8 12mm screws depicted.


## Step 6

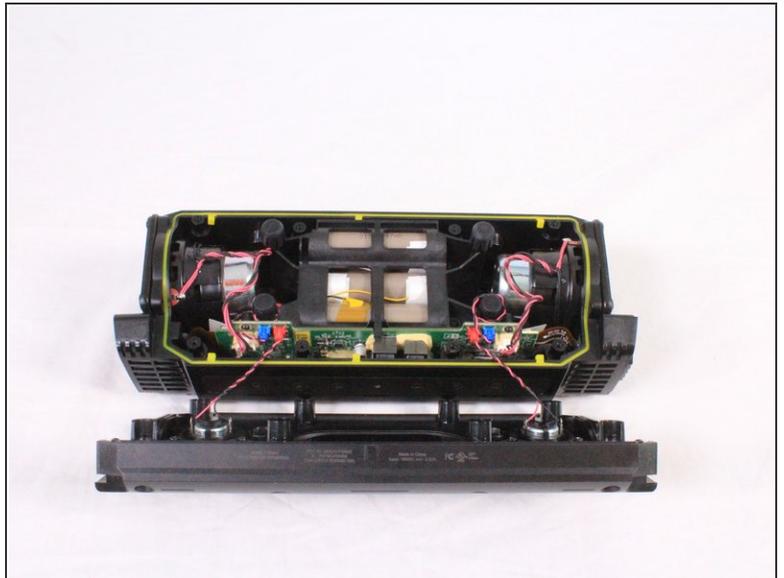

- Gently pull apart the front casing from the back casing.

**⚠ Speakers on the front casing have wires directly connected to the motherboard. Pulling off the casing with force will result in damage.**

## Step 7

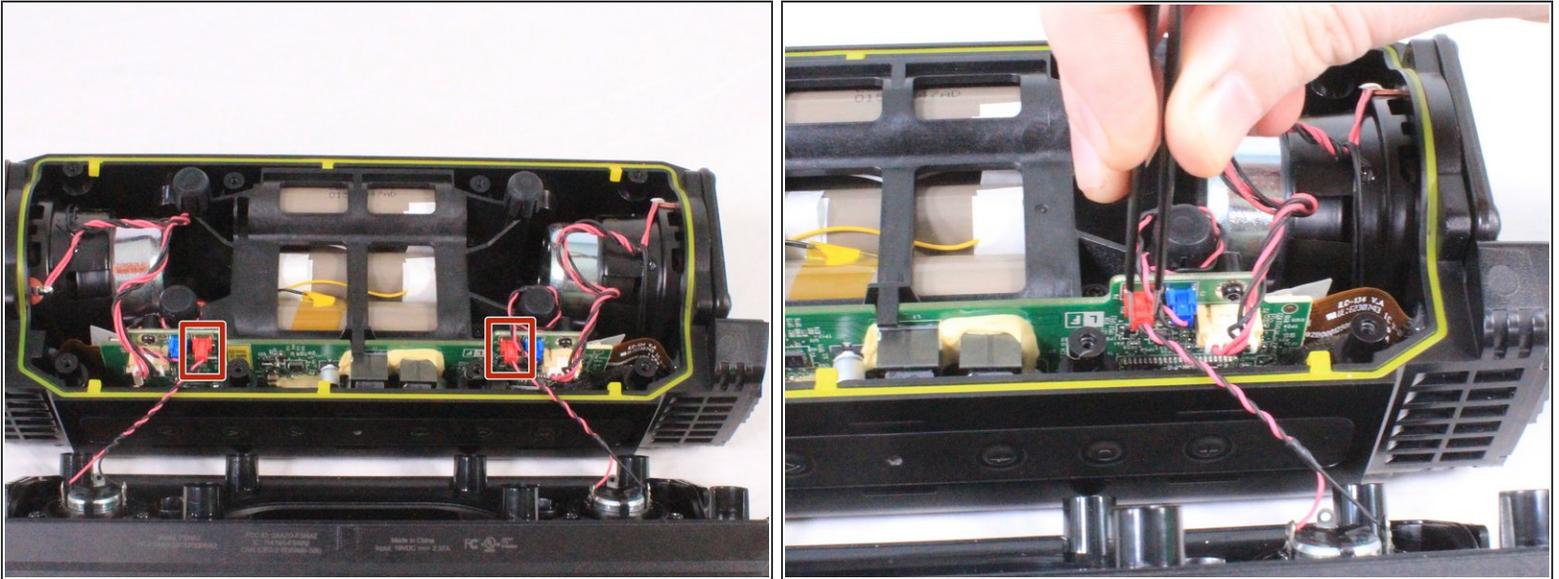

- Using a pair of tweezers or your hand, carefully remove the red bundled cable connectors from the motherboard.

## Step 8



- Each speaker is attached to the casing with 3mm screws. Remove the screws using a #2.0 Hex screwdriver.
- Once the screws are removed, carefully lift the speaker from the casing.

To reassemble your device, follow these instructions in reverse order.