



Asus Q502LA-BSI5T14 Battery Replacement

Replace a dead or malfunctioning battery to bring full power back to your laptop.

Written By: Mary Kounelas



INTRODUCTION

If your Asus laptop is insufficiently holding a charge or having issues properly turning on or off, it may be time to replace the battery. Make sure that you replace the current battery with an Asus B41N1341 battery pack to avoid any chance of the laptop overheating or overcharging.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- ⓘ Ensure your device is powered off before starting.
- Flip the laptop over and remove the ten 10 mm Phillips #1 screws securing the back panel.

Step 2




- Carefully insert a plastic opening tool under one corner of the back panel.
- Slide the tool along the seam to gently pry the panel up and away from the device.

Step 3



- The battery is the large L-shaped block.
- Remove the five 5.5 mm Phillips #1 screws securing it.

Step 4

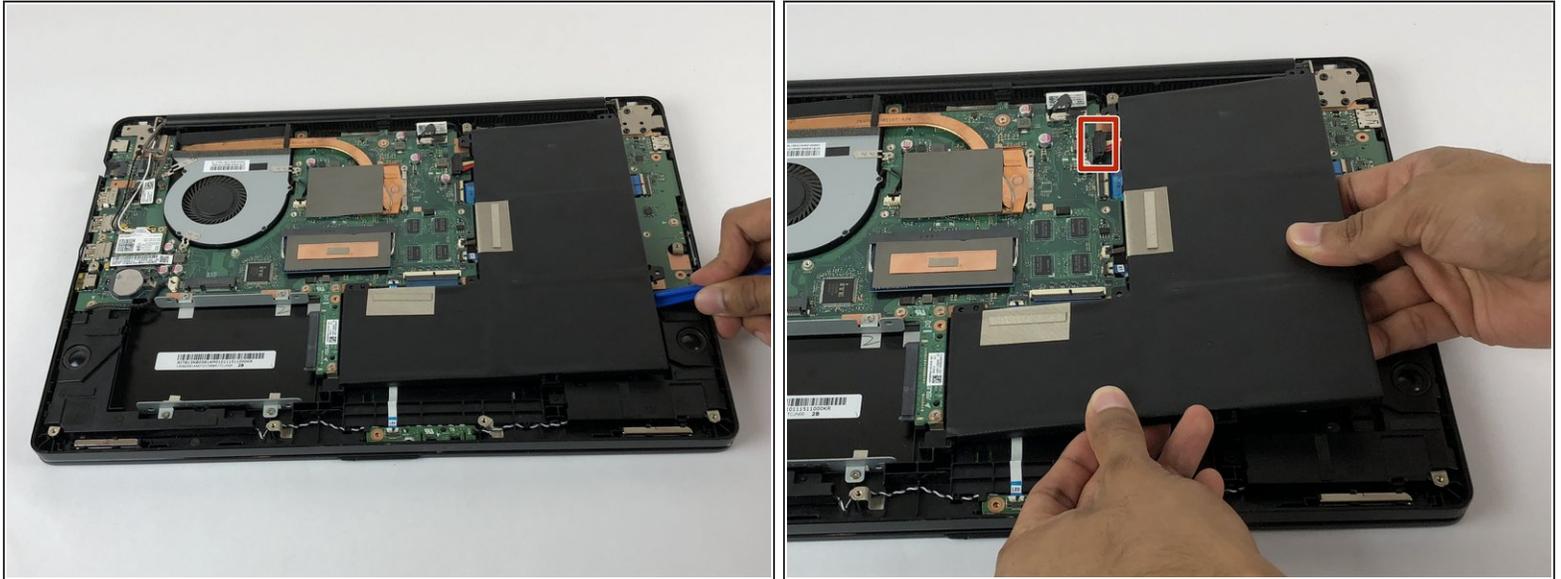

- Using a plastic opening tool, lift the battery straight upward to remove it.
- ⚠ There are a series of eight small wires connecting the battery to the motherboard. Make sure you gently lift the battery straight up to disconnect these wires and prevent damage.

To reassemble your device, follow these instructions in reverse order.