




Alienware 17 R2 Screen Replacement

One of the causes for a blank or pix-elated screen could because it is cracked. In this guide, we will show you how to replace your screen.

Written By: Luis Garcia

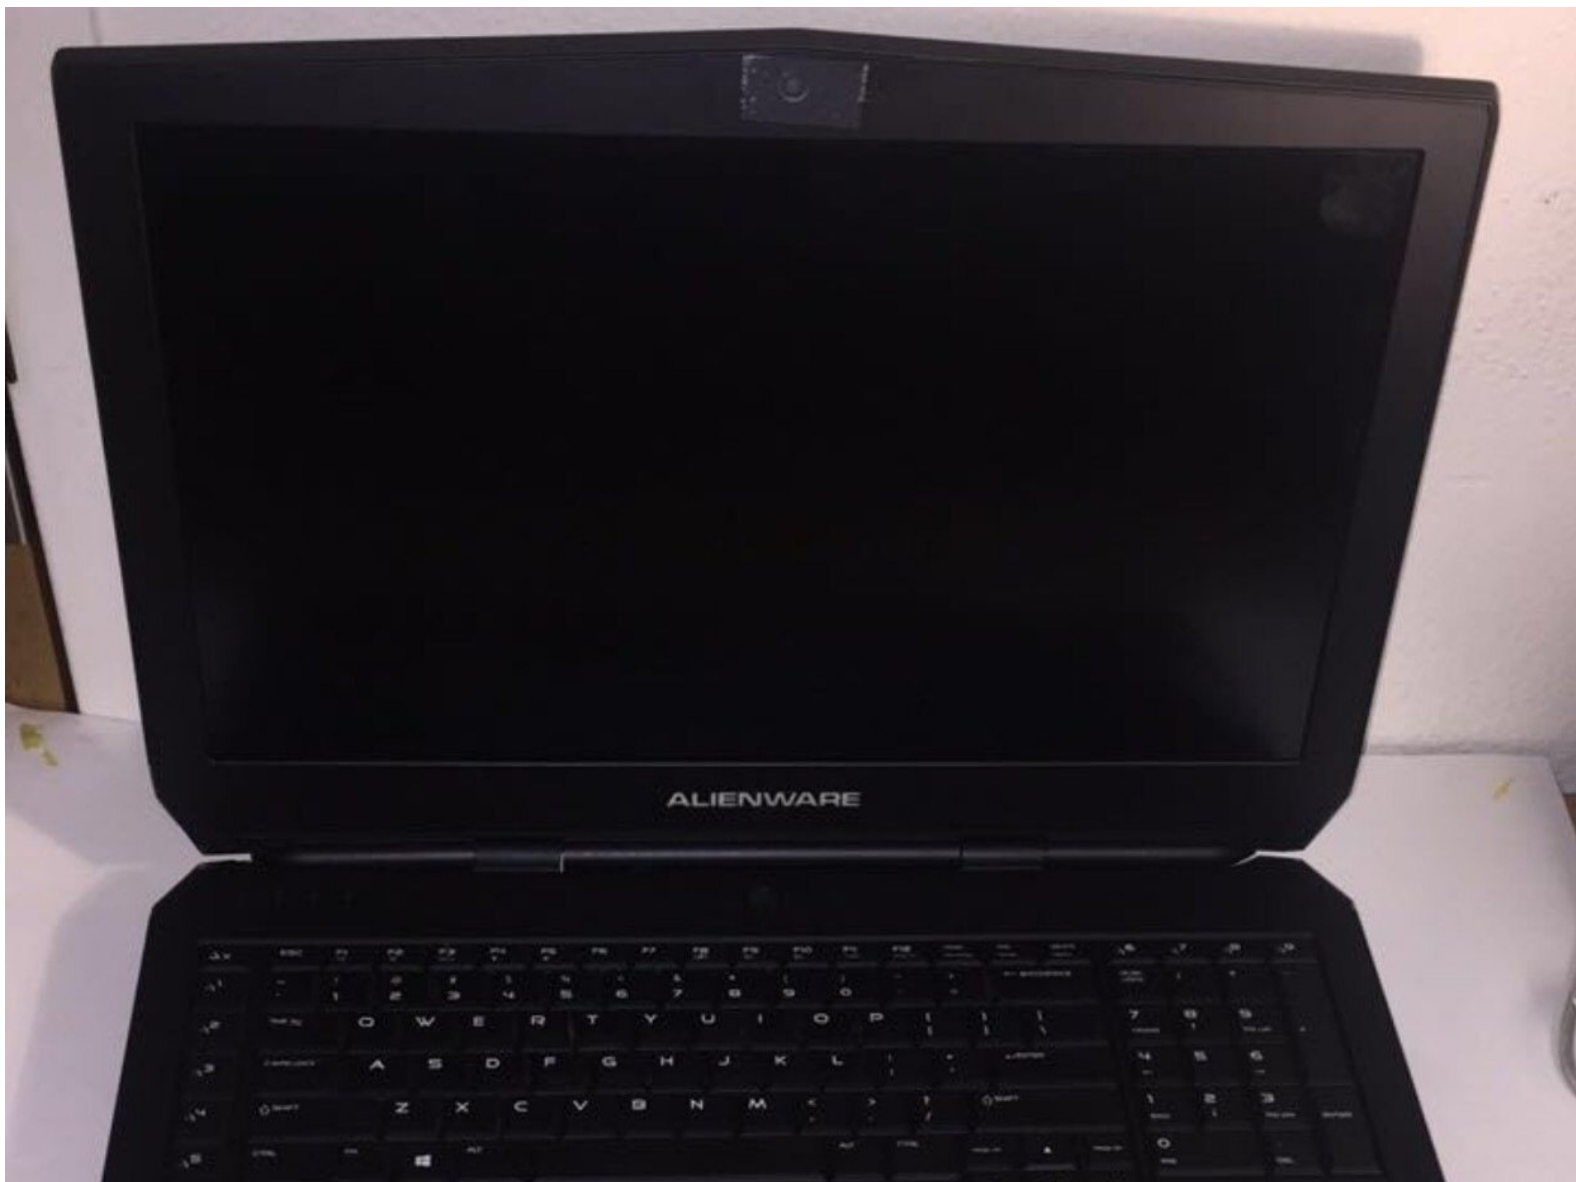


INTRODUCTION

One of the causes for a blank or pix-elated screen could because it is cracked. In this guide, we will show you how to replace your screen.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Display

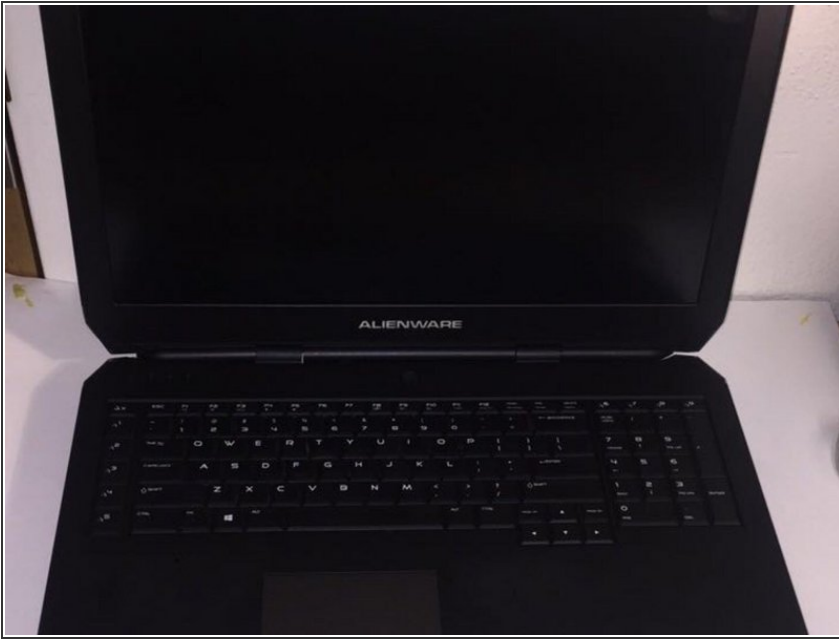


- Put the laptop on a hard surface.
- Make sure that the Alienware is not plugged into any power source.
- First, we need to unplug the battery.

Step 2

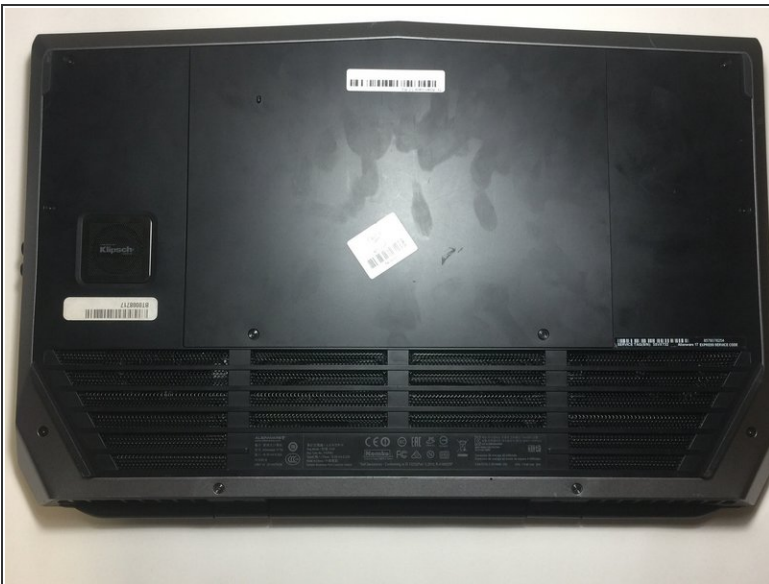




- To unplug the battery, turn the computer upside down.
- Remove the two 4mm screws from the plastic covering protecting the inner part of the laptop.

Step 3

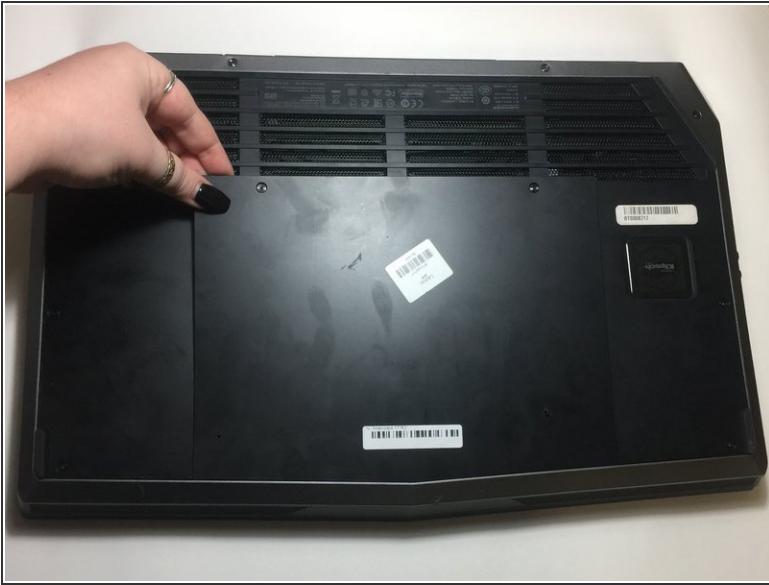



- Gently, pull the cover up and slide it off.

Step 4

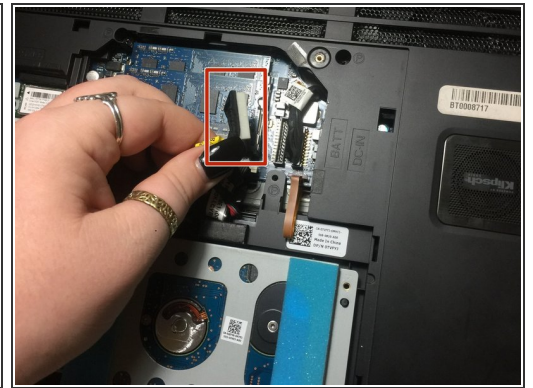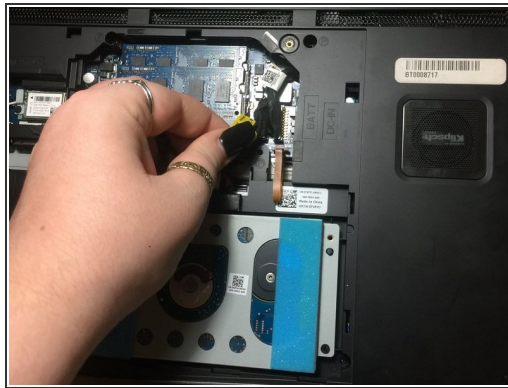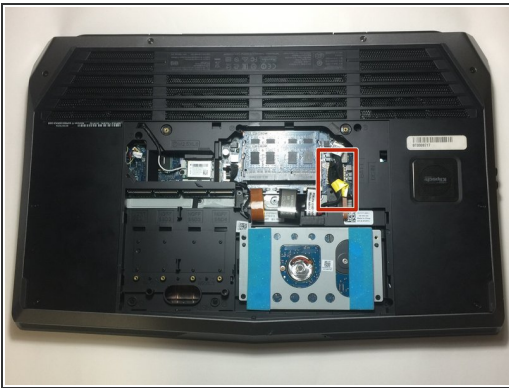

- Now, you are going to look for a yellow tag.
- Unplug the black wire that has the yellow tag.
- This will successfully disconnect your battery.

Step 5

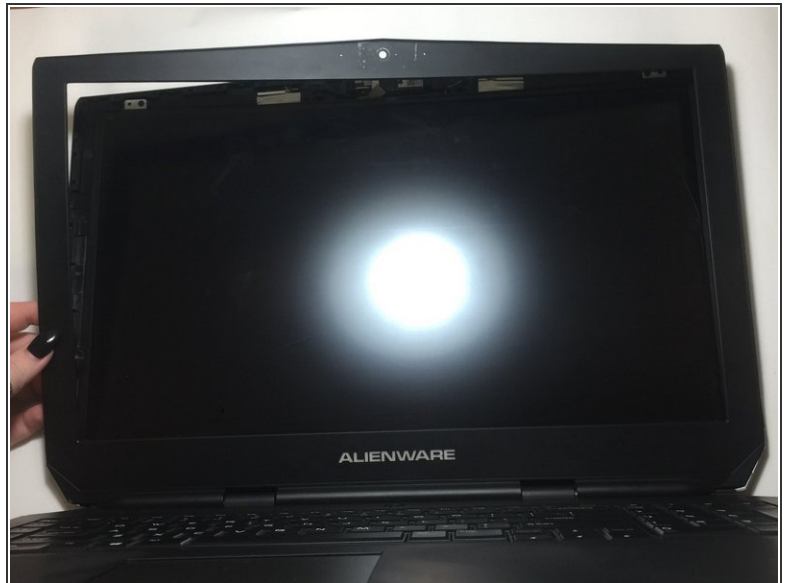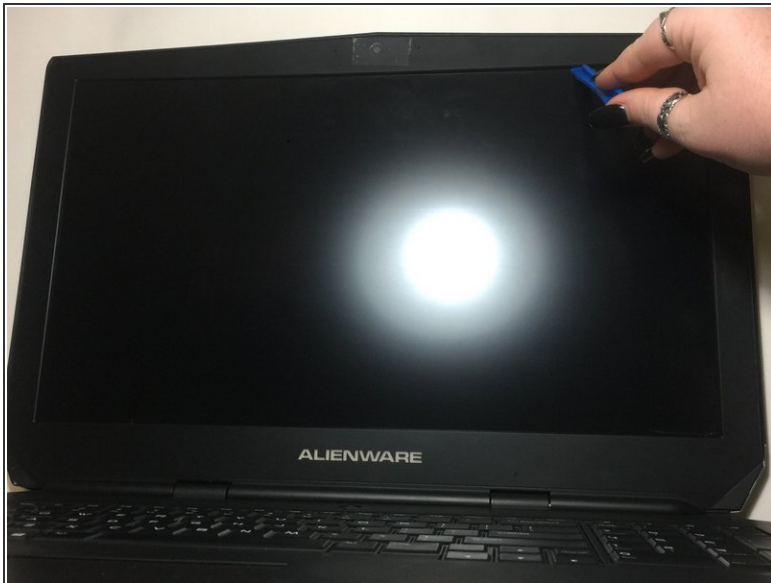


- Using the plastic opening tool, gently remove the black plastic casing from the LCD screen.
- Run the opening tool along the inner side of the computer where the screen and the plastic covering meet.

Step 6




- Now you will unscrew the 2mm screws on the top and bottom side of the screen.

Step 7

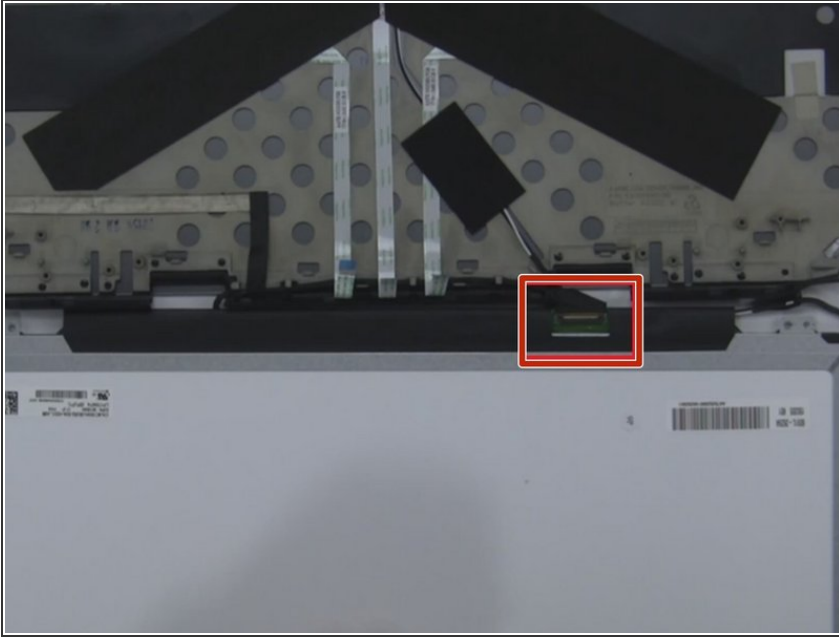

- Tilt the screen forward towards the keyboard.
- Disconnect the plug that is connecting the screen to the main body.

Step 8

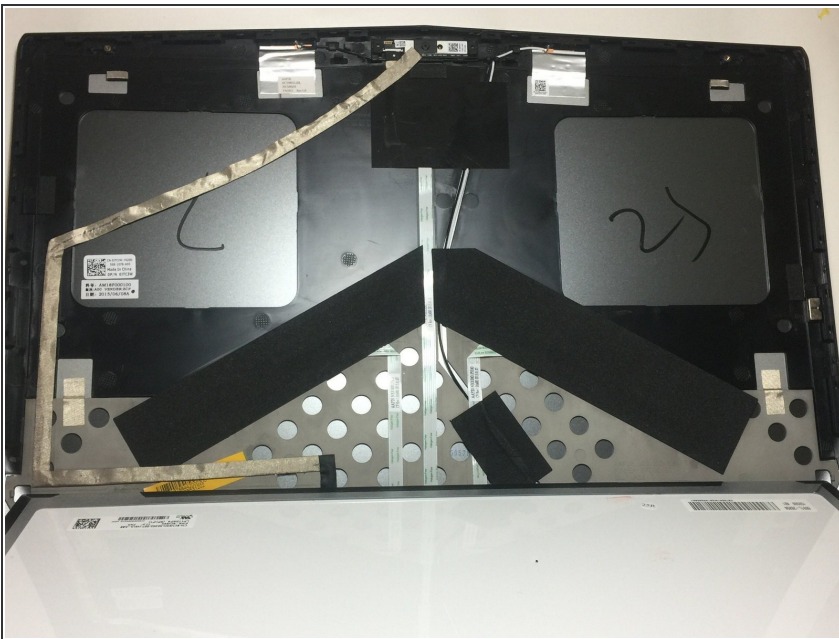

- Gently, lift the display away from the laptop.

To reassemble your device, follow these instructions in reverse order.