



Acer Chromebook C720-2827 Back Panel Assembly Replacement

How to detach and replace a broken back panel on the Acer Chromebook C720-2827.

Written By: Jason Bechtold




INTRODUCTION

This guide explains how to detach the back panel assembly. Once the back panel assembly is detached the rest of the internal parts can be accessed.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Back Panel Assembly

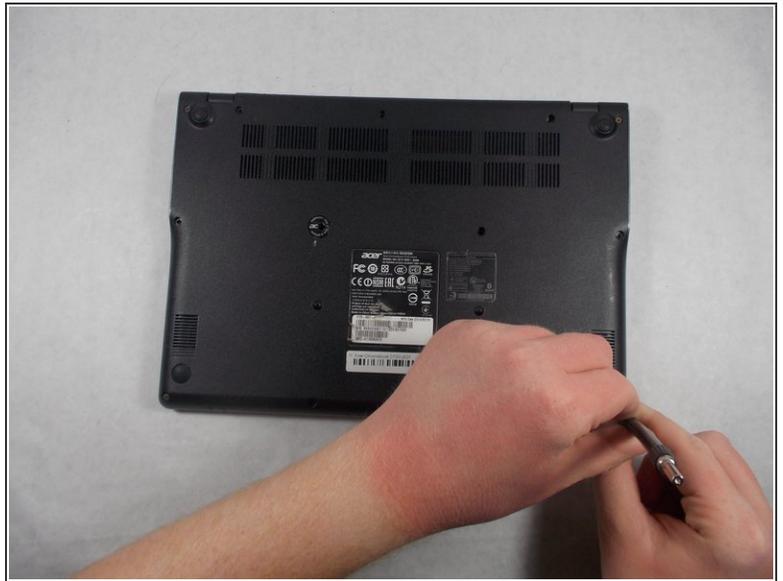

- Remove the thirteen 6.0mm screws on the back panel using your Phillips #1 screwdriver.

Step 2

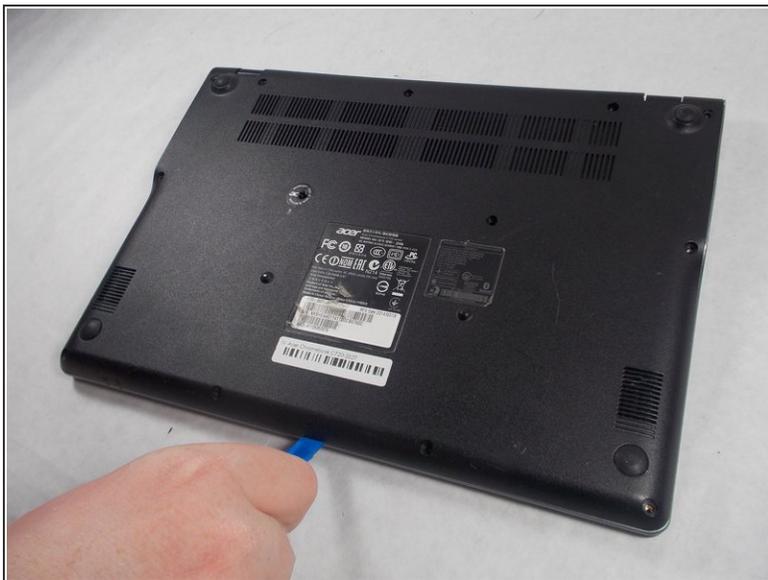

- Pry the back panel open with the plastic opening tool.

To reassemble your device, follow these instructions in reverse order.