



DualShock 4 CHU-ZCT2U Buttons Replacement

Written By: Michelle Joseph



TOOLS:

Phillips #00 Screwdriver (1)

iFixit Opening Tool (1)

Tweezers (1)

PARTS:

DualShock 4 Controller D-Pad Button Cover (1)

DualShock 4 Controller Action Button Covers (1)

DualShock 4 Controller Home Button Cover (1)

DualShock 4 Controller Right Trigger Button Covers (1)




DualShock 4 Controller Left Trigger Button Covers (1)

Step 1 — Outer Shell






- Unscrew the four 6.5mm screws, using a Phillips-Head screwdriver.
- Pry the two halves of the shell apart using a plastic opening tool.
- ① Be careful, as there will be a ribbon connecting the inner workings of the controller. It will not separate into two parts just by pulling apart the shell.

Step 2

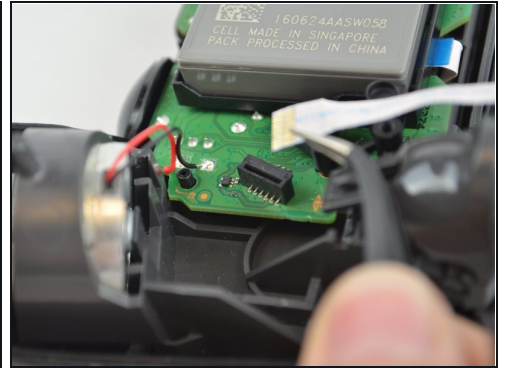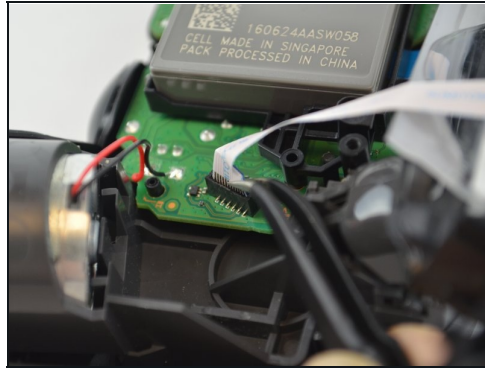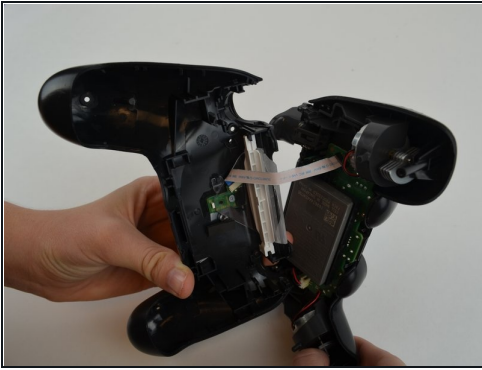


- Pull the ribbon cable out of the motherboard port to fully separate the two halves, using a pair of tweezers.

Step 3 — Battery

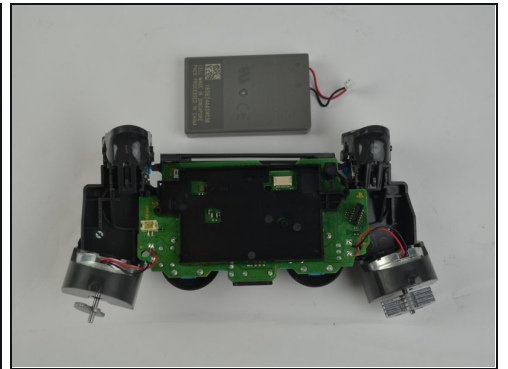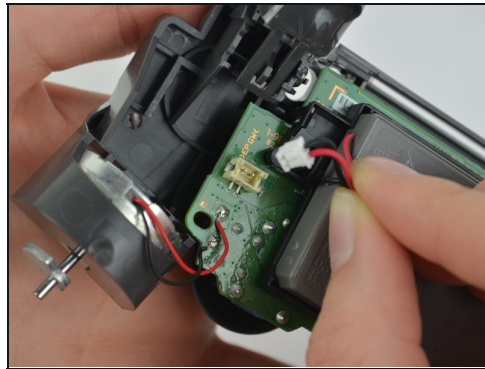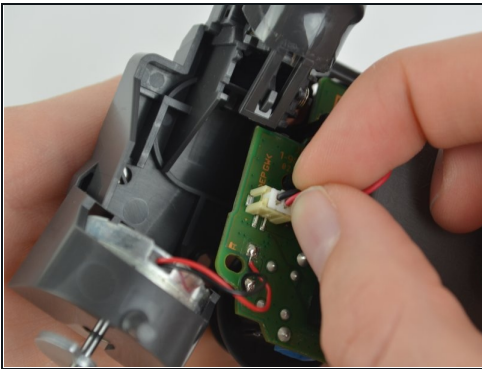


- Unplug the black and red wires from the power port located on the motherboard.
- Remove the old battery from the controller.

Step 4

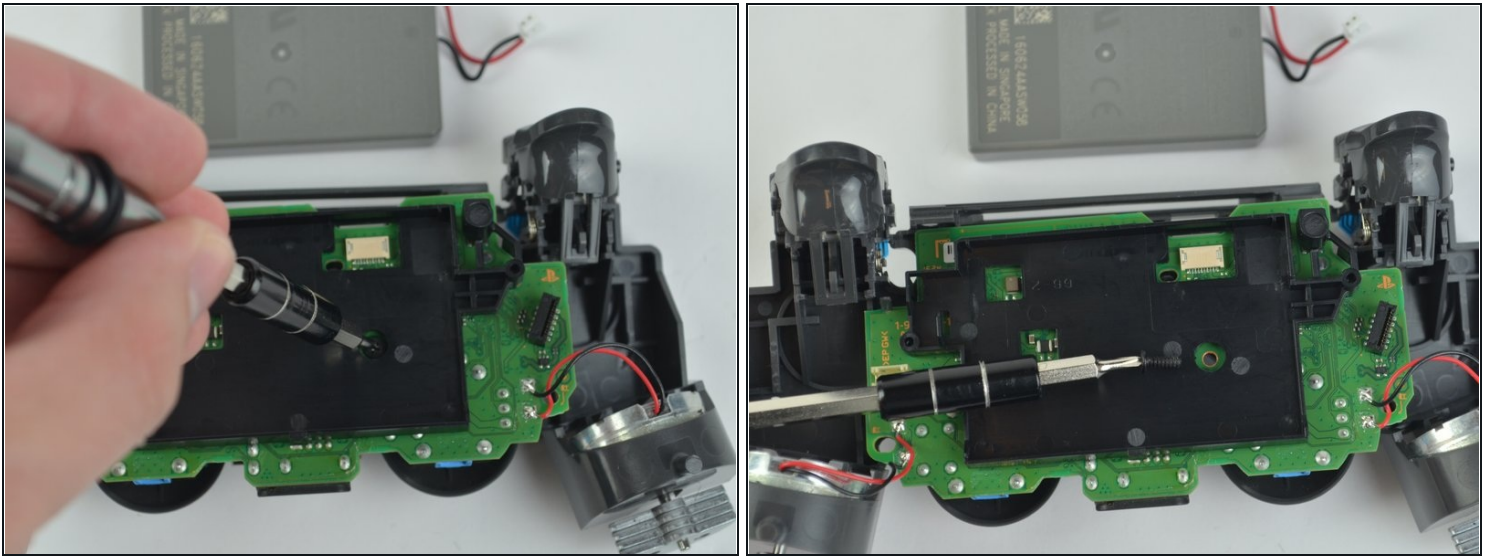


- Remove the 6.43mm screw connecting the motherboard to the inner workings of the controller, using a Phillips-Head screwdriver.

Step 5

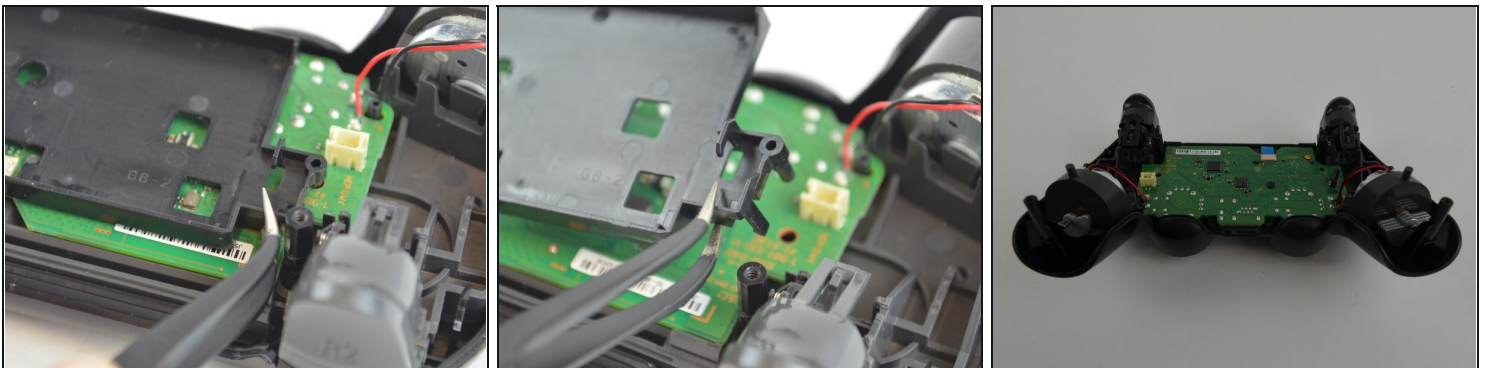

- Unhook the battery case from the motherboard, and pull it off.

Step 6 — Buttons

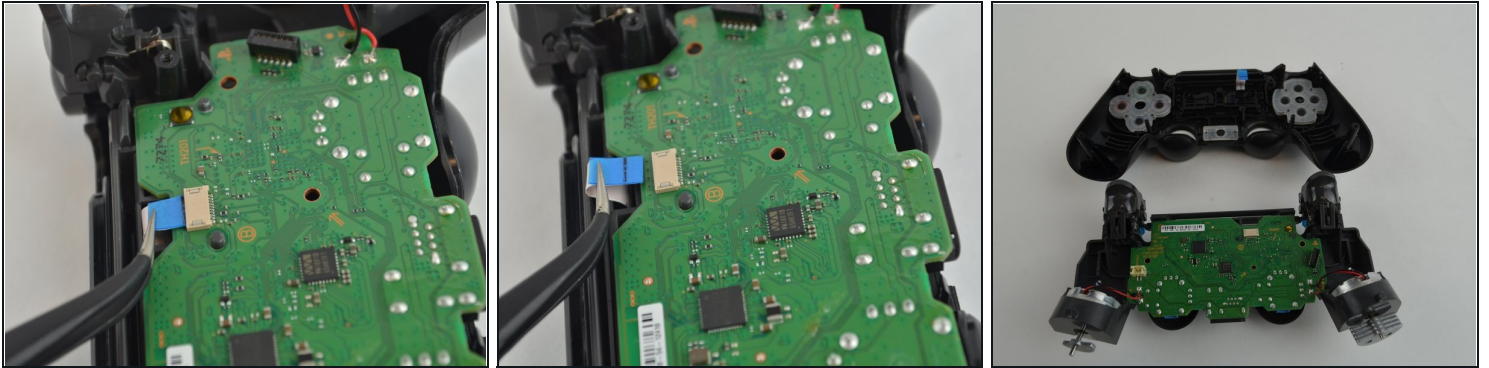

- Pull out the second ribbon cable to separate the inner workings from the top of the outer shell.

Step 7



- Remove the rubber pads that secure the buttons in place for the arrow buttons, shape buttons, and Playstation Home button.
- ⓘ Do not turn the front shell cover upside down after completing this step, because some of the buttons may fall out.

Step 8



- Remove the old buttons, and replace them with new ones using a pair of tweezers.

To reassemble your device, follow these instructions in reverse order.