


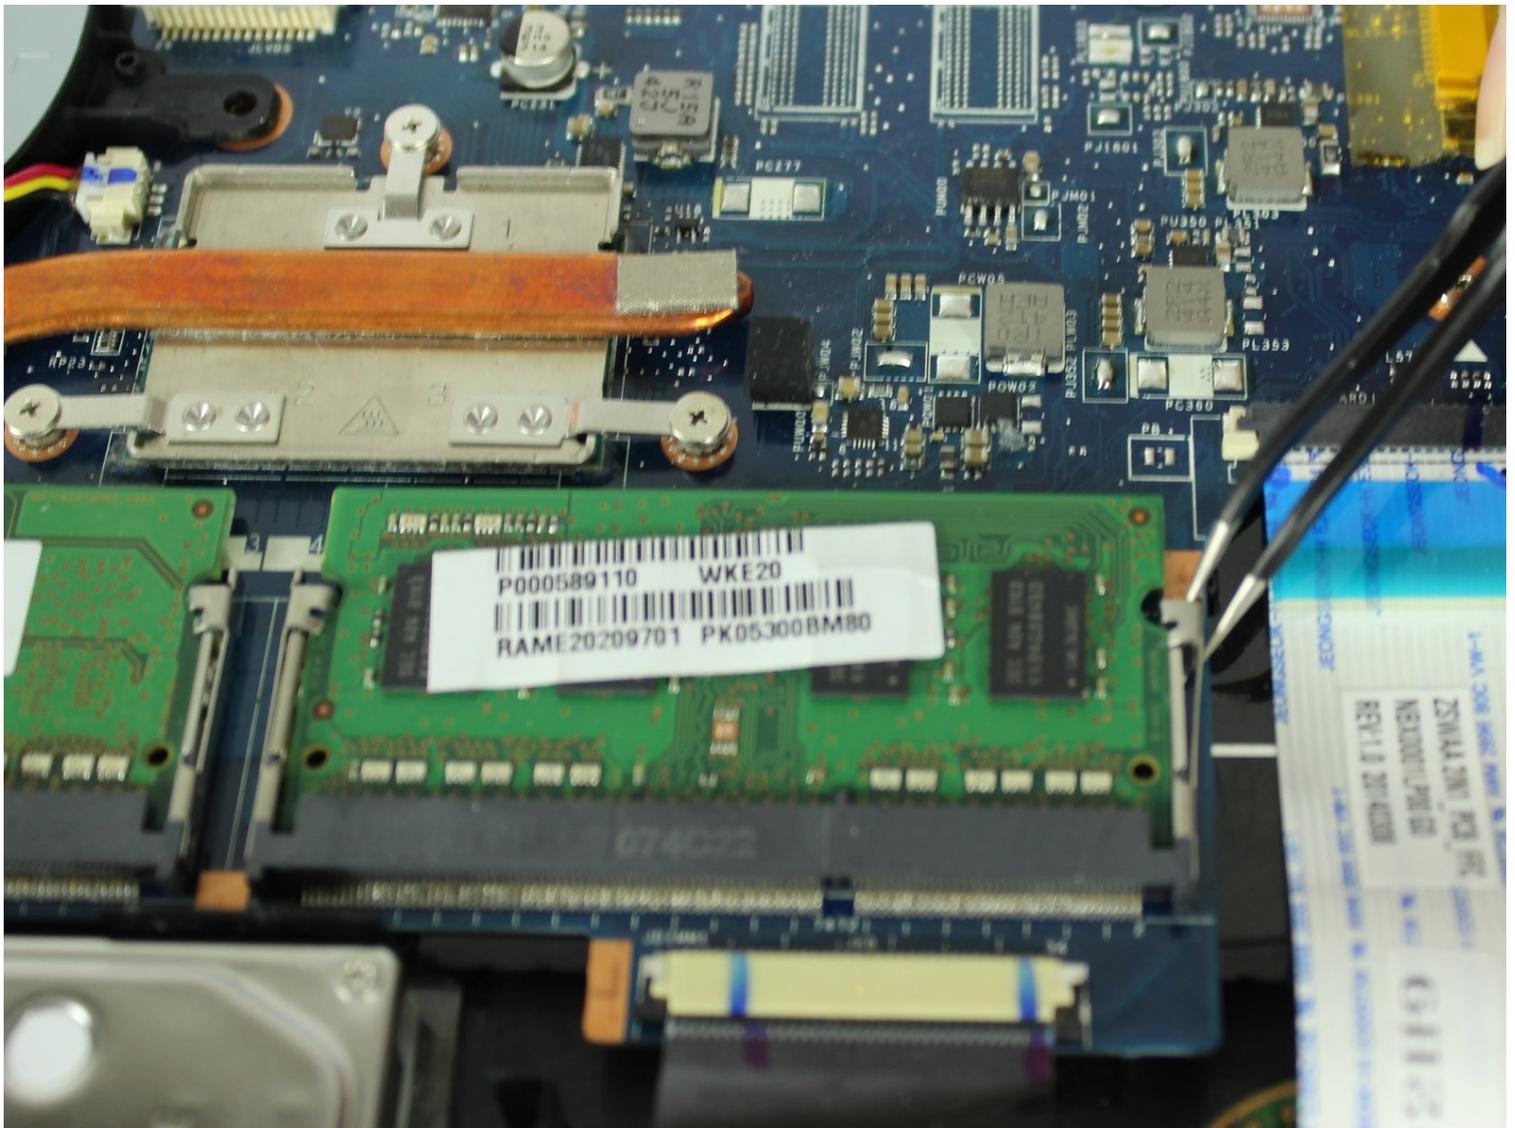

Toshiba Satellite C55-B5200 RAM Replacement

How to replace the RAM on a Toshiba Satellite...

Written By: Pablo Andrade



INTRODUCTION

How to replace the RAM on a Toshiba Satellite C55-B5200 laptop.


TOOLS:

Phillips #0 Screwdriver (1)

Tweezers (1)

iFixit Opening Tool (1)

Step 1 — Battery

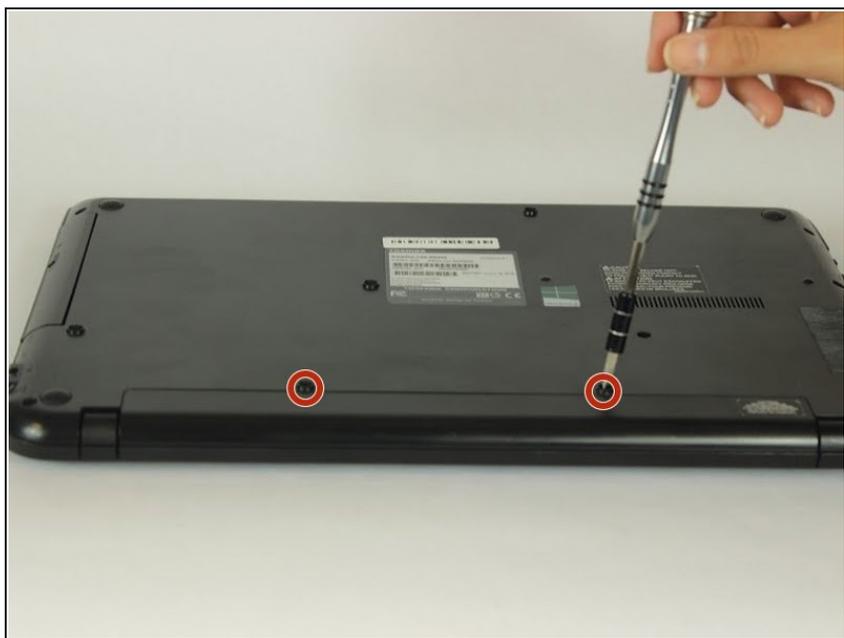


- Turn the laptop off and remove all sources of power.
- Flip the laptop over so that way the bottom is facing towards you.
- Remove the two 6.6mm Phillips #0 screws from the battery.

Step 2




- Pull the battery out of the laptop.

Step 3 — RAM

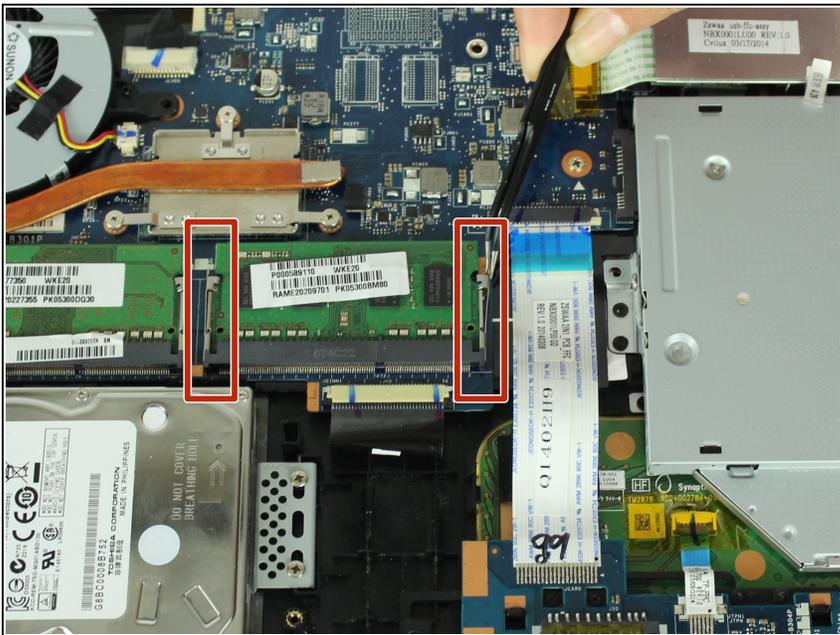

- Flex the metal retaining clips on the side of the RAM away from one another.
- ⓘ If done correctly, the RAM will pop out of its lock.

Step 4

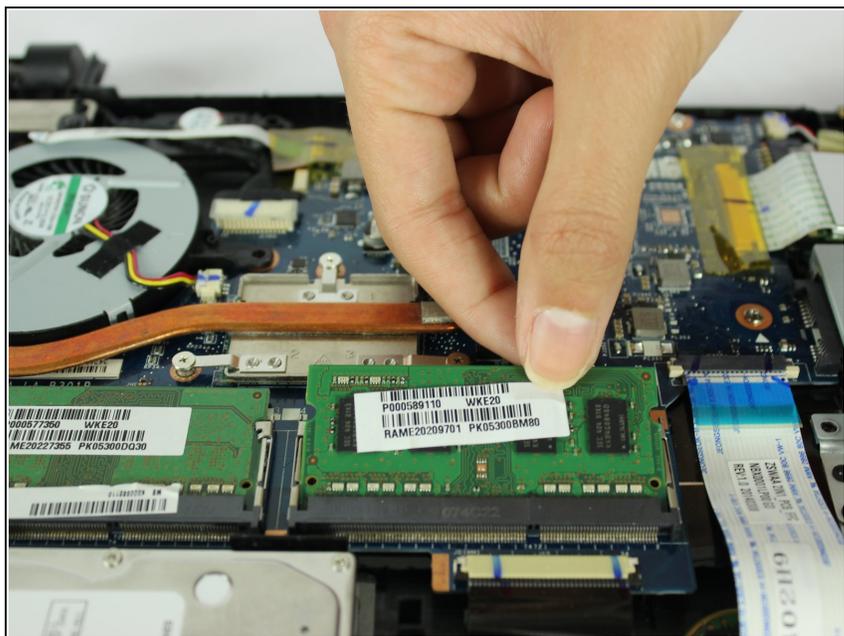

- Pull the RAM out of the socket to remove.

To reassemble your device, follow these instructions in reverse order.