




Lenovo Yoga 710-14IKB Speaker Replacement

This guide shows how to remove the speaker in a Lenovo Yoga 710-14IKB.

Written By: Bailey Murphy

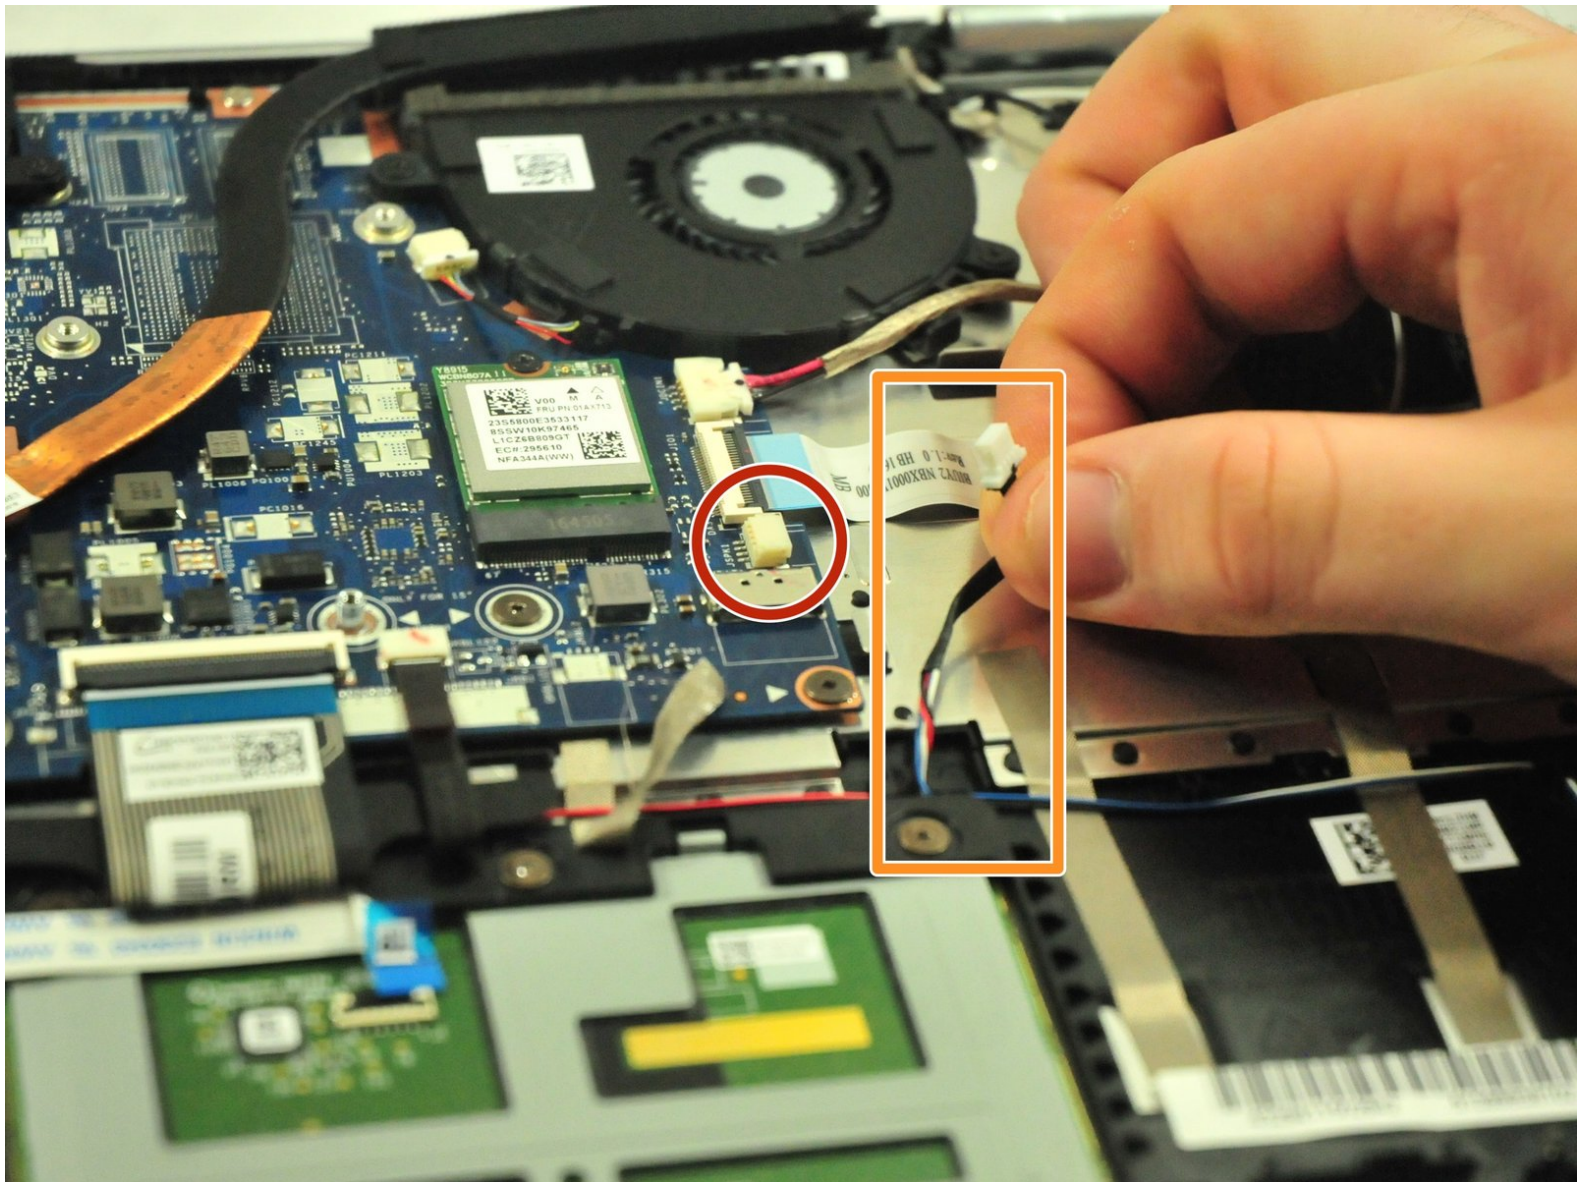

INTRODUCTION

This simple guide will show you how to remove the two speakers from a Lenovo Yoga 710-14KB.



TOOLS:


- [T4 Torx Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)



PARTS:

- [Lenovo IdeaPad Yoga 710-14 Left and Right Speakers](#) (1)

Step 1 — Back Cover

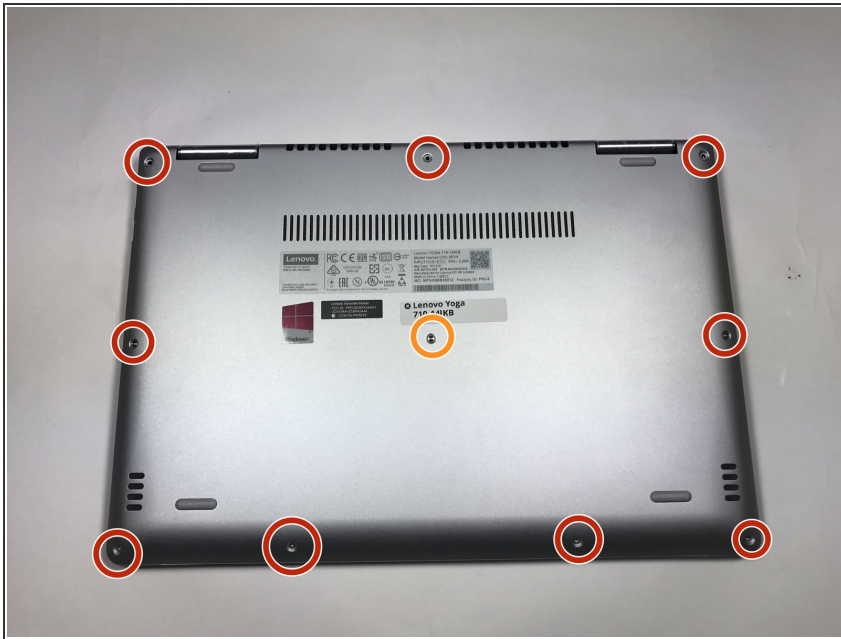

⚠ Ensure your device is completely OFF before starting this guide.

- Use a Torx T4 screwdriver to unscrew the nine 5 mm screws holding the cover in place.

- Use a Torx T4 screwdriver to unscrew the 8 mm screw in the center.

⚠ When reassembling, make sure not to tighten the screws too much or you may risk cracking the plastic cover.

Step 2



- Use the plastic opening tool to pry the cover up and away from the laptop, starting at one end and working your way around the cover.

i The cover is large and flat and made of thin plastic. It cracks easily, so make sure not to pry too hard.

- ## Step 4




- Page 4 of 6

Step 5




- Remove the battery.

Step 6 — Speaker

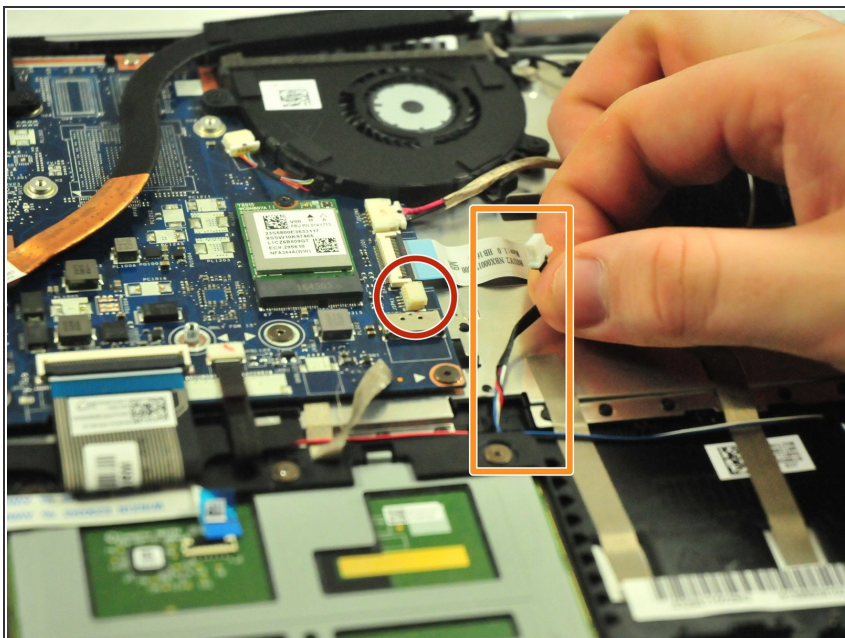

- Locate the speaker's plug and disconnect it.
- Follow the wires connected to the plug to locate the speakers. The left speaker will have red wires, and the right speaker will have blue wires.

Step 7

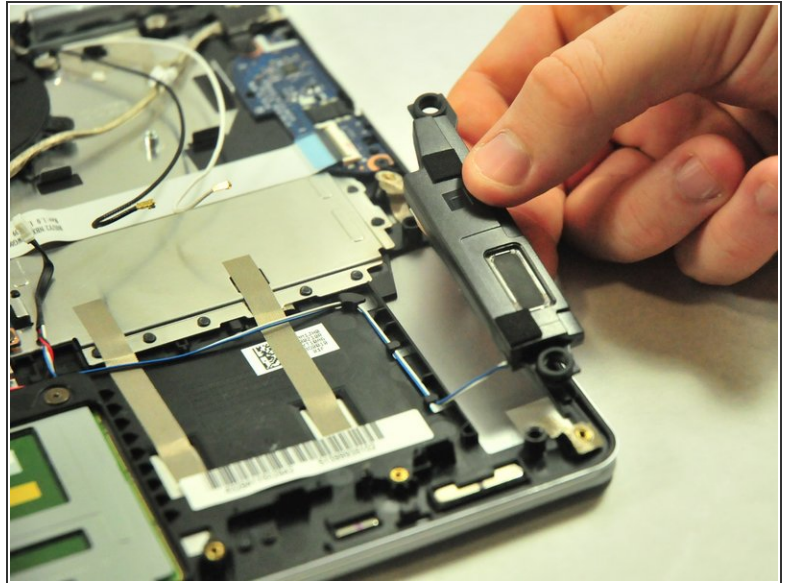

- Untangle the wires from the plastic hinges of the case to properly lift the speakers out.

To reassemble your device, follow these instructions in reverse order.