



Lenovo Yoga 730-13IKB Back Case Replacement

How to remove the back case on the Lenovo Yoga 730-13IKB.

Written By: Colin Reay



INTRODUCTION

Use this guide as a reference when removing the back case on the Lenovo Yoga 730-13IKB laptop (*models beginning with "81CT"*).

Removing the back case exposes the laptop's internals and is a prerequisite step for replacing or repairing most components. Always power off the laptop before working on any internal components.


TOOLS:

- [iFixit Opening Tool](#) (1)
- [T5 Torx Screwdriver](#) (1)

PARTS:

- [Lenovo Yoga 730-13 and IdeaPad Yoga 730-13 Lower Case](#) (1)

Step 1 — Back Case

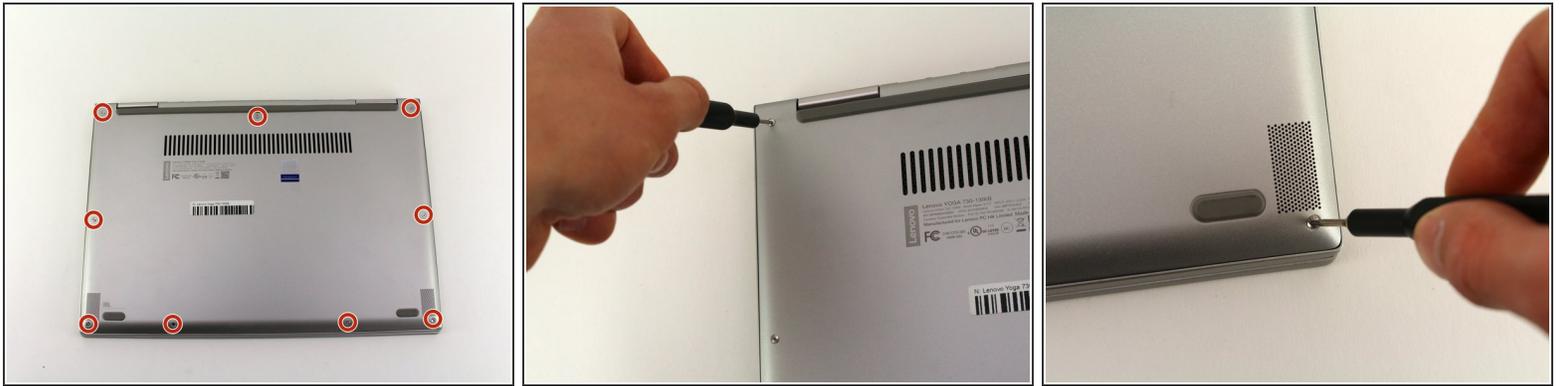

- i** Power off the laptop and place it facedown on a non-scratching surface.
- Remove the nine T5 screws fastening the back case.

Step 2



- Slide a plastic opening tool underneath the back case near the screen hinges. Gently pry up on either side.
- Slide the opening tool underneath the back case next to the middle screw hole at either side of the case. Gently pry up.
- i** You may hear popping sounds as the tabs securing the case release. This is normal. If the case does not move, try prying at a different angle/position.

Step 3



- Remove the back case by pulling up near the screen hinges and lifting diagonally away from the laptop.
- ⓘ Go slowly to avoid breaking any connecting tabs.

To reassemble your device, follow these instructions in reverse order.