




# Philips Satinelle Tension Clip Replacement

Replace the Tension Clip that applies pressure to the tweezer head.

Written By: George Tipker IV

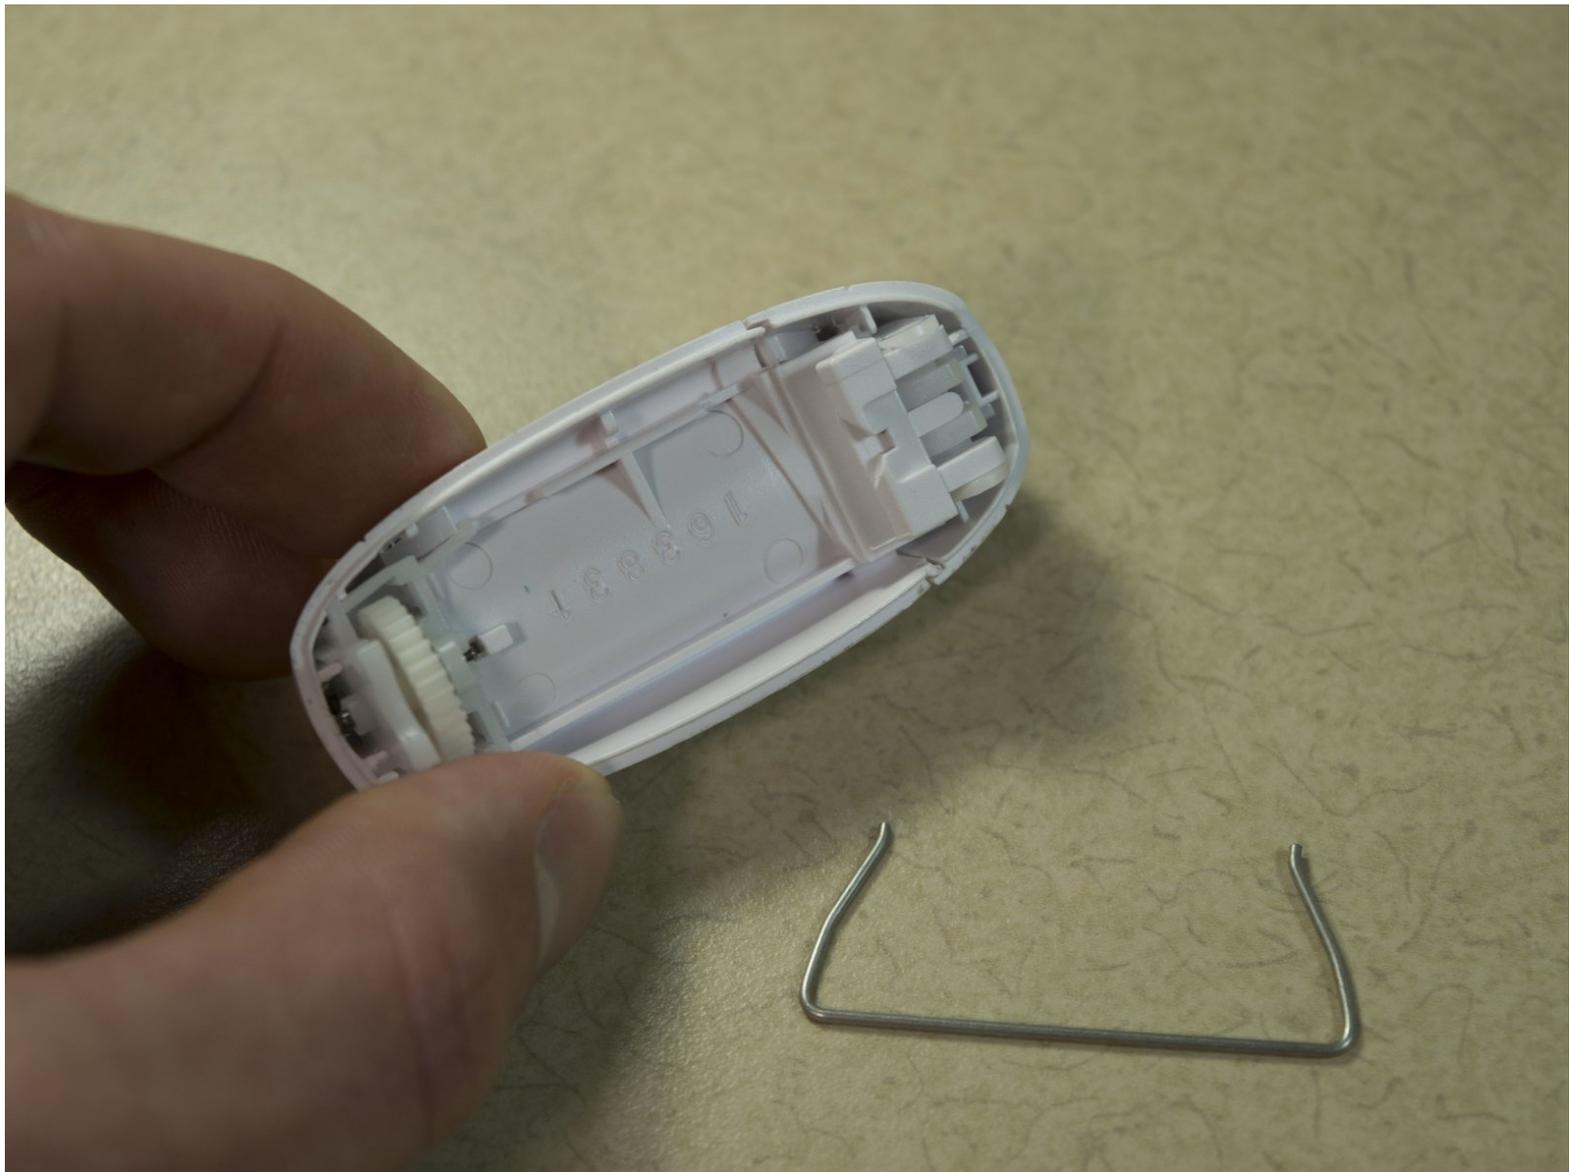

## **TOOLS:**


- [iFixit Opening Tools](#) (1)
-

## Step 1 — Tension Clip Replacement




- Remove Tweezer Head by pushing to the left with thumb.

## Step 2

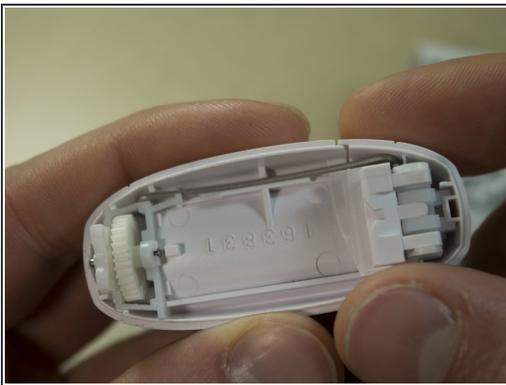


- Locate the Tension Clip on the removable tweezer head.
- Begin prying from the right side of the Tension Clip.
- Finish removal by prying the left side of the Tension Clip.

### Step 3

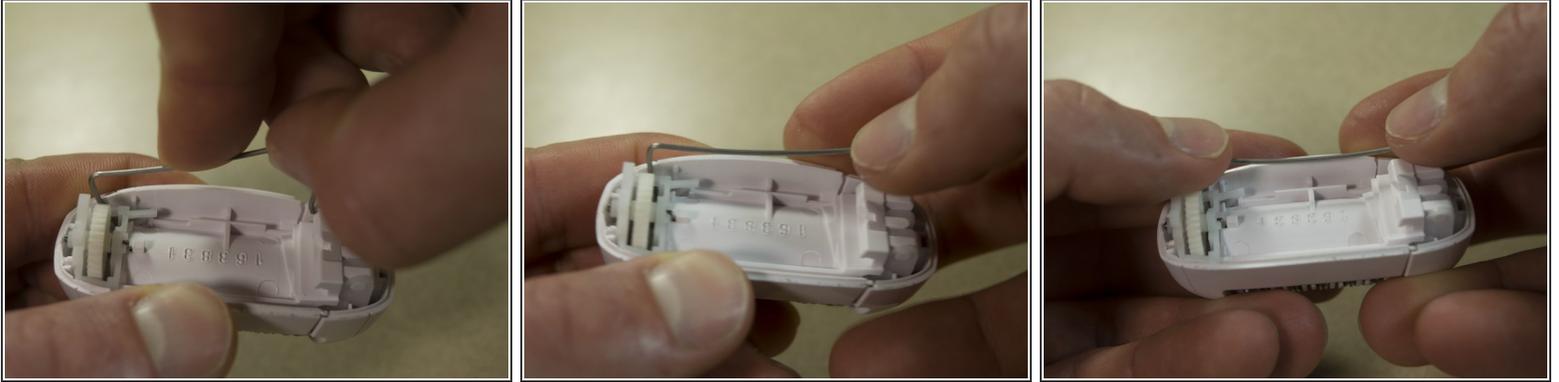

- Replace the Tension Clip
- Insert left side of clip roughly half way in.
- Insert right side of clip and push both sides down with thumbs.

### Step 4

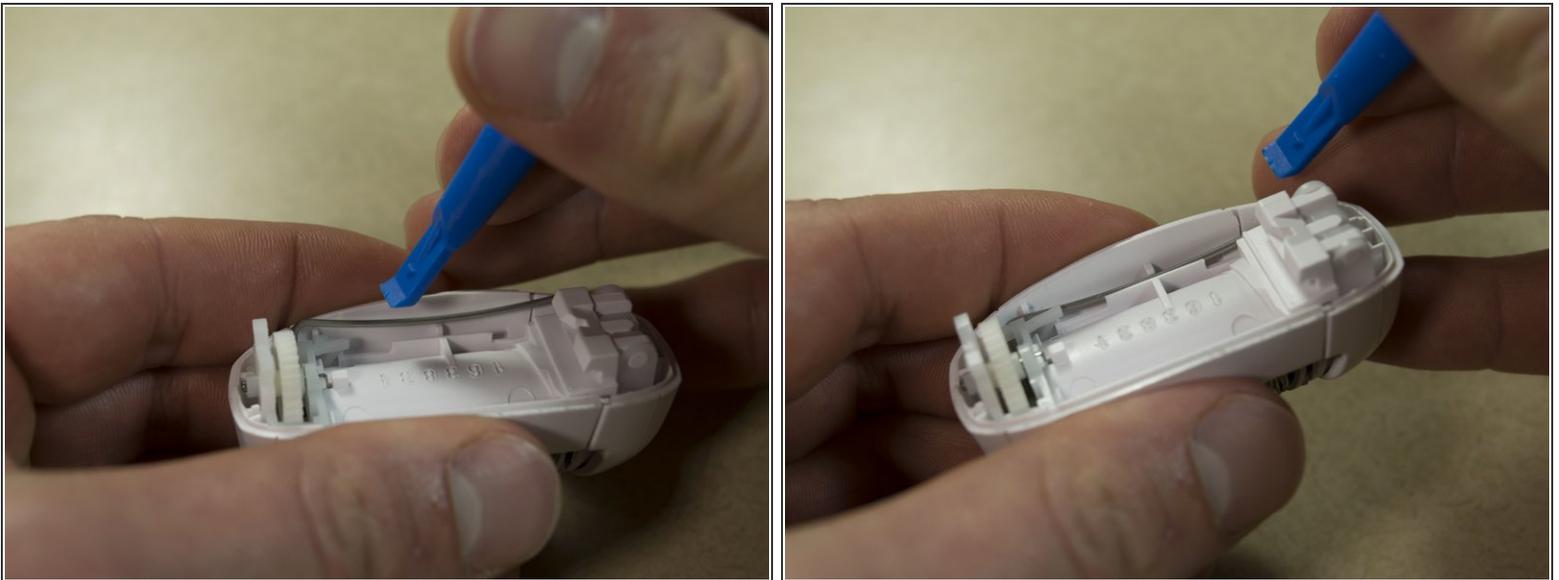

- Use Opening Tool to fully depress Tension Clip in place.

Contact the manufacturer for a replacement Tension Clip.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-27 05:41:21 PM (MST).

