




# Asus X54C-RB92 Hard Drive Replacement

This is a replacement guide for the hard drive of the laptop.

Written By: Julia Huang

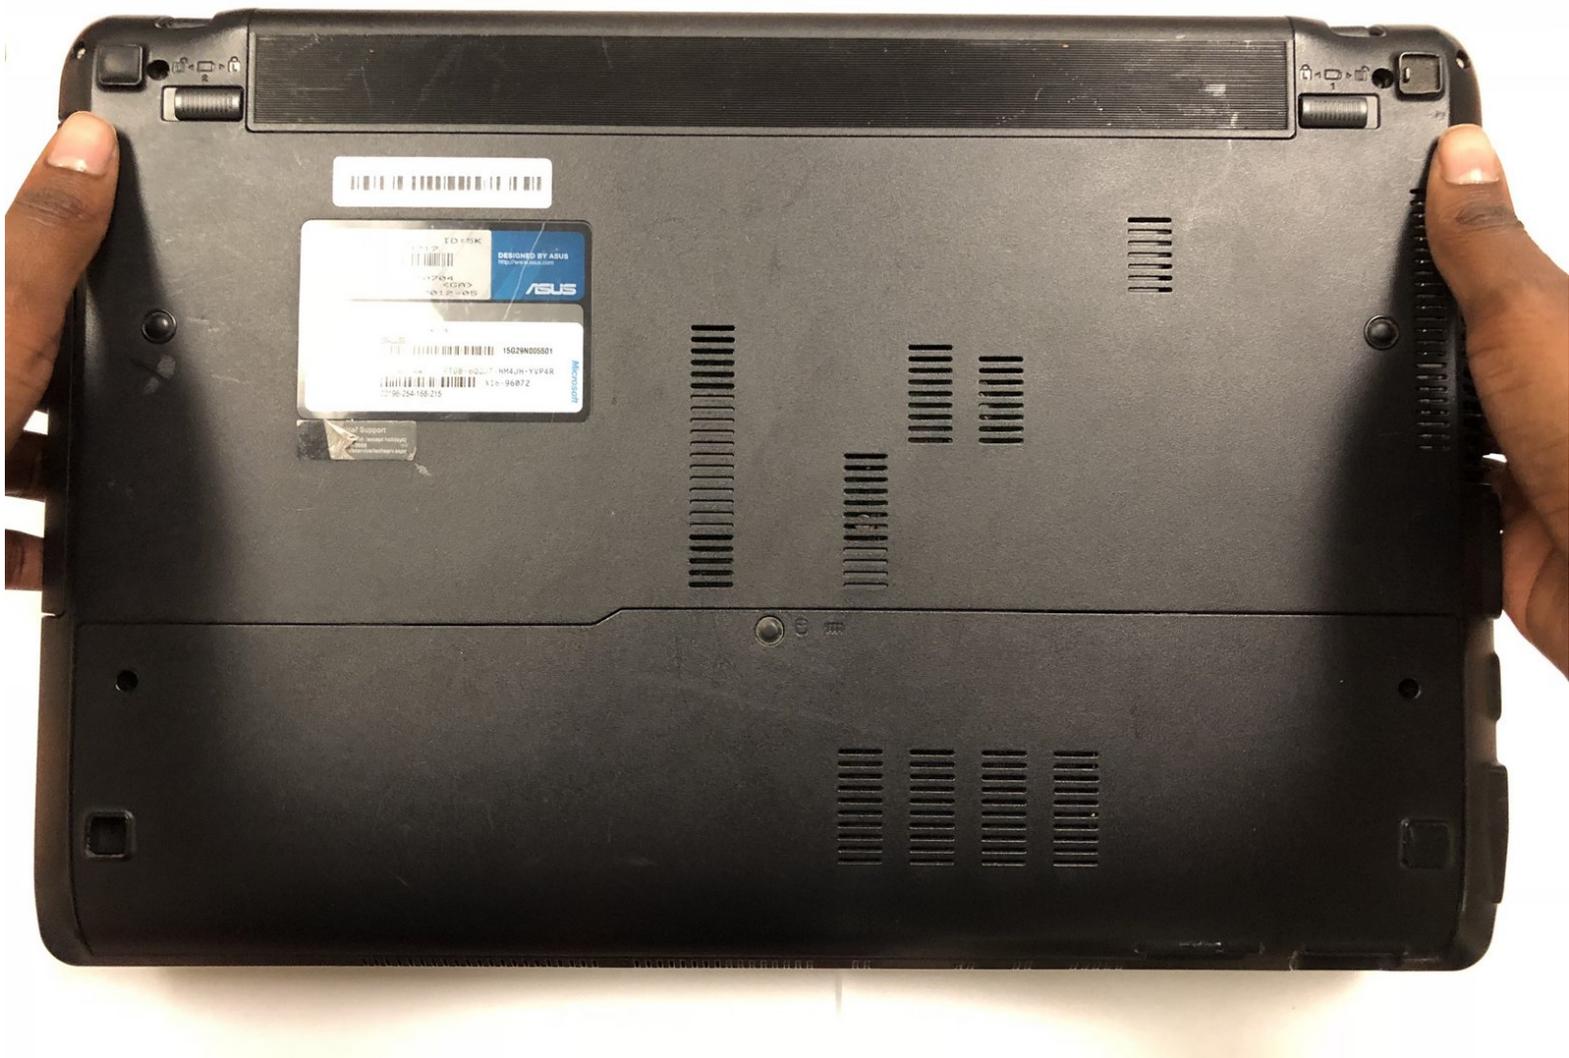

---

## INTRODUCTION

Did your computer suddenly crash? Was everything saved suddenly lost? This may be the time to replace your hard drive.

---

### TOOLS:

- [iFixit Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Hard Drive




- Hold laptop upright using both hands.

## Step 2




- Unscrew the two 12 mm screws shown in the image for access to the hard drive.
- Remove the base of the laptop for access to the hard drive.

### Step 3

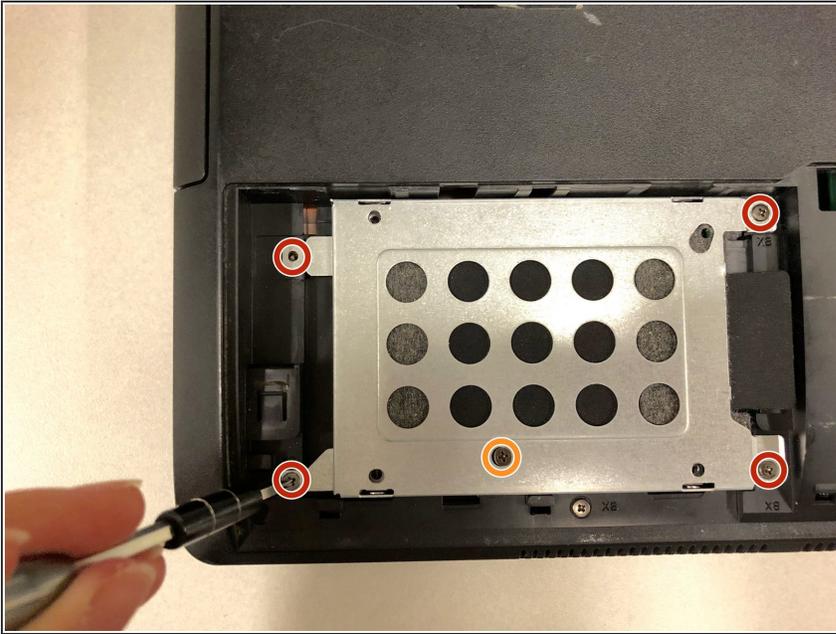

- Remove the four 12 mm hard drive bracket screws.
- Remove the one 7 mm screw.

### Step 4

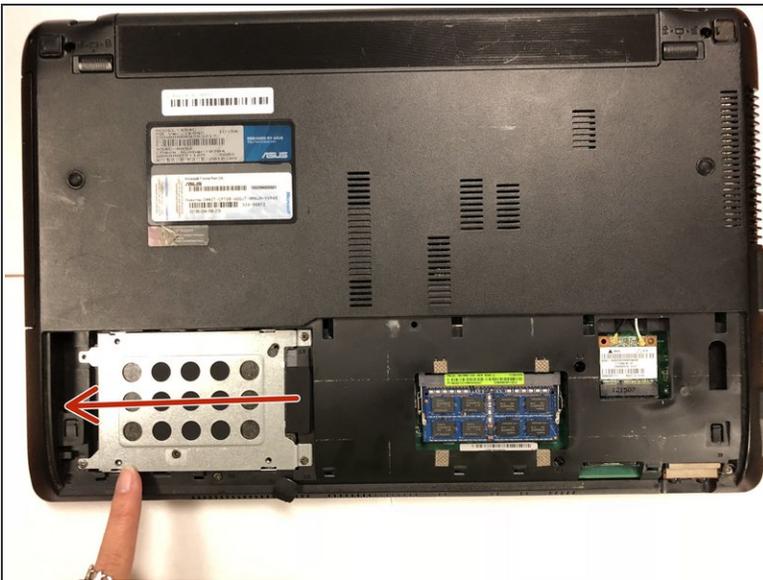

- Remove the silver hard drive cover by sliding it left to reveal the green hard drive.

## Step 5



- Detach the hard drive by sliding it to the left.

To reassemble your device, follow these instructions in reverse order.