




Dell Latitude E6510 Battery Replacement

This guide will demonstrate how to remove and replace the battery for the Latitude E6510.


Written By: Kolin Doyle

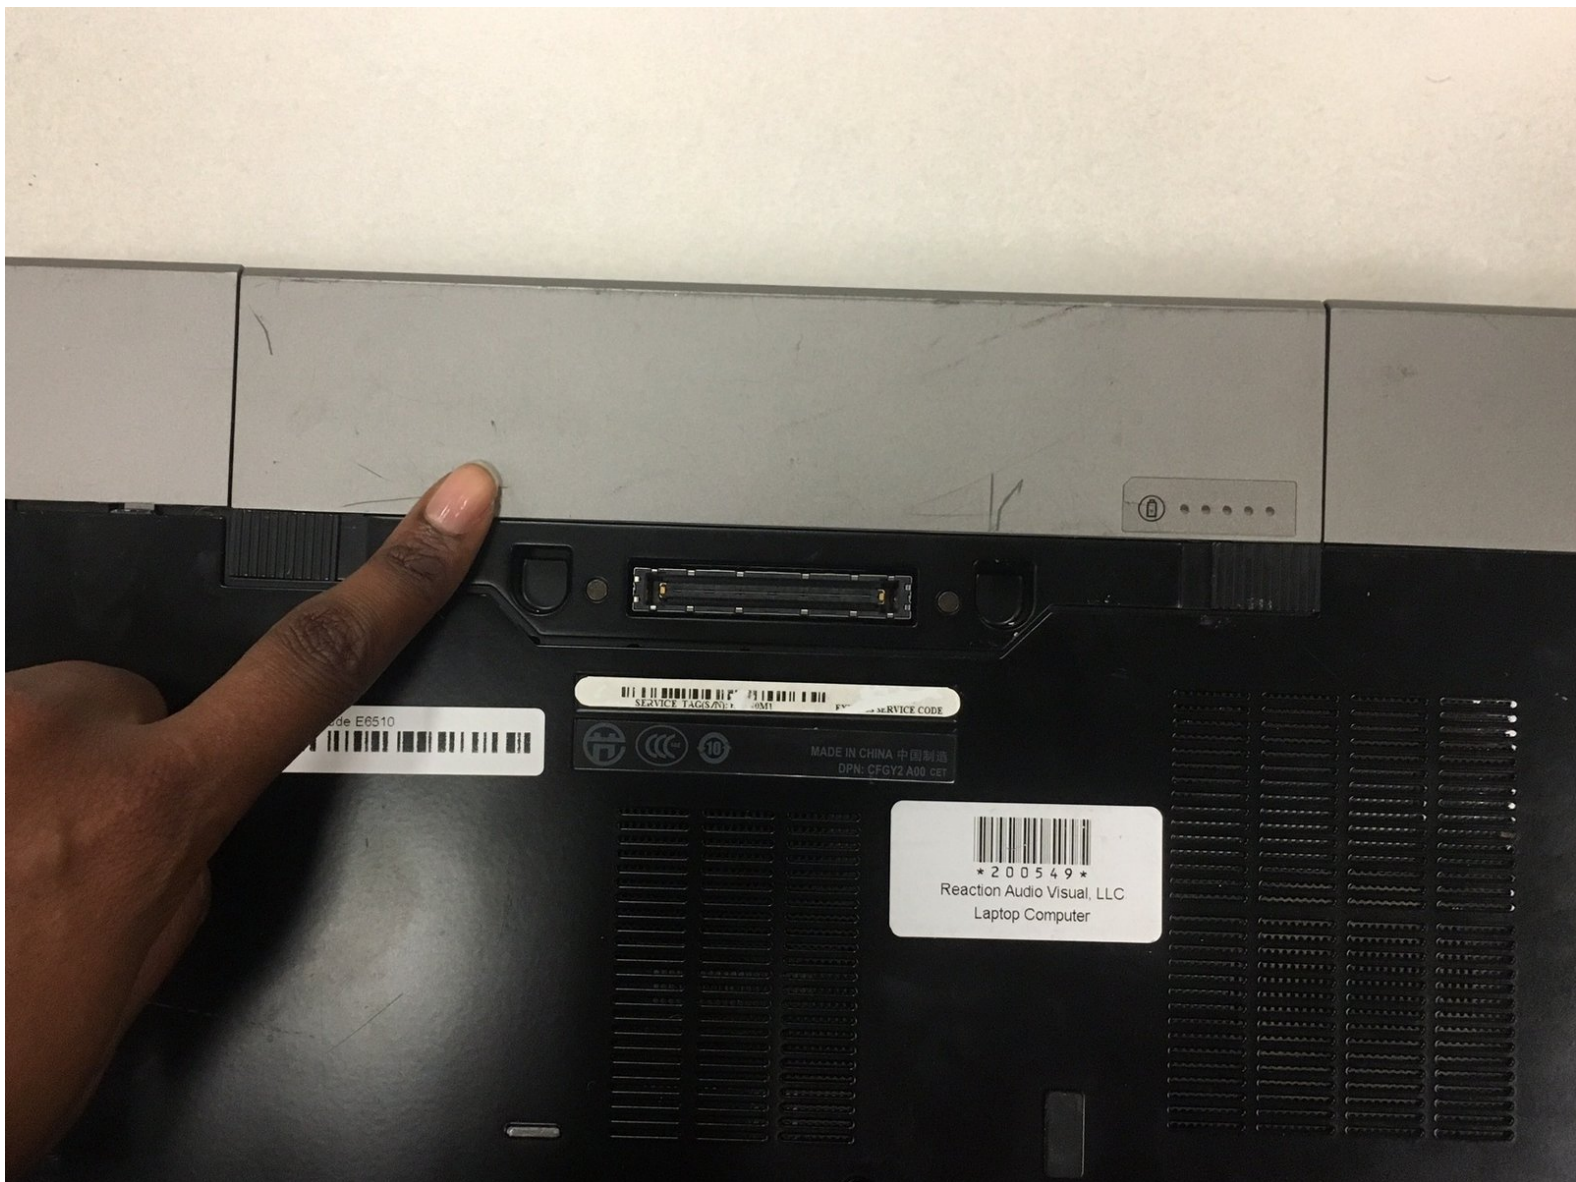

INTRODUCTION


This guide will demonstrate how to remove and replace the battery for the Latitude E6510.

Step 1 — Battery

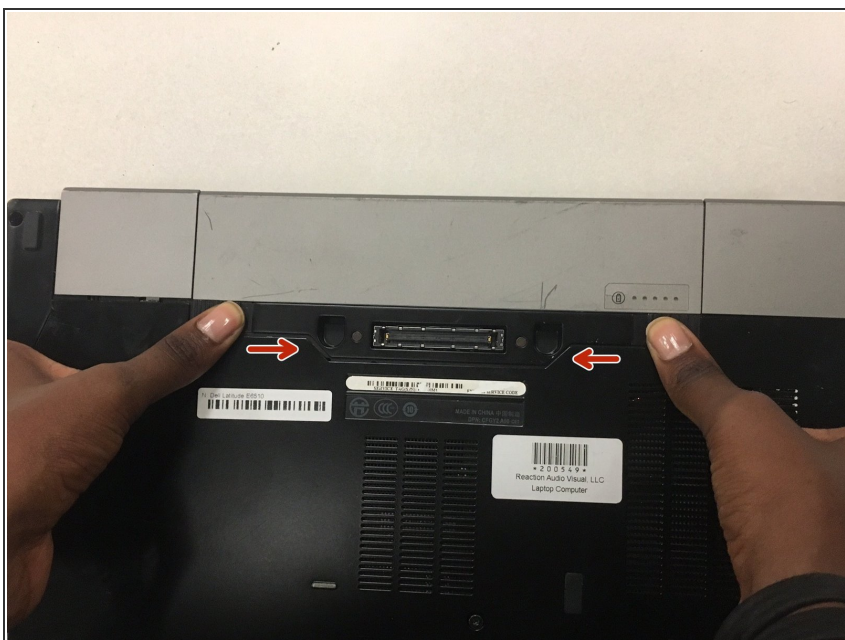

- Unlock the two latches on the back by sliding them inwards.

Step 2

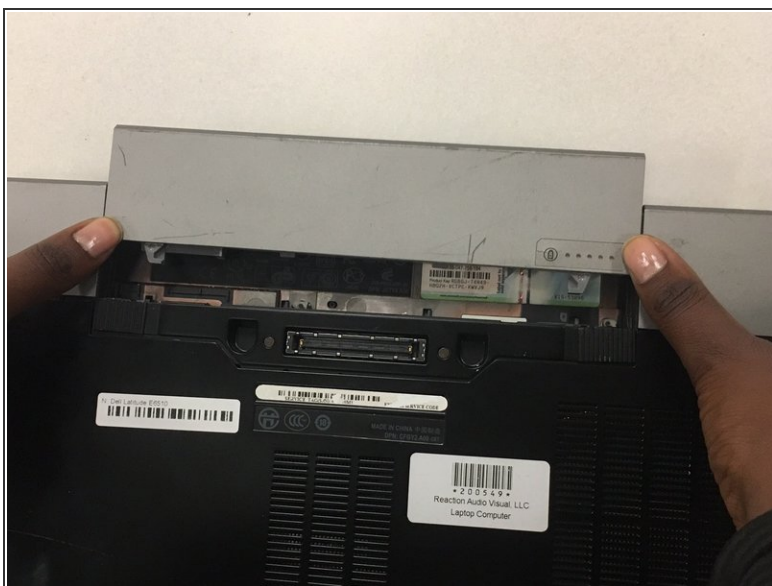

- Slide the battery out from the laptop.

To reassemble your device, follow these instructions in reverse order.