


Dell chromebook 3180 Battery Replacement

This guide will show you how to replace the battery.

Written By: Jon

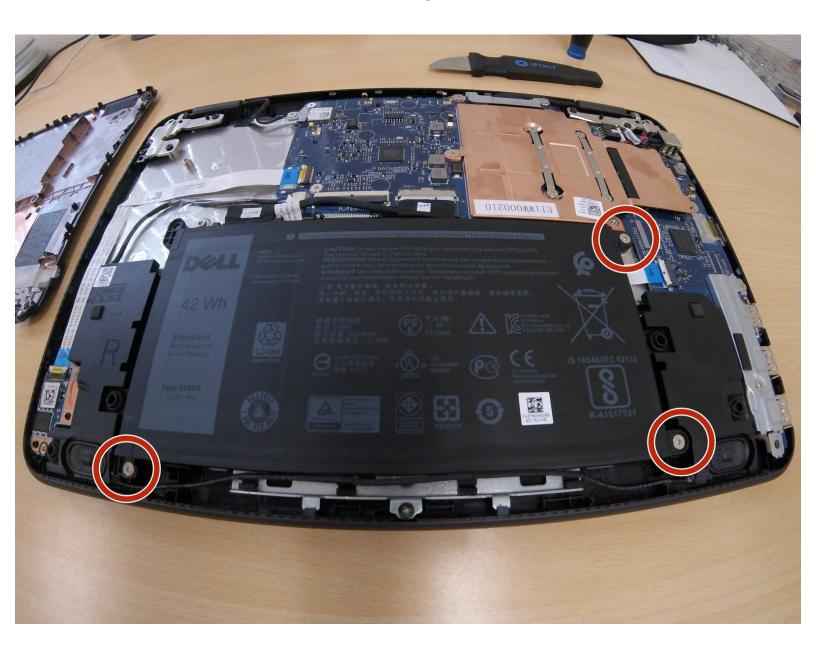

INTRODUCTION

This guide will show you how to replace the battery.



TOOLS:

- Phillips #0 Screwdriver (1)
- Plastic blade (1)
- Phillips #00 Screwdriver (1)



PARTS:

42Wh Dell Battery Type 51KD7 (1)

Step 1 — Remove Battery Screws



 Remove the 3 battery screws with a phillips #00 screwdriver.

Step 2 — Remove Battery



 Remove the battery from the motherboard extension connector

To reassemble your device, follow these instructions in reverse order.