



PlayStation 4 Slim Bottom Cover Replacement

This guide will walk you through on how to remove and replace the plastic bottom cover on your Playstation 4 Slim.

Written By: Hernan Rodriguez



INTRODUCTION

Use this guide to remove or replace your Playstation 4 Slim's plastic bottom cover.



TOOLS:

- [Metal Spudger](#) (1)
- [TR8 Torx Security Screwdriver](#) (1)



PARTS:

- [PlayStation 4 Slim Left Case](#) (1)

Step 1 — Bottom Cover



- Locate the plastic warranty sticker next to the three ports on the side of the console.
- Remove the warranty sticker by peeling it off with any kind of spudger.


⚠ Removing the warranty sticker will NOT cause your warranty to be null and void.

Step 2



- Unscrew and remove the 5.0mm screw that was behind the sticker using a T8 security Torx screwdriver with a counter-clockwise motion.

Step 3

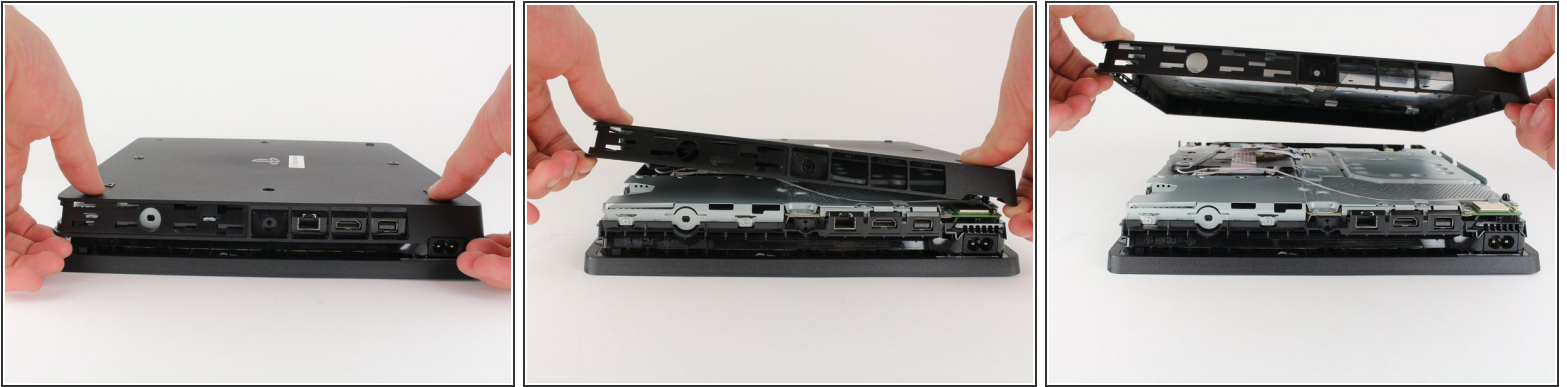

- Place the Playstation 4 Slim upside down with the side of the screw you just removed facing you.
- Pry up on the two corners that are facing you with your fingers.
- ⓘ This may take a bit of force to open up and you will hear a fairly loud click when the bottom cover detaches.
- Remove the bottom cover by sliding it towards the back corners and lifting up.

To reassemble your device, follow these instructions in reverse order.