




Dell Alienware 14 Battery Replacement

Follow this guide to replace the battery for the Dell Alienware 14.

Written By: Terrence15

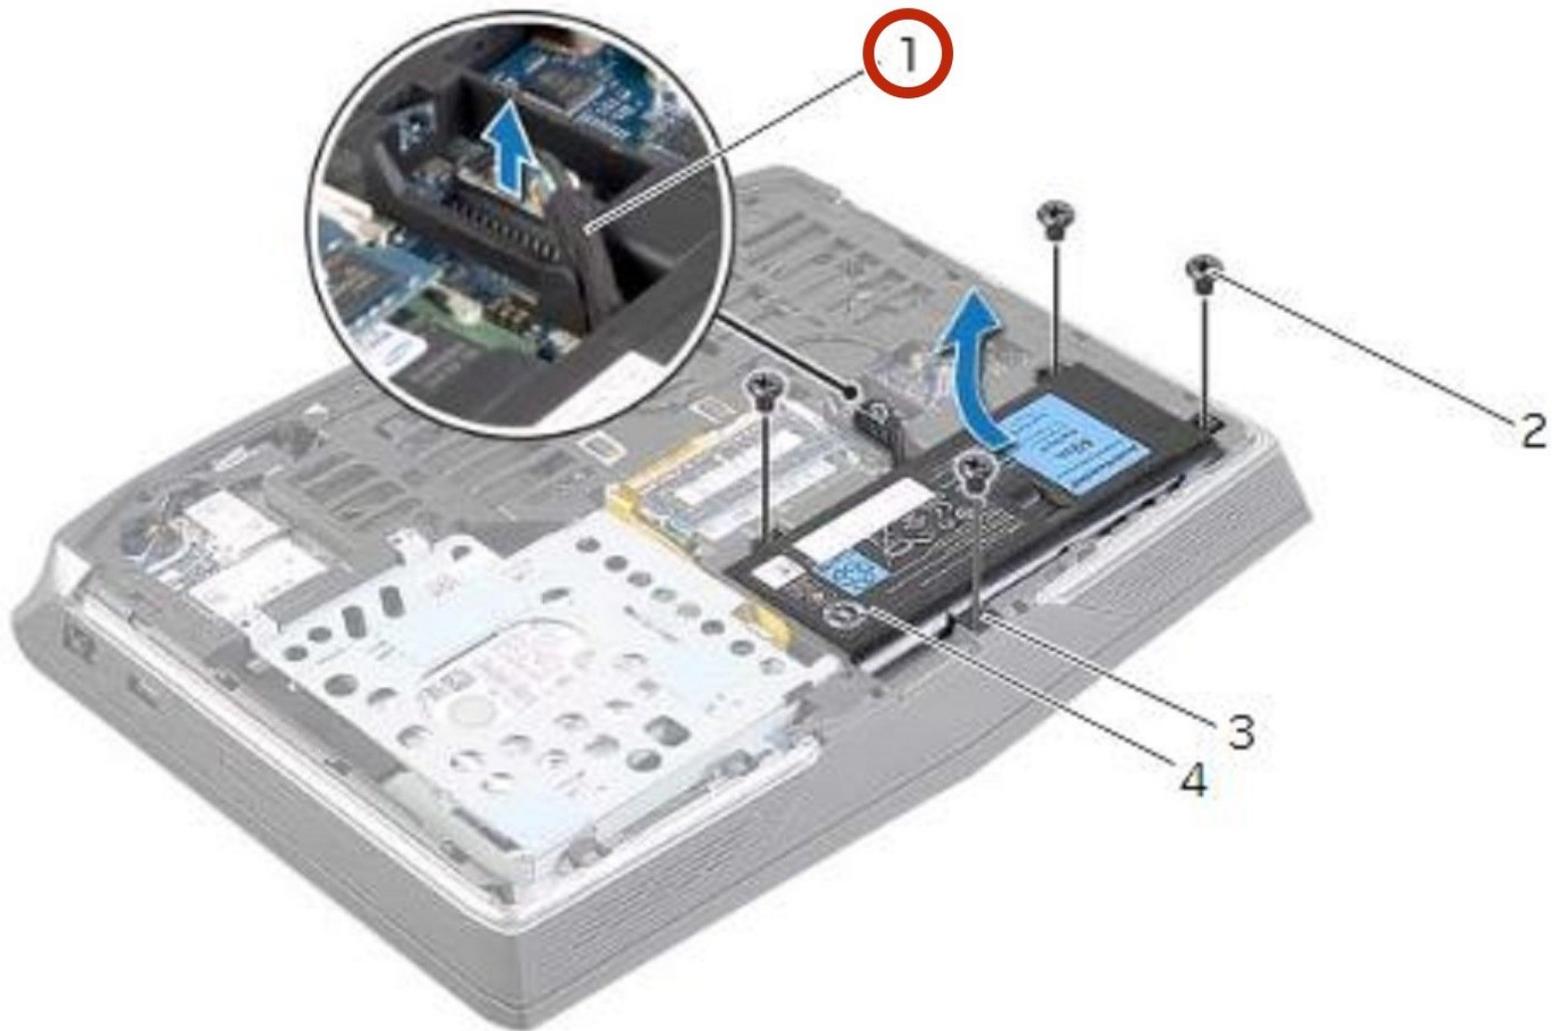

INTRODUCTION


In this guide, we will show you how to remove and replace the Battery.



TOOLS:

- [Pro Tech Toolkit](#) (1)
-

Step 1 — Close the Display

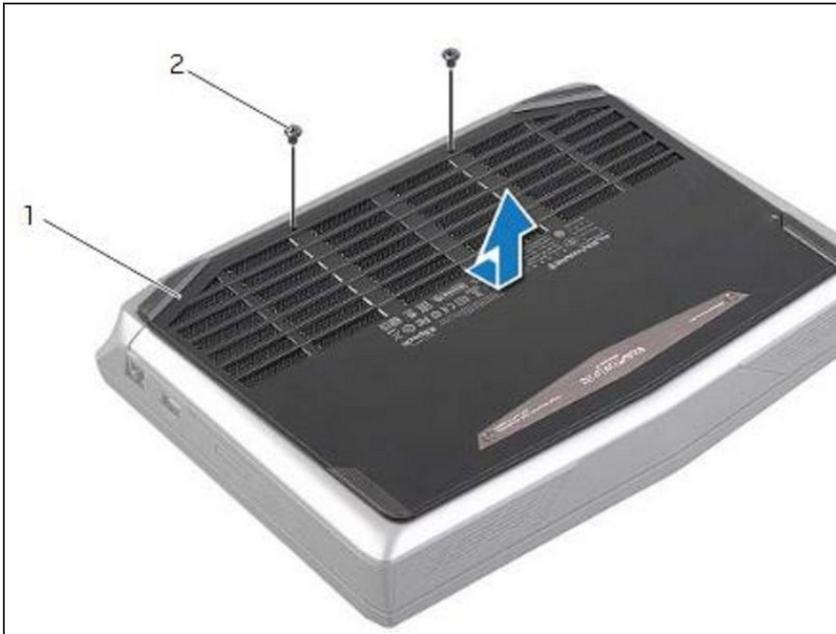

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before You Begin](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Close the display, and turn the computer over.

Step 2 — Remove the Screws




- Remove the screws that secure the base cover to the computer base.

Step 3 — Slide and Lift the Base Cover

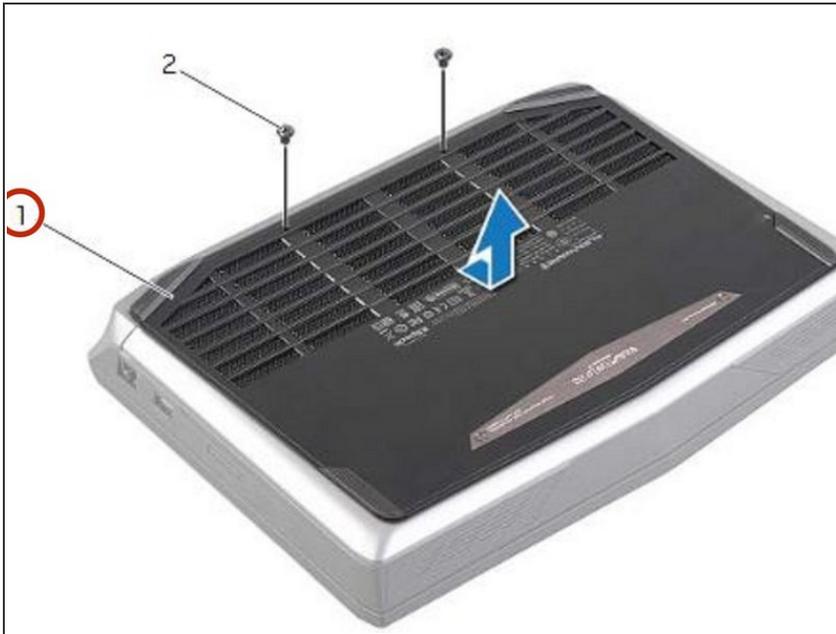


- Slide and lift the base cover off the computer base.

Step 4 — Align the Tabs

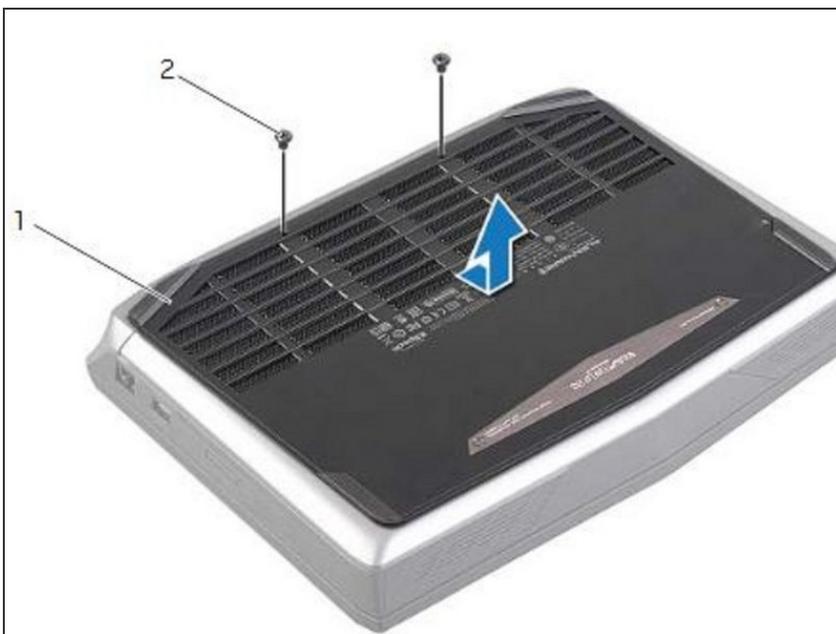


- Align the tabs on the **NEW** base cover with the slots on the computer base and slide the base cover into place.

Step 5 — Replace the Screws

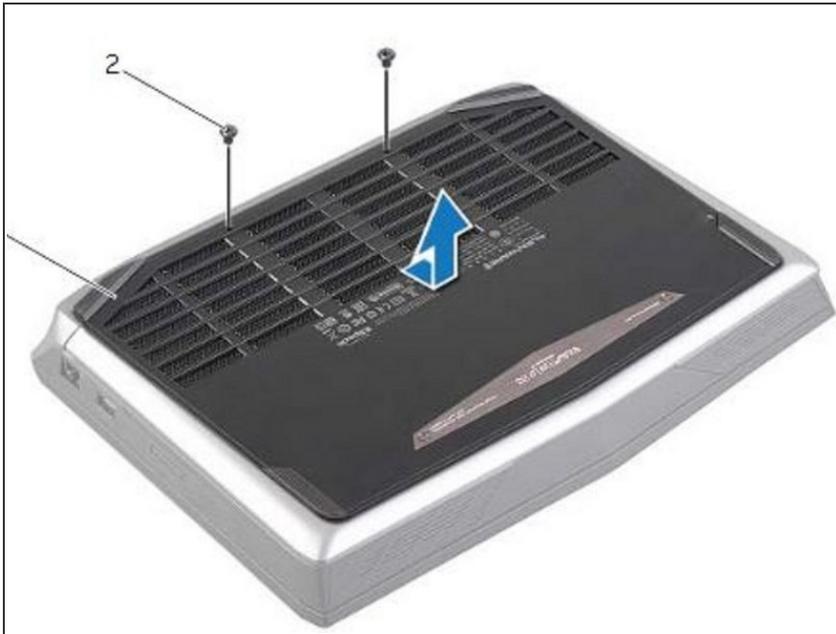


- Replace the screws that secure the base cover to the computer base.

Step 6 — Turn the Computer Over

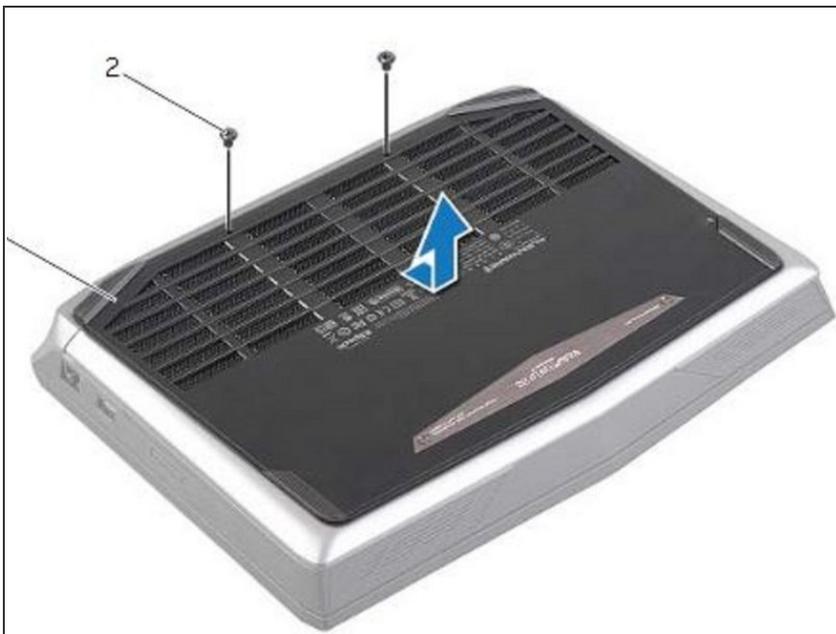

- Turn the computer over and open the display.


Step 7 — Disconnecting the Battery Cable

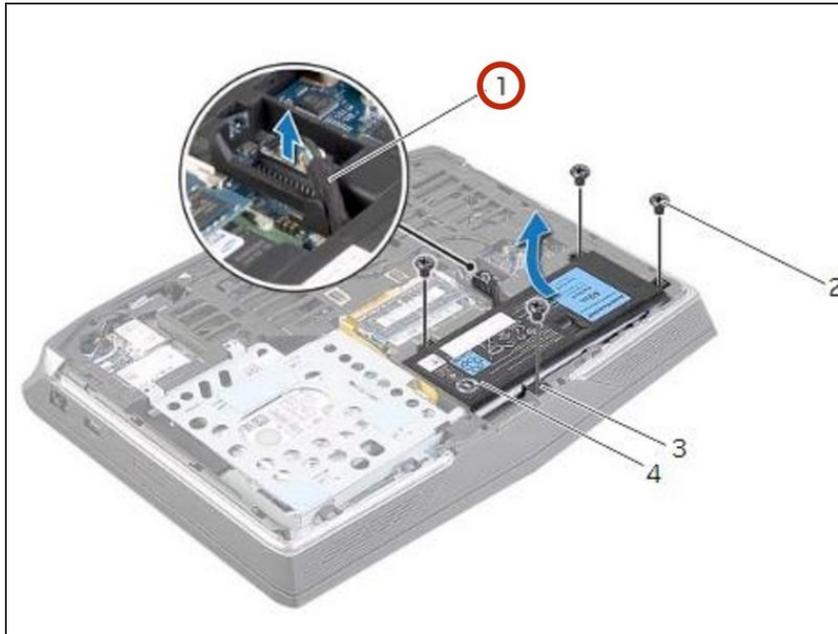

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Disconnect the battery cable from the system-board connector.

Step 8 — Remove the Screws

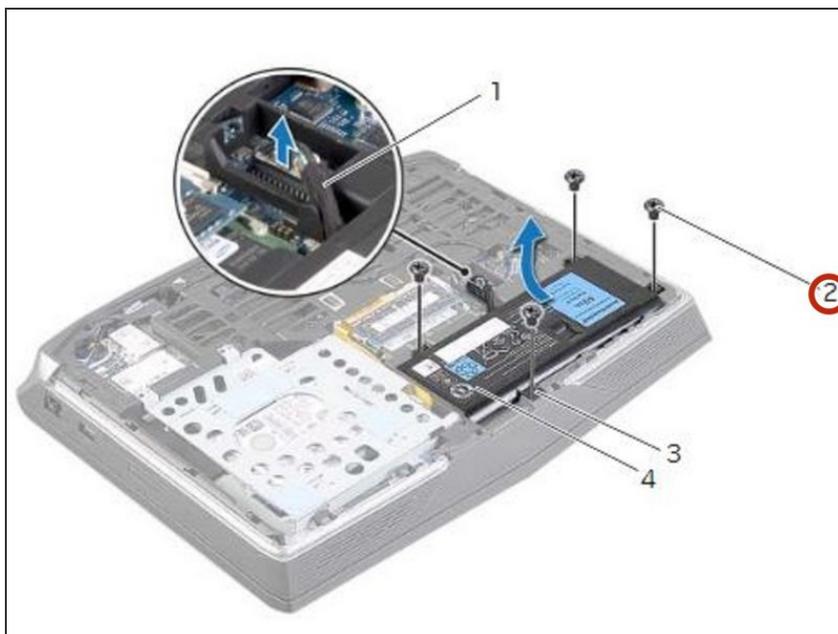


- Remove the screws that secure the battery to the computer base.

Step 9 — Using the Battery Cable

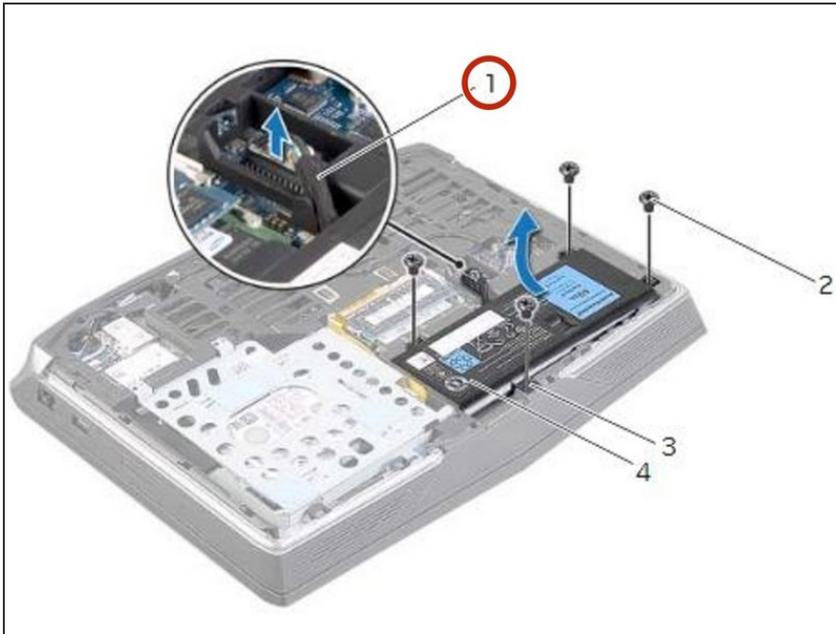


- Using the battery cable, lift the battery and release it from the tabs on the computer base.

Step 10 — Turn the Computer Over

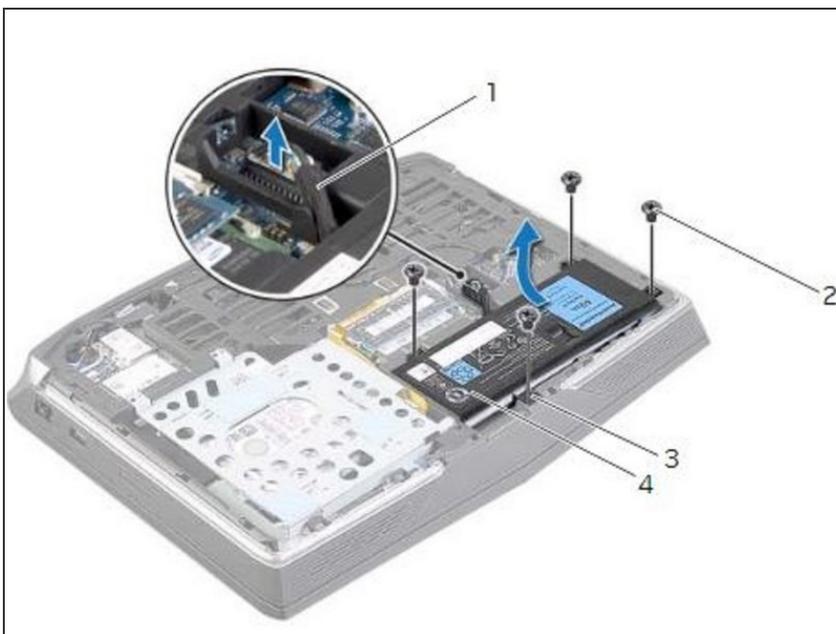


- Turn the computer over and open the display as far as possible.

Step 11 — The Power Button

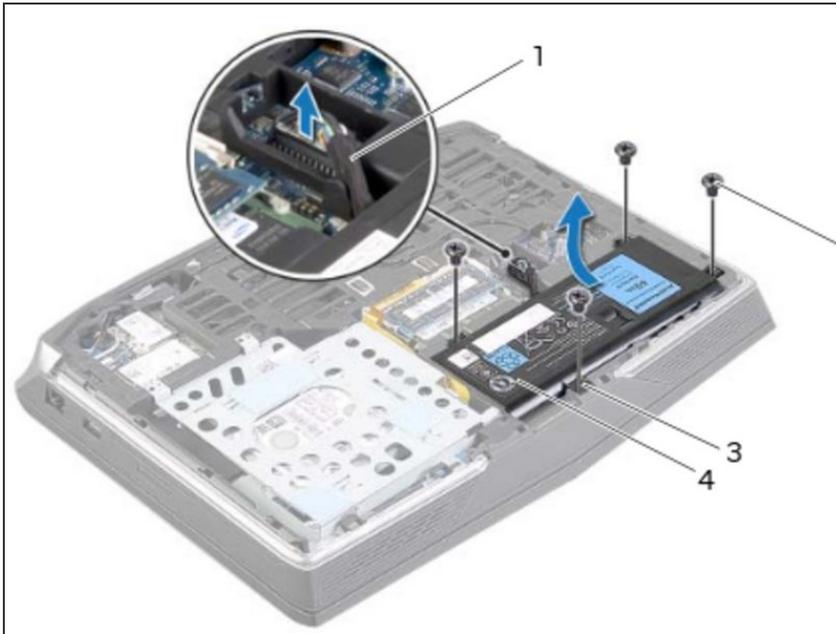


- Press and hold the power button for five seconds to ground the system board.

Step 12 — Close the Display

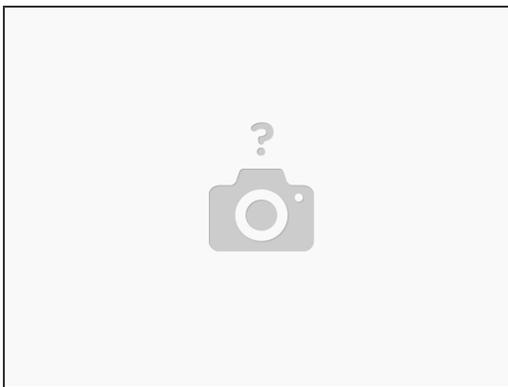


- Close the display and turn the computer over.

Step 13 — Align the Tabs

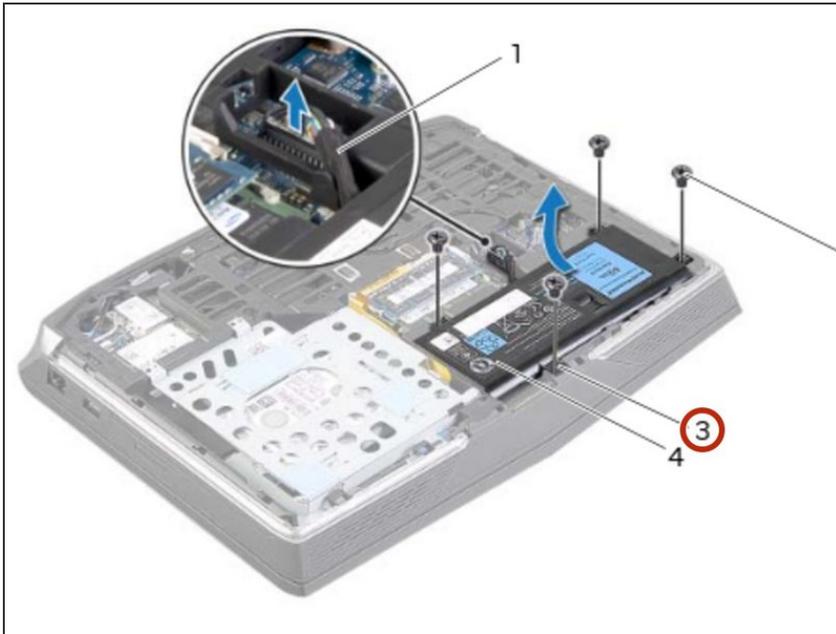


- Align the tabs on the **NEW** battery with the slots on the computer base.

Step 14 — Align the Screw Holes

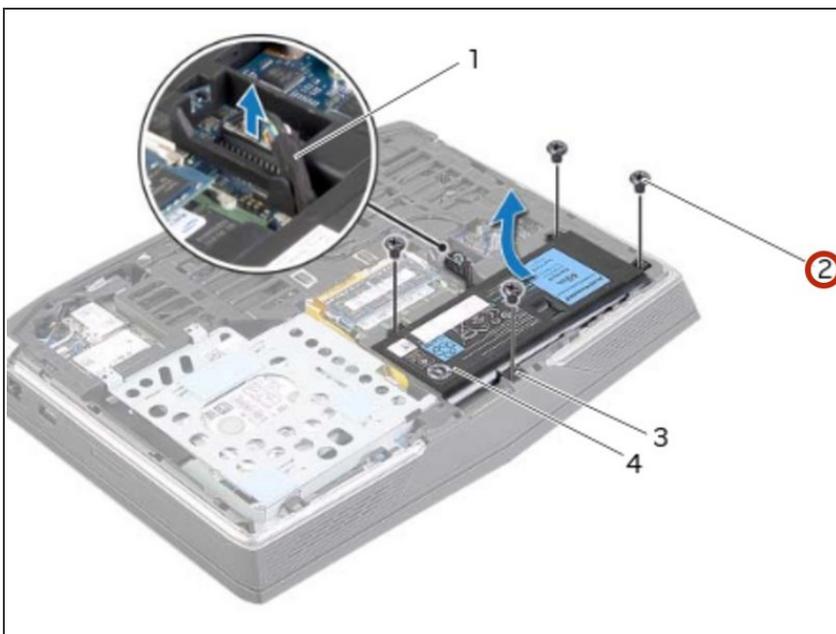

- Align the screw holes on the battery with the screw holes on the computer base.

Step 15 — Replace the Screws

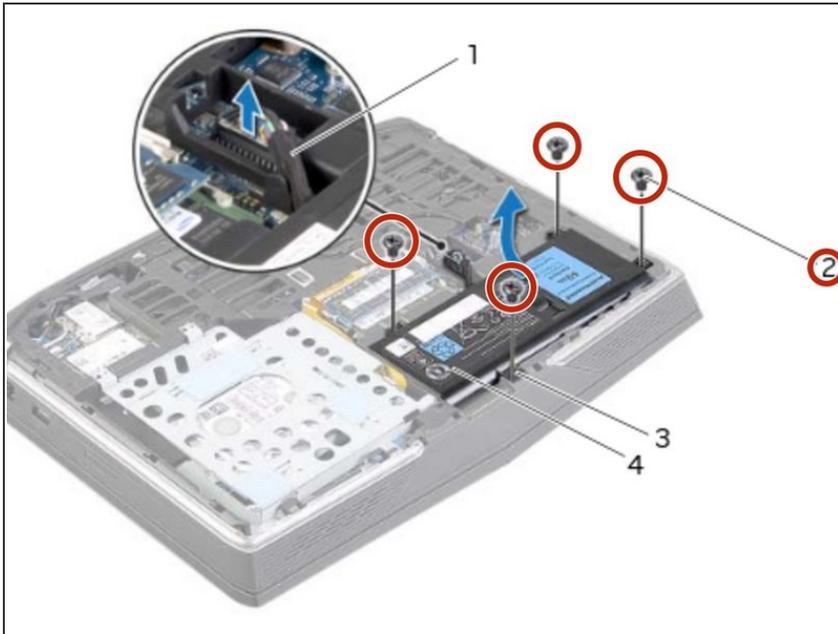

- Replace the screws that secure the battery to the computer base.

Step 16 — Connect the Battery Cable



- Connect the battery cable to the system-board connector.

To reassemble your device, follow these instructions in reverse order.