



Dell Inspiron 15z-5523 RAM Replacement

We will replace the hard drive with a new higher capacity Ram Drive.

Written By: Christian Chavez






TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — RAM

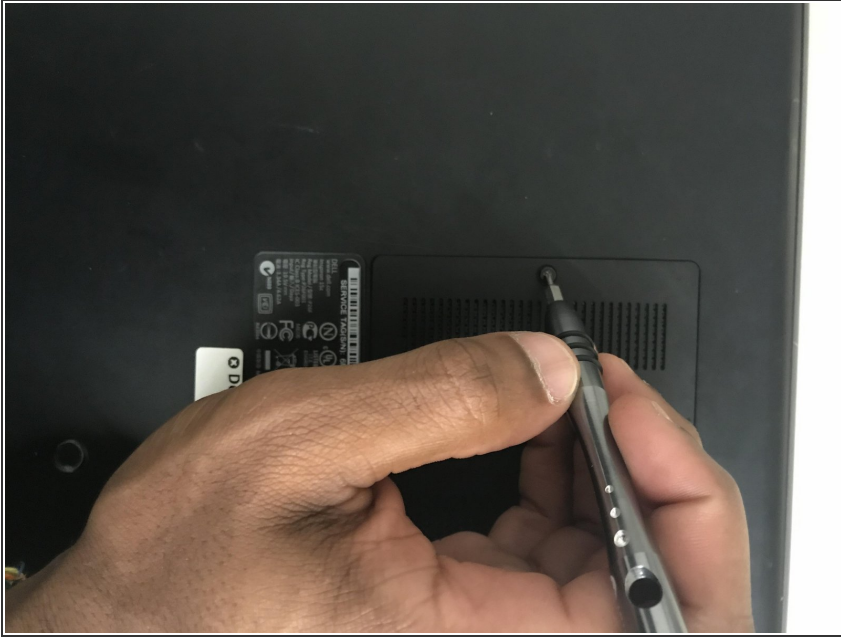

- Unscrew back plate on the back of the laptop

Step 2

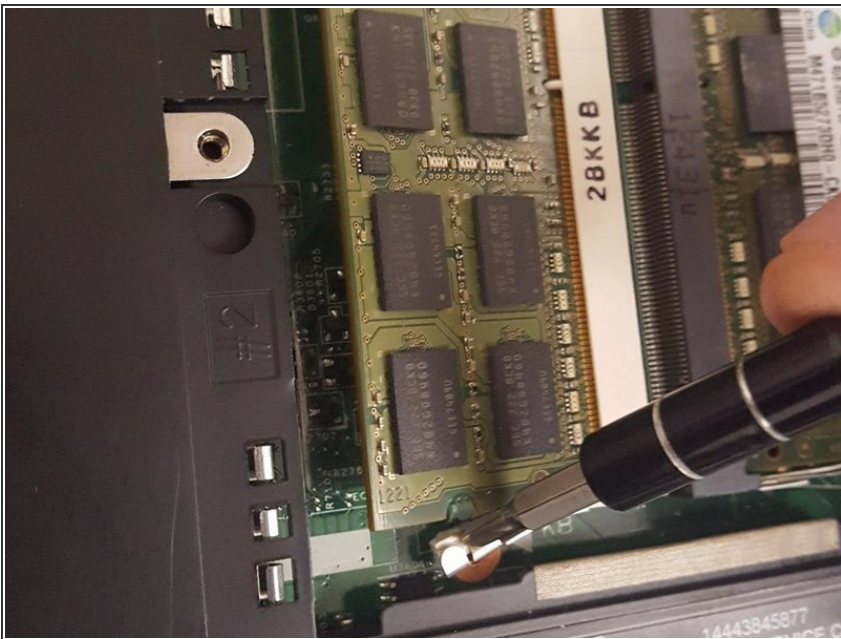

- Disconnect all screws under each rubber stopper

To reassemble your device, follow these instructions in reverse order.