




# Dell XPS M1730 Battery Replacement

Replacing the laptop battery on a Dell XPS M1730


Written By: Johnathan Hammond

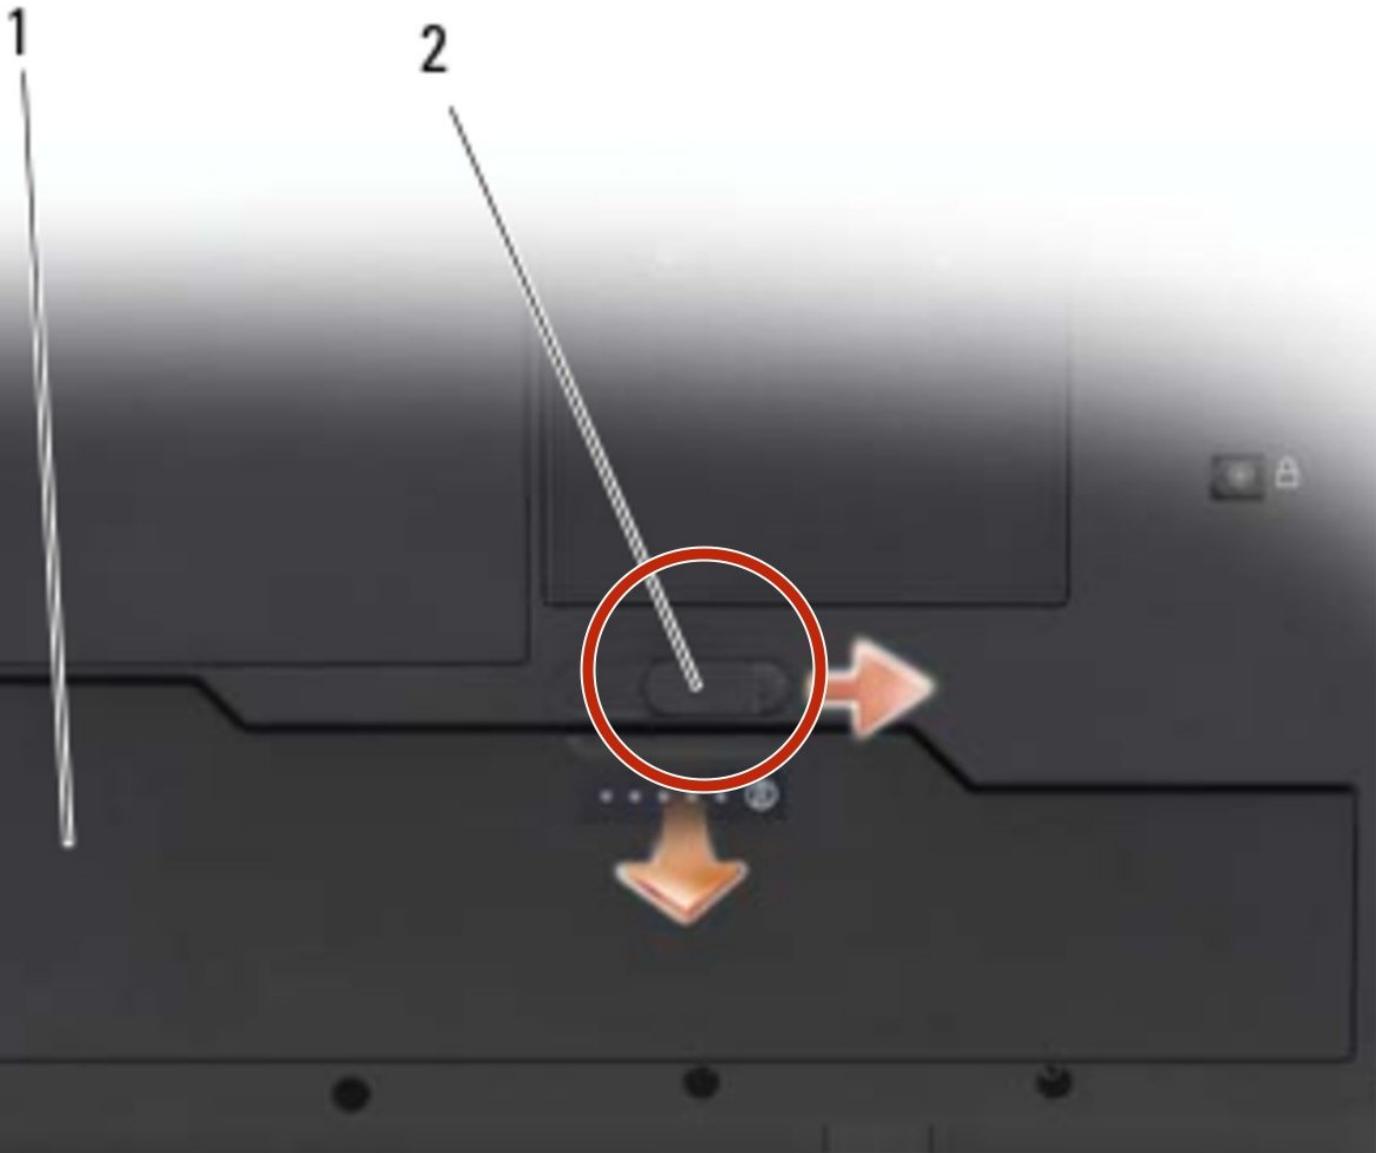

## INTRODUCTION

Replacing the battery is very straightforward. Please follow the indicated steps.

## Step 1 — Battery

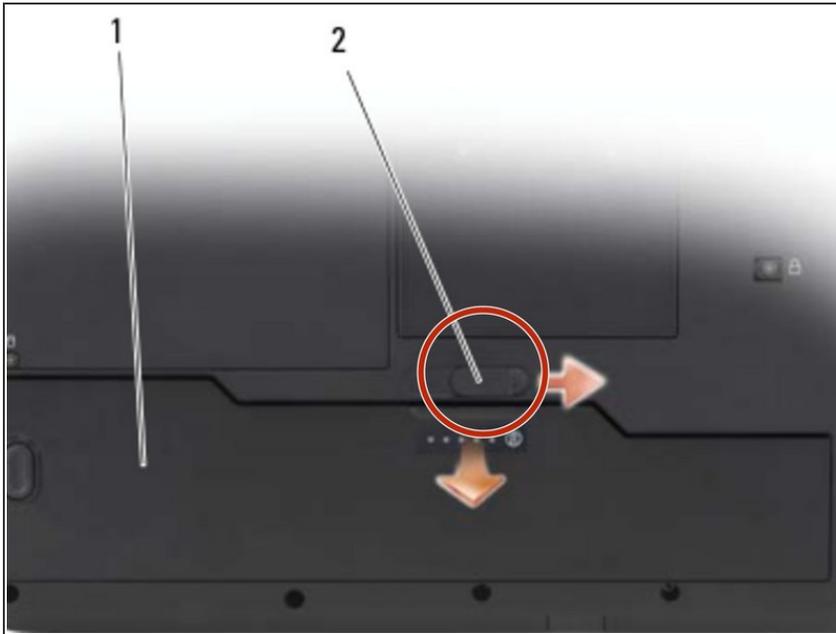

- ✦ First, disconnect your computer and all attached devices from their electrical outlets.
- Slide the battery-bay release latch on the bottom of the computer.
- Remove the battery from the battery bay.

To reassemble your device, follow these instructions in reverse order. Congratulations for finishing this capstone!