




Dell XPS 12 9250 Battery Replacement

How to remove and replace the battery for the Dell XPS 12 9250.

Written By: Johnathan Hammond

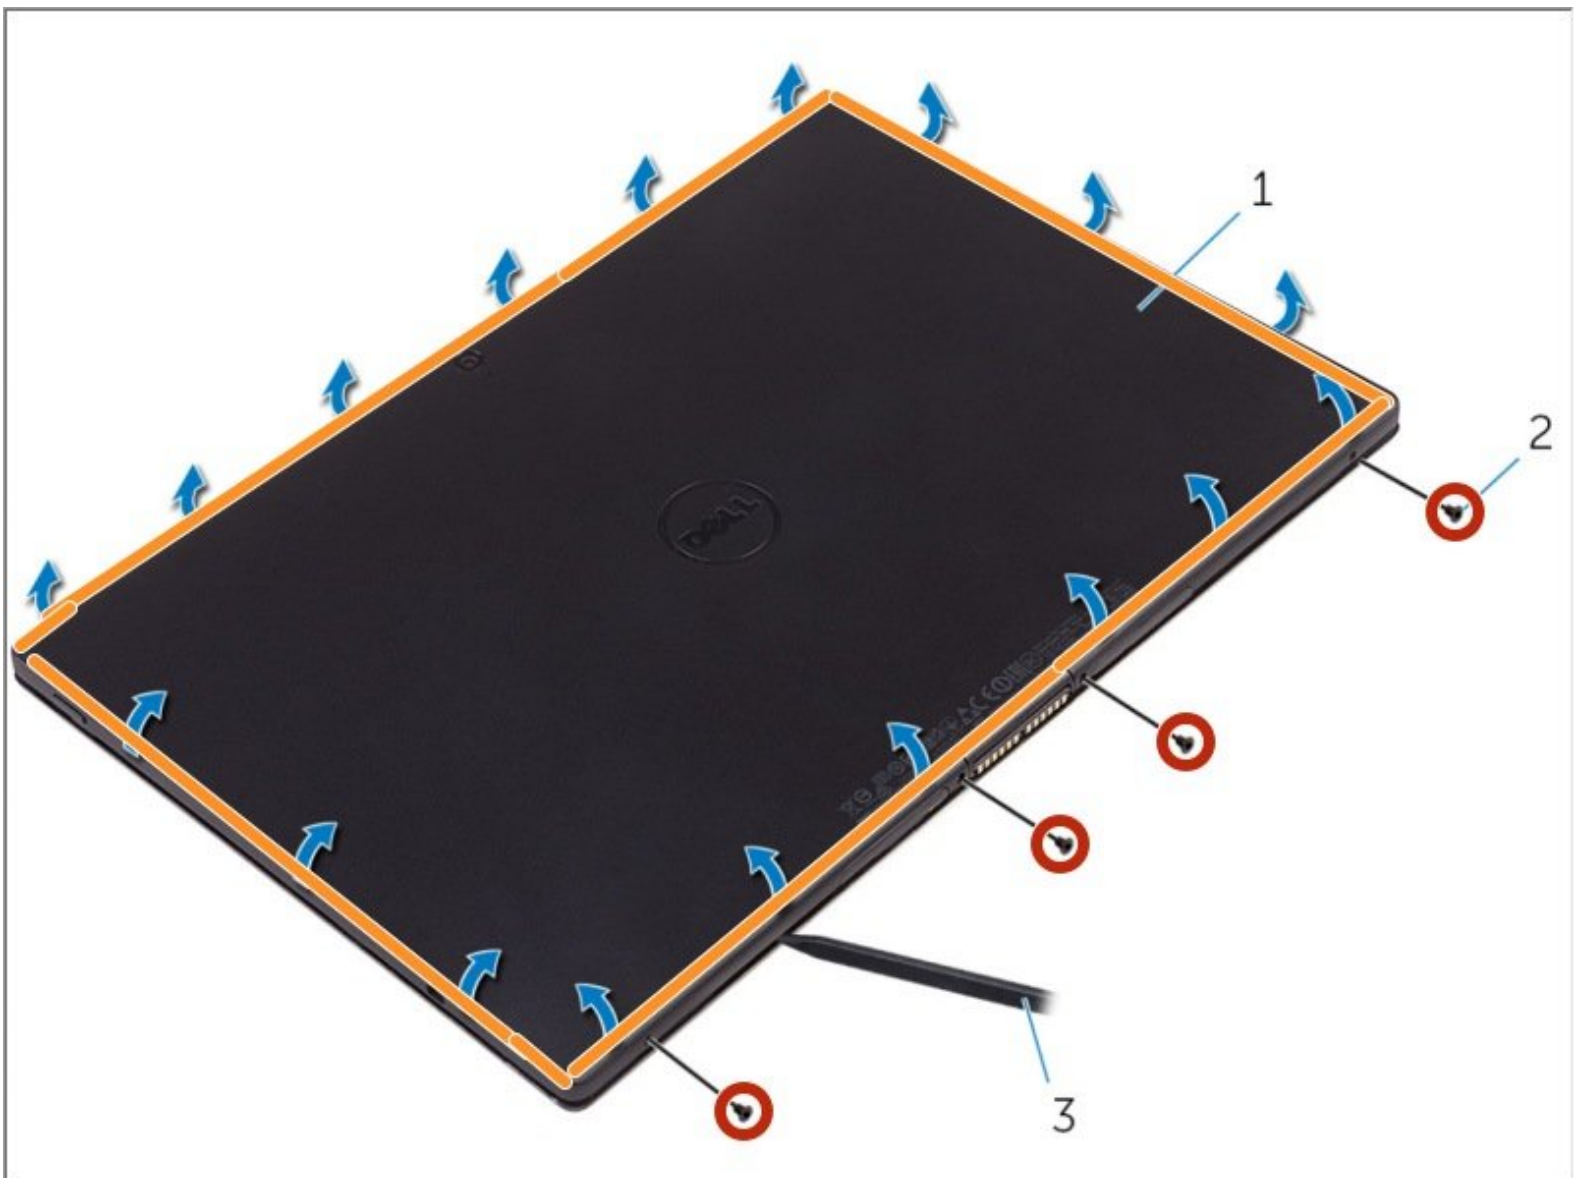

INTRODUCTION

In this guide, we will show you how to remove and replace the battery.



TOOLS:



- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)



PARTS:


- [Dell XPS 12 9250 Battery](#) (1)

Step 1 — Removing the Back Cover

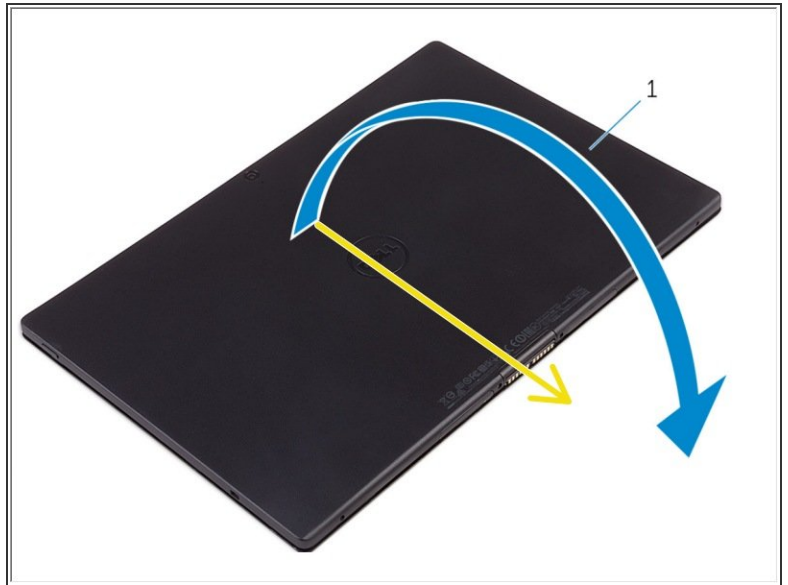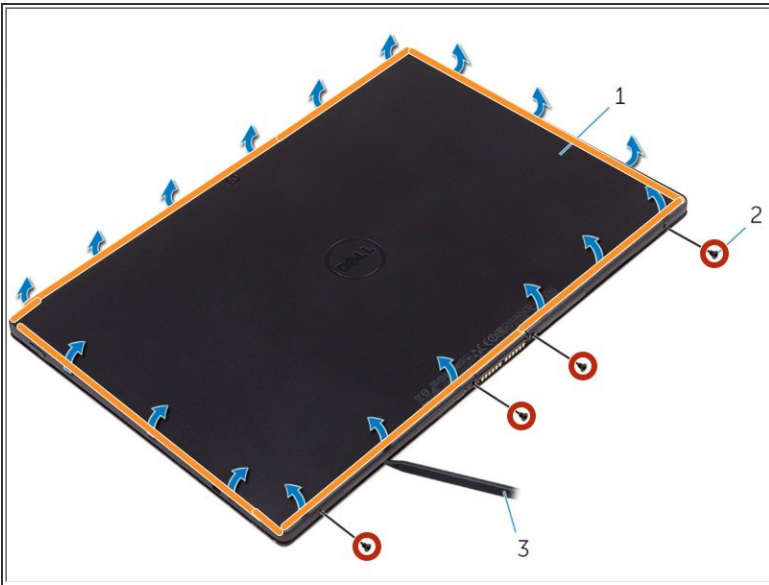

- Turn the tablet over.
 - Remove the screws that secure the back-cover assembly to the display assembly.
 - Using a plastic scribe, pry up along the edges of the back-cover assembly.
 - Carefully, lift the back-cover assembly and turn it over.

Step 2 — Removing the Battery

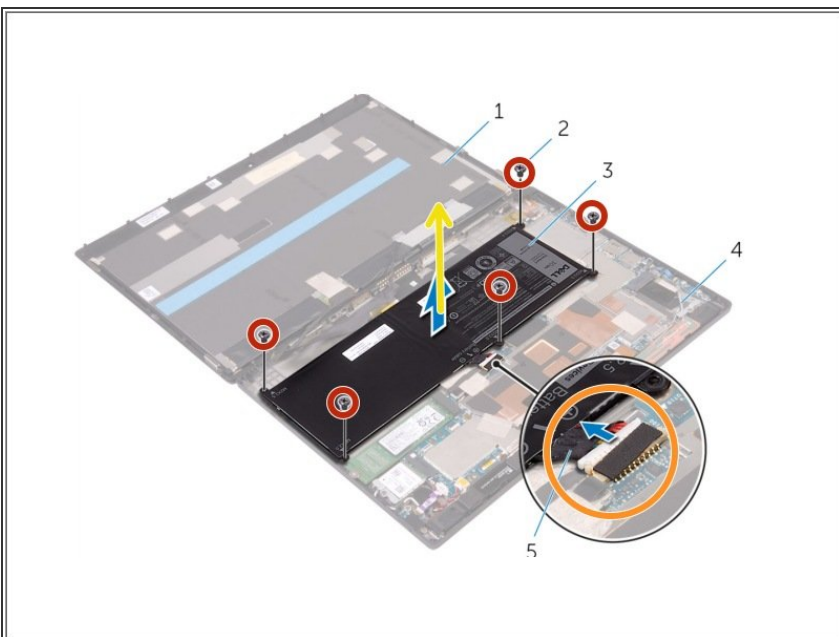

- Remove the screws that secure the battery to the back-cover assembly.
- Disconnect the battery cable from the system board.
- Lift the battery, along with its cable, off the back-cover assembly.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers community](#) for help.