


# **Dell Vostro 5560 Base Cover Replacement**

Written By: Johnathan Hammond

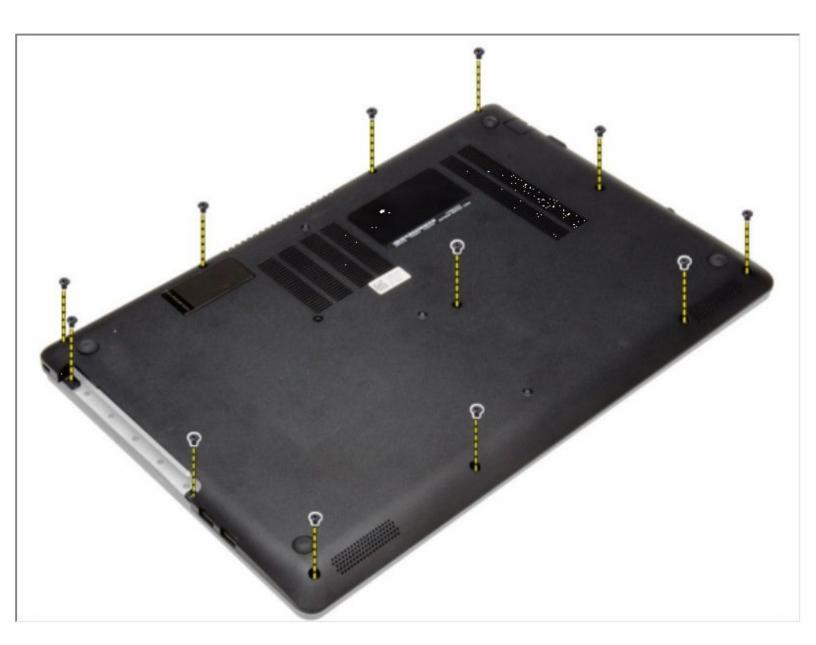

## **INTRODUCTION**


In this guide, we will show you how to remove and replace the Base Cover.



## **TOOLS:**


• Phillips #0 Screwdriver (1)

#### Step 1 — Removing The Optical-Disk Drive

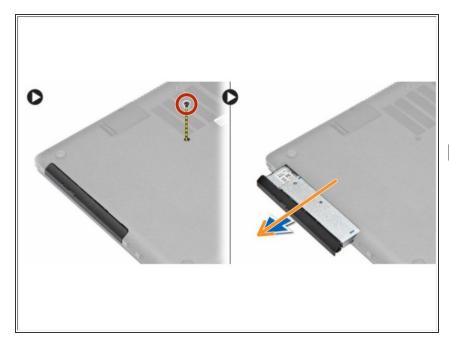

- Remove the screw that secures the base cover to the computer.
  - Pull the optical-drive and remove from the computer.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.

### Step 2 — Replacing the Base Cover

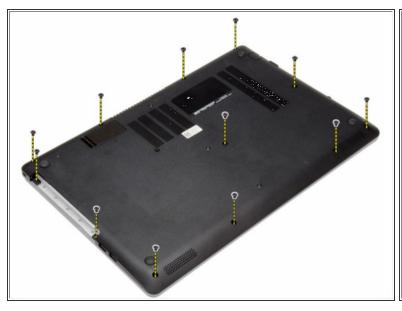



- Remove the screws that secure the base cover to the computer.
  - Pry the base cover along the edges to loosen it. Lift and remove the base cover from the computer.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.