

# **Dell Vostro 3559 Hard Drive Replacement**

Written By: Johnathan Hammond



## **INTRODUCTION**


In this guide, we will show you how to remove and replace the Hard Drive.



# **TOOLS:**

• Phillips #0 Screwdriver (1)

## Step 1 — Sliding the Latch

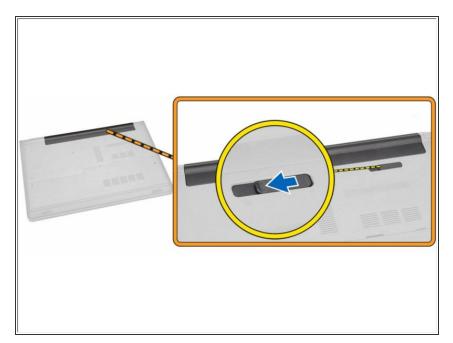


 Slide the release latch outwards to unlock the battery.

#### Step 2 — Remove the Battery




- Remove the battery from the computer.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.

## Step 3 — Remove the Screws

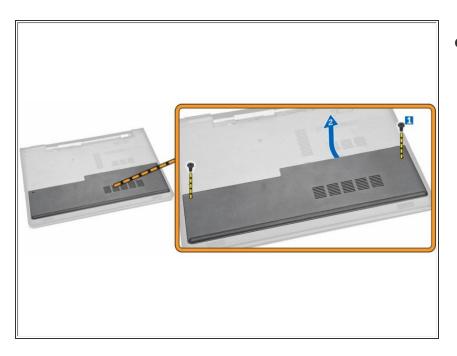


- Remove the screws that secure the access panel to the computer.
  - Lift the access panel partially at a 45-degree angle.

#### Step 4 — Remove the Access Panel

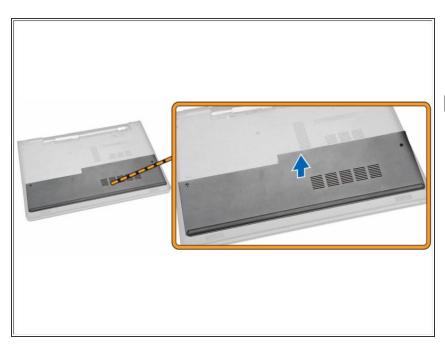


- Remove the access panel from the computer.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.

## **Step 5** — Removing the Hard Drive Cable

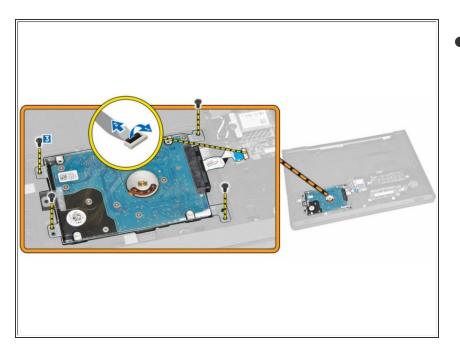


- Disconnect the hard drive cable from the system board and lift it up to remove it from the computer.
  - Remove the screws that secure the hard drive to the computer.

## Step 6

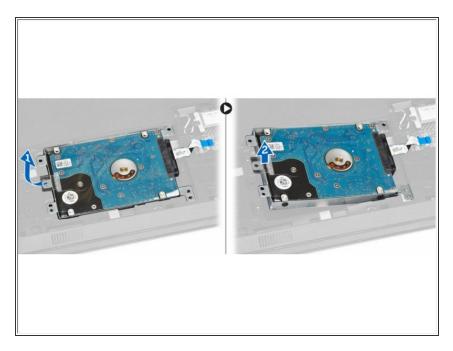

• Lift the hard drive to remove it from the computer [1,2].

## Step 7 — Remove the Screws

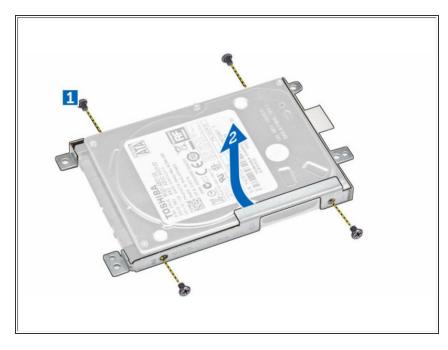

- Remove the screws that secure the hard drive to the bracket.
  - Lift the hard drive from the bracket.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.