




Dell Vostro 3558 Battery Replacement

How to replace the battery in a Dell Vostro 3558.


Written By: Johnathan Hammond

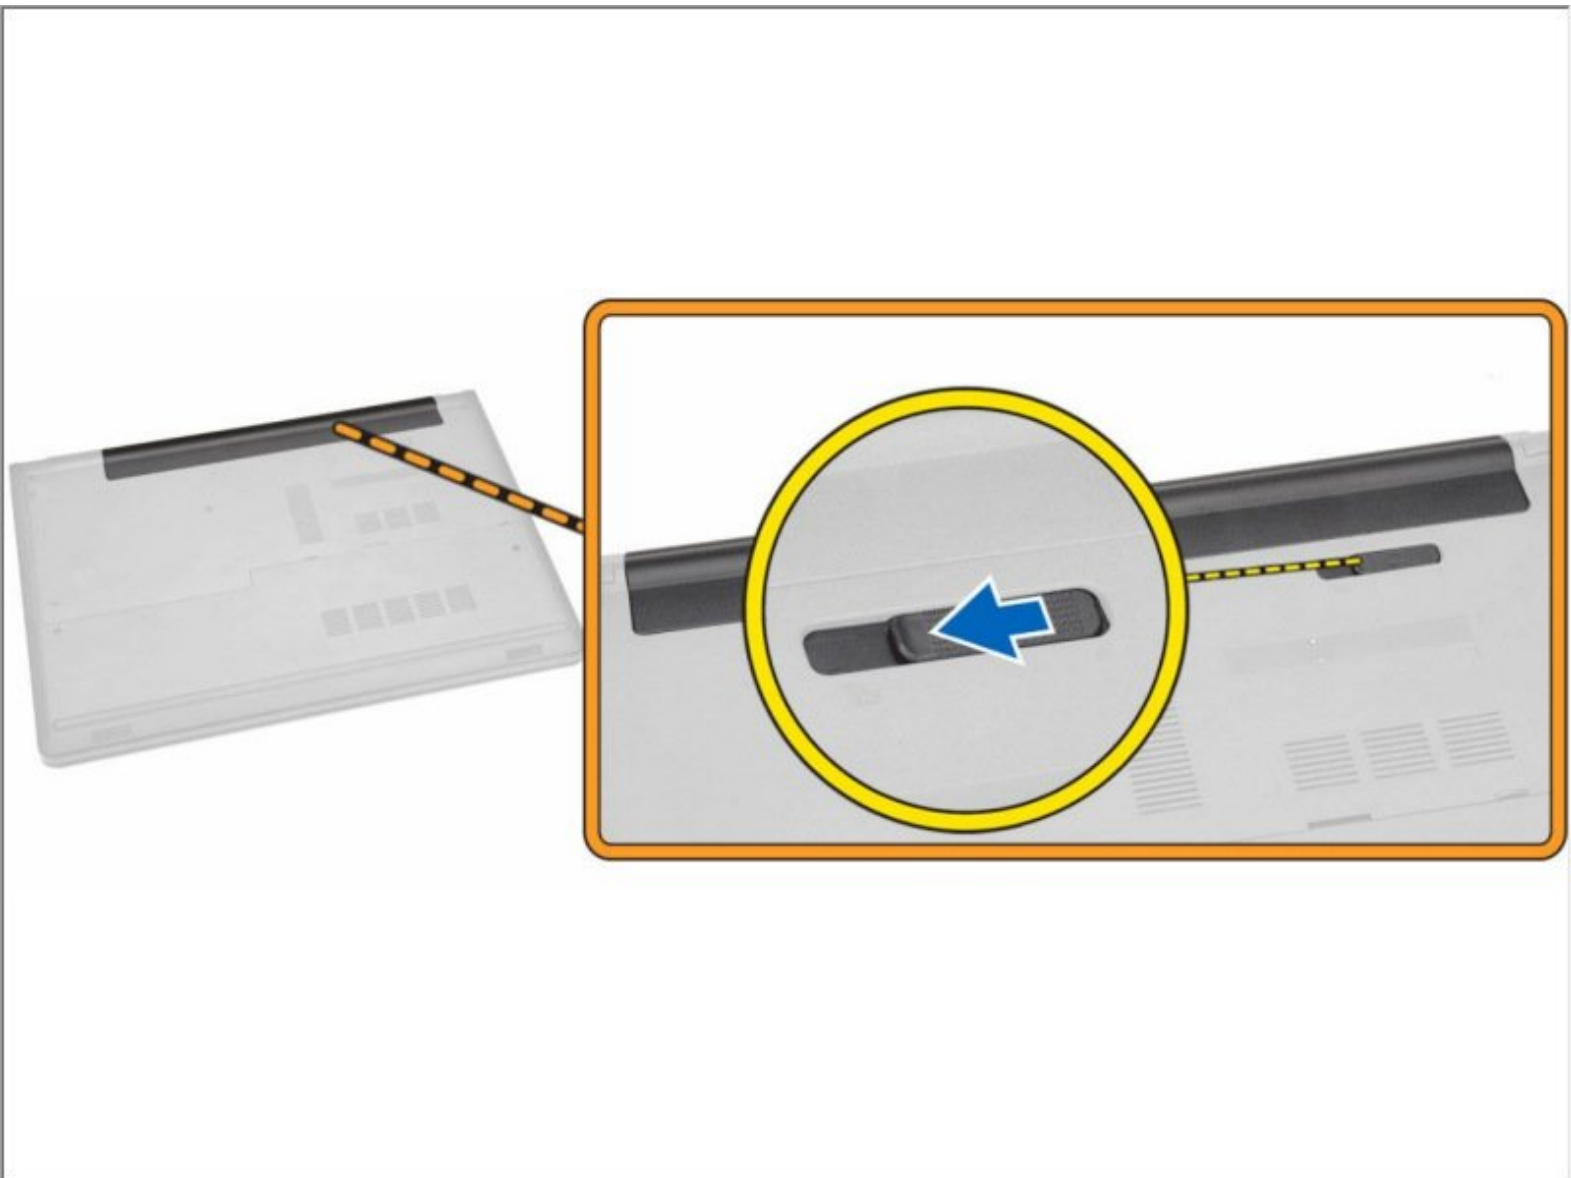

INTRODUCTION

In this guide, we will show you how to remove and replace the Battery.

Step 1 — Unlocking the Battery

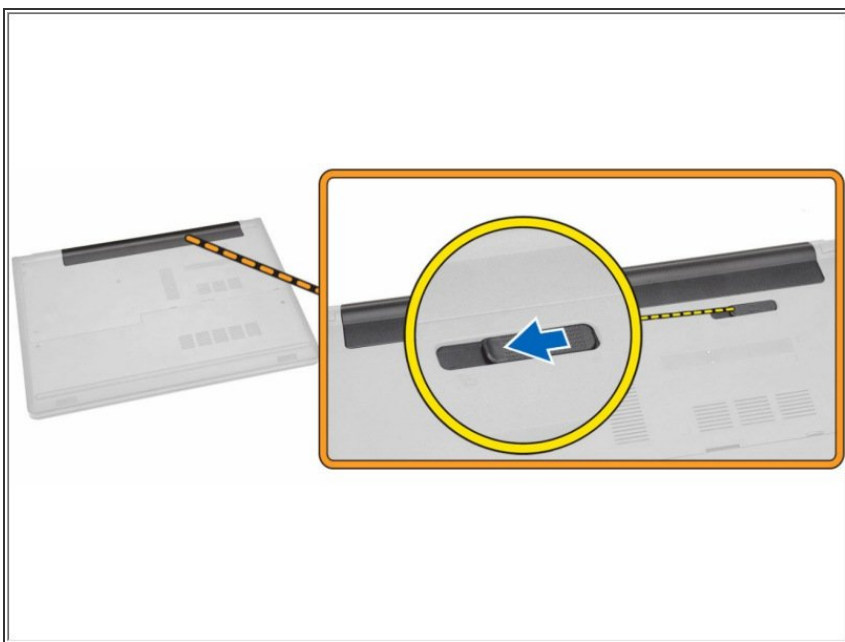

- Slide the release latch outwards to unlock the battery.

Step 2 — Removing the Battery



- Remove the battery from the computer.
- ★ If this is all you are doing Follow Step In Reverse if not Go to Next Step.