



LG A275 Vibrator Replacement

How to replace the LG-A275 vibrator.

Written By: Nathanael Knight



INTRODUCTION

In this guide, you will see how to take apart the LG-A275 in order to replace the phone's vibrator.



TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Turn the phone upside down so that the bottom of the back is facing you.

Step 2 — Remove cover




- Slide the back down towards you and remove the back cover. You should hear a slight click as the cover comes off.

Step 3




- Gently remove the battery from the device.


Step 4 — Vibrator

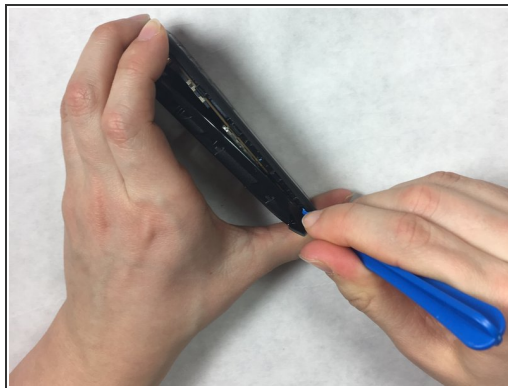

- Using the plastic opening tool, wedge it around the edge of the phone to release the front plastic piece from the phone.

 Be careful when using the plastic opening tool not to brute force the phone open, the plastics are fragile.

Step 5

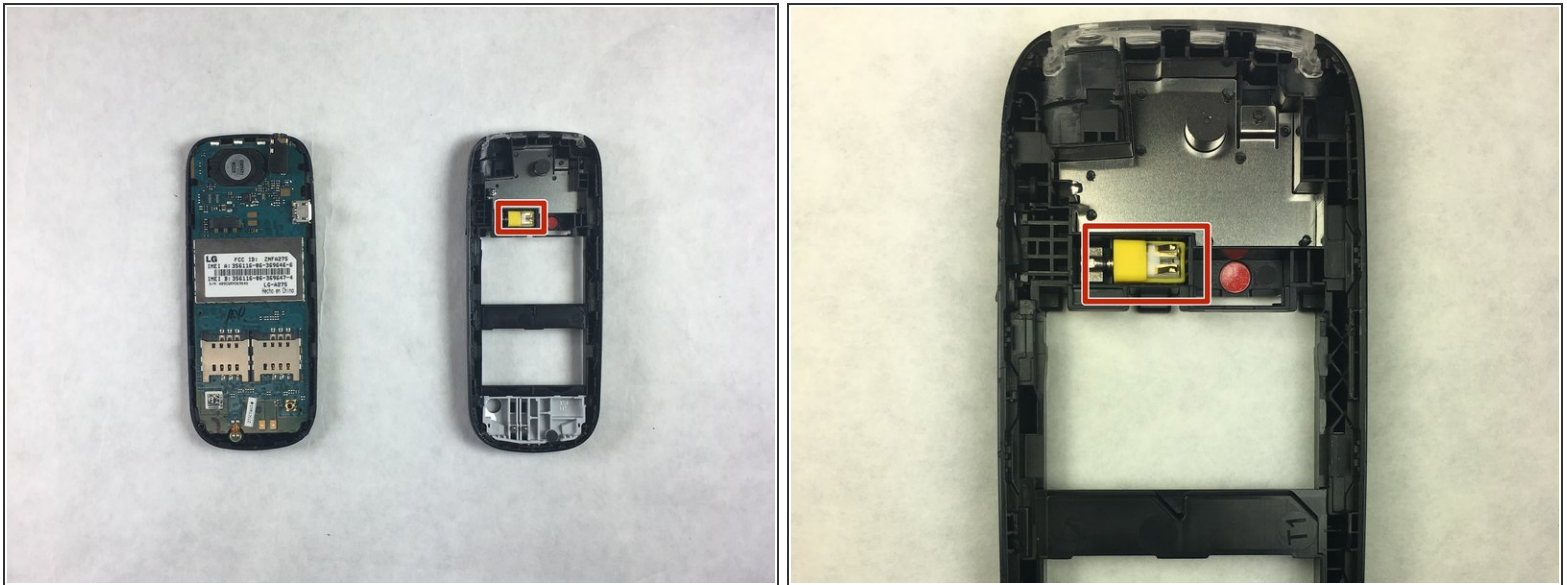

- After separating the two plastic halves of the phone, take the plastic that does not have the motherboard attached to it. The plastic has a small yellow component with a lob-sided magnet within it. This is the vibrator of the phone, pull this piece out with your hand. This piece is free floating and will simply drop out.

To reassemble your device, follow these instructions in reverse order after placing in the new vibrator.