



Dell Latitude E4310 Battery Replacement

Use this guide to replace a battery that is dead or not holding its charge on a Dell Latitude E4310 Laptop.

Written By: Brice Brosig



INTRODUCTION


Use this guide to replace a battery that is dead or not holding its charge on a Dell Latitude E4310 Laptop.

Step 1 — Battery



- Power down the laptop and remove all power cords.

Step 2

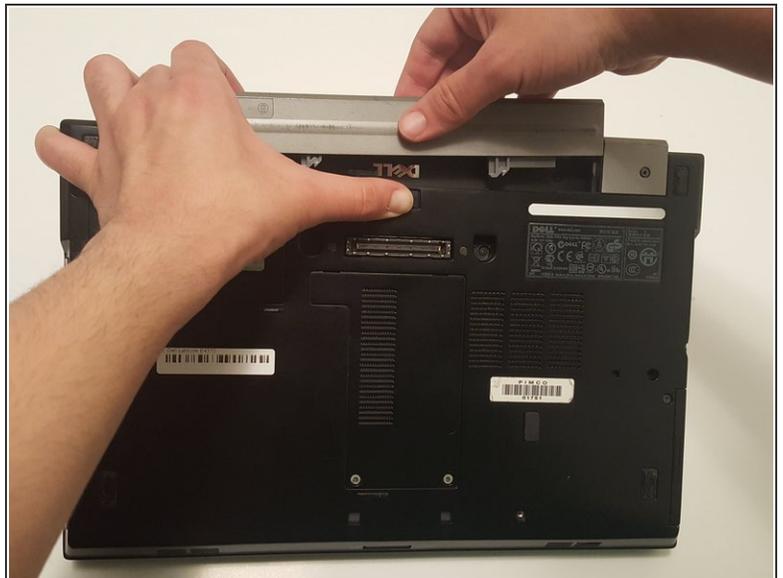

- Push in the battery release button with your thumb.
- Pull up on the battery to remove.

To reassemble your device, follow these instructions in reverse order.